



ASSEMBLY INSTRUCTIONS

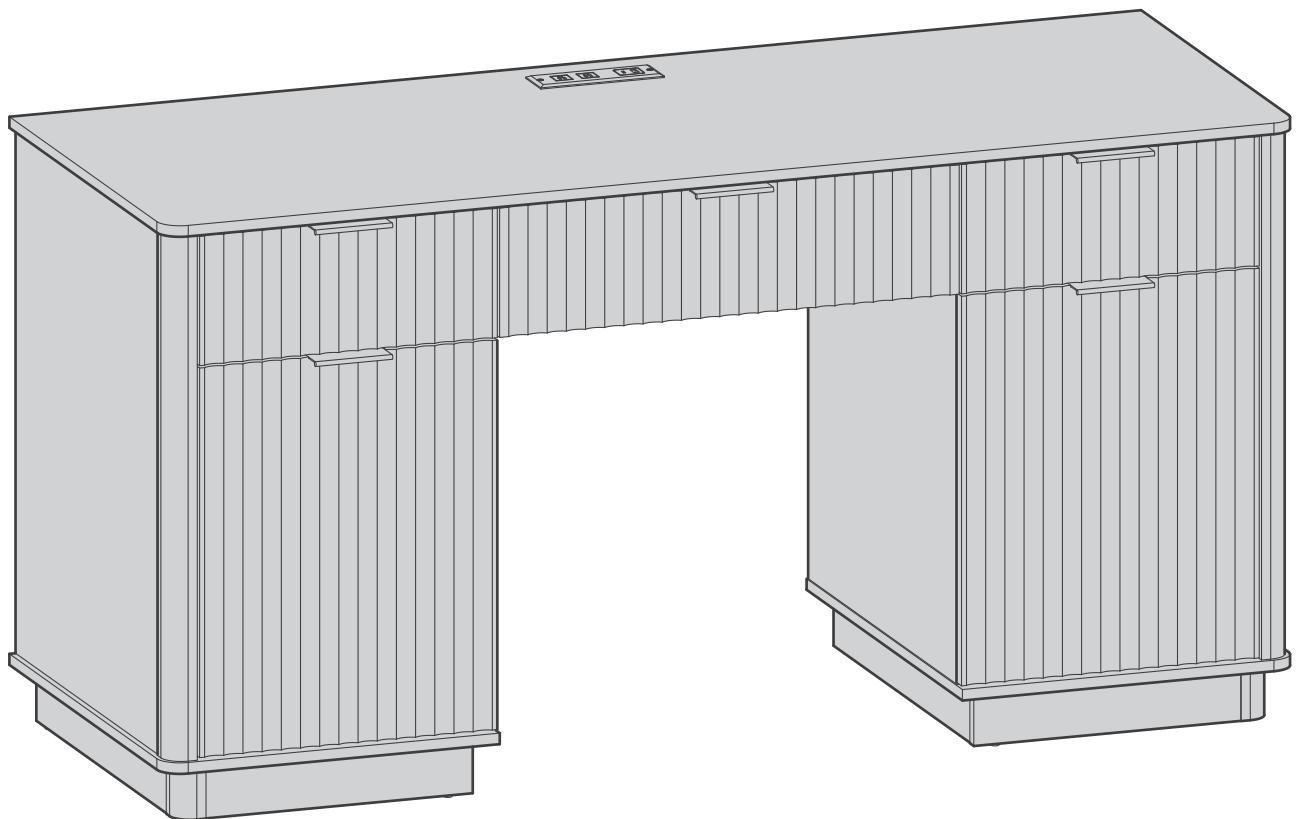

For assembly assistance,
✉ support@yfs.life 🌐 yfs.life/wcd0001-c1

▶ Scan QR code for
installation video



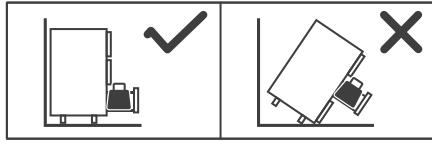

WARNING

Keep away from fire.

This product is only for indoor use.

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, desks, or shelves.

IMPORTANT

- Before you begin: Lay out all parts on a clean surface to check if the tags and numbers are correct.
- Don't screw tightly before all the screws are put into the corresponding holes.
- Please use the screws correctly. Otherwise, you might damage the tabletop.


POWER STRIP SAFETY WARNING

- Do not overload the power outlets. Ensure the total power consumption does not exceed 1500W of the outlets.
- Avoid using the desk in humid environments to prevent electric shock or short circuits.
- Regularly inspect the power cords and outlets. If any damage is found (e.g., cracks, looseness, or burn marks), stop using the product immediately and contact a professional for repair or replacement.
- Do not unplug an electrical appliance by pulling its flexible power cord. Otherwise, it may damage the wire connection and cause danger.
- Do not spill food or liquids on the outlets.
- Place the desk where children cannot easily access the power outlets.
- Use childproof outlet covers to prevent accidental contact by children.
- Educate children not to climb on or pull the desk to avoid accidents.


Complete through collaboration.	Assemble on a clean, flat, and protective surface.	Phillips screwdriver or drill required (not provided).	Allow an assembly area at least twice the desktop size.




Page 6-26

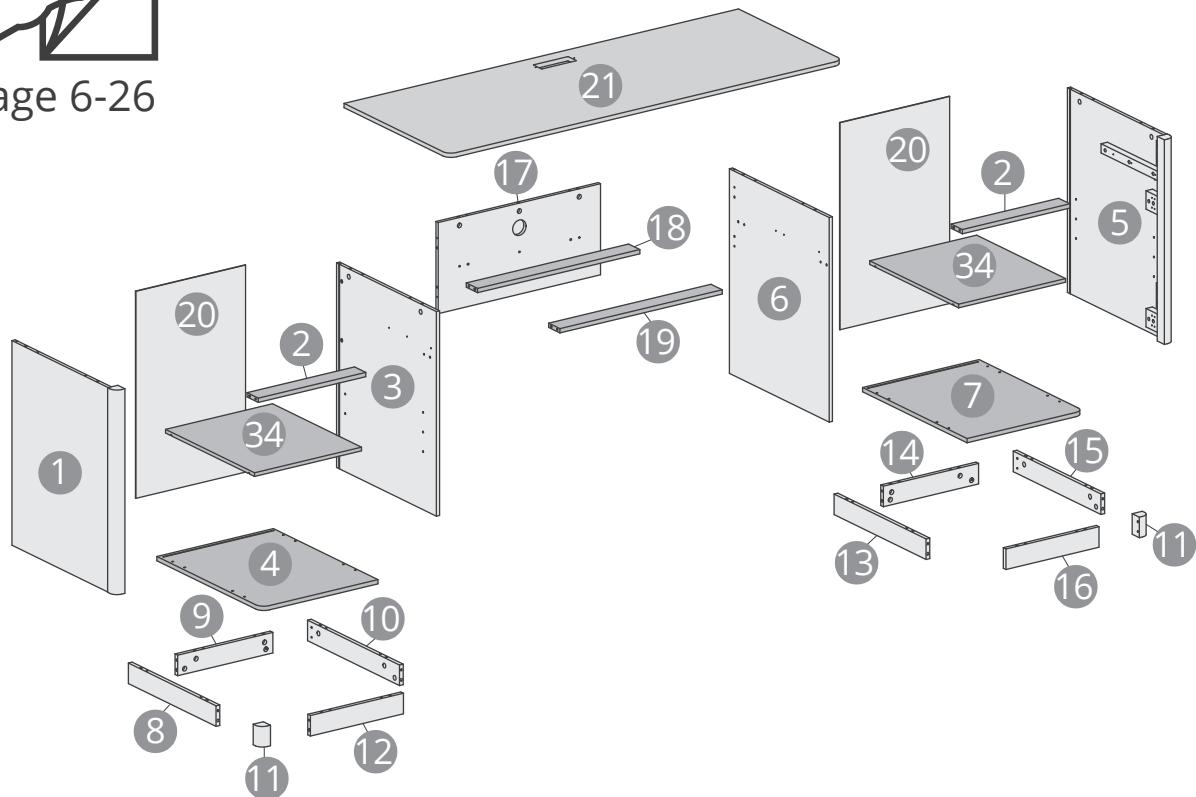


Page 27-38

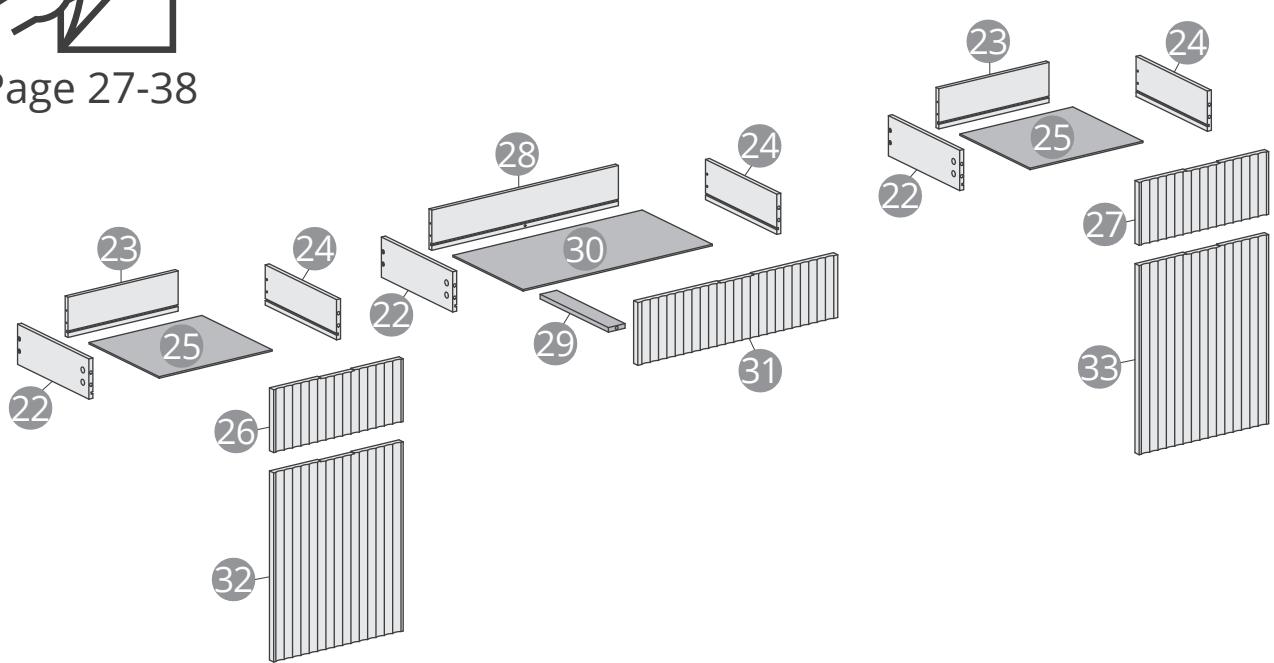

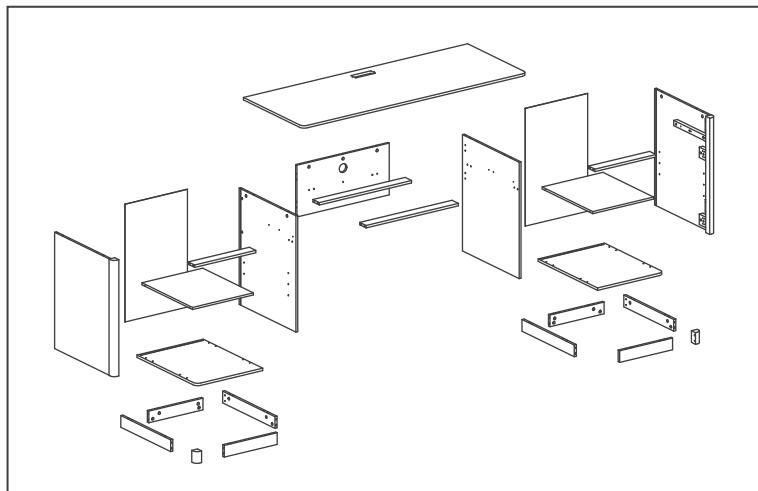


1 x1
Left Side Panel

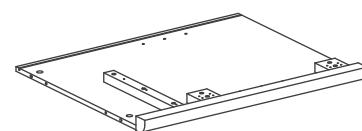


2 x2
Side Stretcher



 
3 x1
Left Middle Side Panel




4 x1
Left Bottom Panel

 


5 x1
Right Side Panel

 

6 x1
Right Middle Side Panel

 

7 x1
Right Bottom Panel

 

8 x1
Left Base Rail of
Left Base Frame



9 x1
Rear Base Rail of
Left Base Frame



10 x1
Right Base Rail of
Left Base Frame



11 x2
Base Frame Upright Post



12 x1
Front Base Rail of
Left Base Frame



13 x1
Left Base Rail of
Right Base Frame



14 x1
Rear Base Rail of
Right Base Frame



 
15 x1
Right Base Rail of
Right Base Frame




16 x1
Front Base Rail of
Right Base Frame



17 x1
Middle Stretcher Panel



18 x1
Middle Rear Stretcher

 


19 x1
Middle Front Stretcher




20 x2
Back Panel




21 x1
Desktop Panel

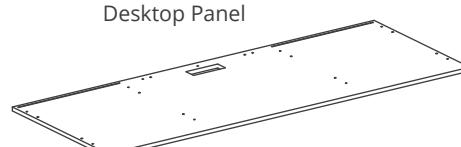

34 x2
Adjustable Shelf Panel

 

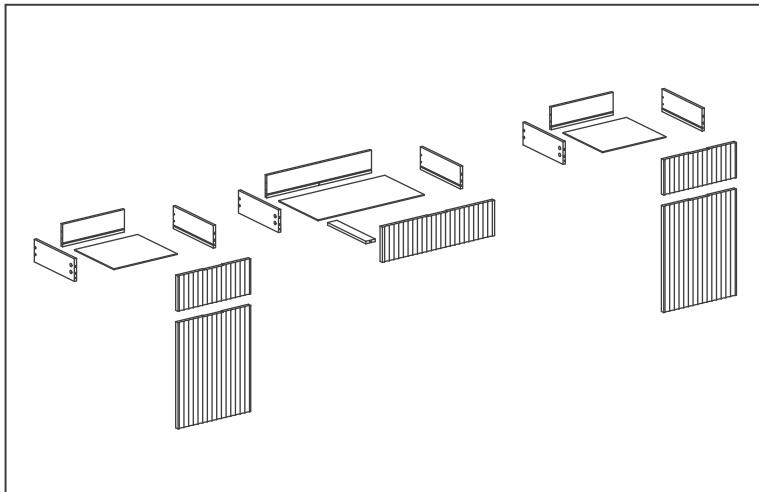

22x3

Left Drawer Side Panel



23x2

Drawer Back Panel 1



 
24x3

Right Drawer Side Panel



25x2

Small Drawer Bottom Panel




26x1

Left Drawer Front Panel



27x1

 Right Drawer Front Panel




28x1

Drawer Back Panel 2



29x1

 Drawer Bottom Stretcher




30x1

Large Drawer Bottom Panel




31x1

 Middle Drawer Front Panel




32x1

 Left Door Panel



33x1

 Right Door Panel




A x61

Cam Lock Screw
M6x34 mm



B x61

 Cam Lock Nut
Ø15x9 mm



C x58

Dowel
Ø6x30 mm



D x12

Countersunk Phillips
Screw
M4x50 mm



E x38

Countersunk Phillips
Screw
M3x12 mm



F x8

Shelf Support Pin



G x12

Back Panel Clip



 
H x34

Countersunk Phillips
Screw
M3.5x15 mm




I x4

Hinge




J x1

Power Outlet

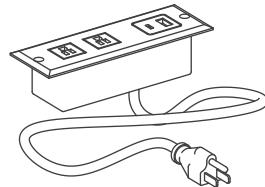

K x5

Handle

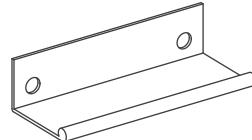

L x1

Phillips Screwdriver




M x13

Pan Head Phillips
Screw
M4x35 mm




CL x3

Left Cabinet Slide

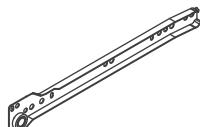


CR x3

Right Cabinet Slide

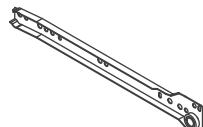


DL x3



Left Drawer Slide

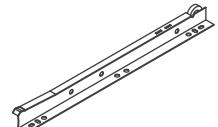


DR x3

Right Drawer Slide

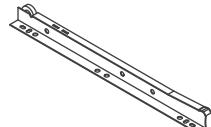


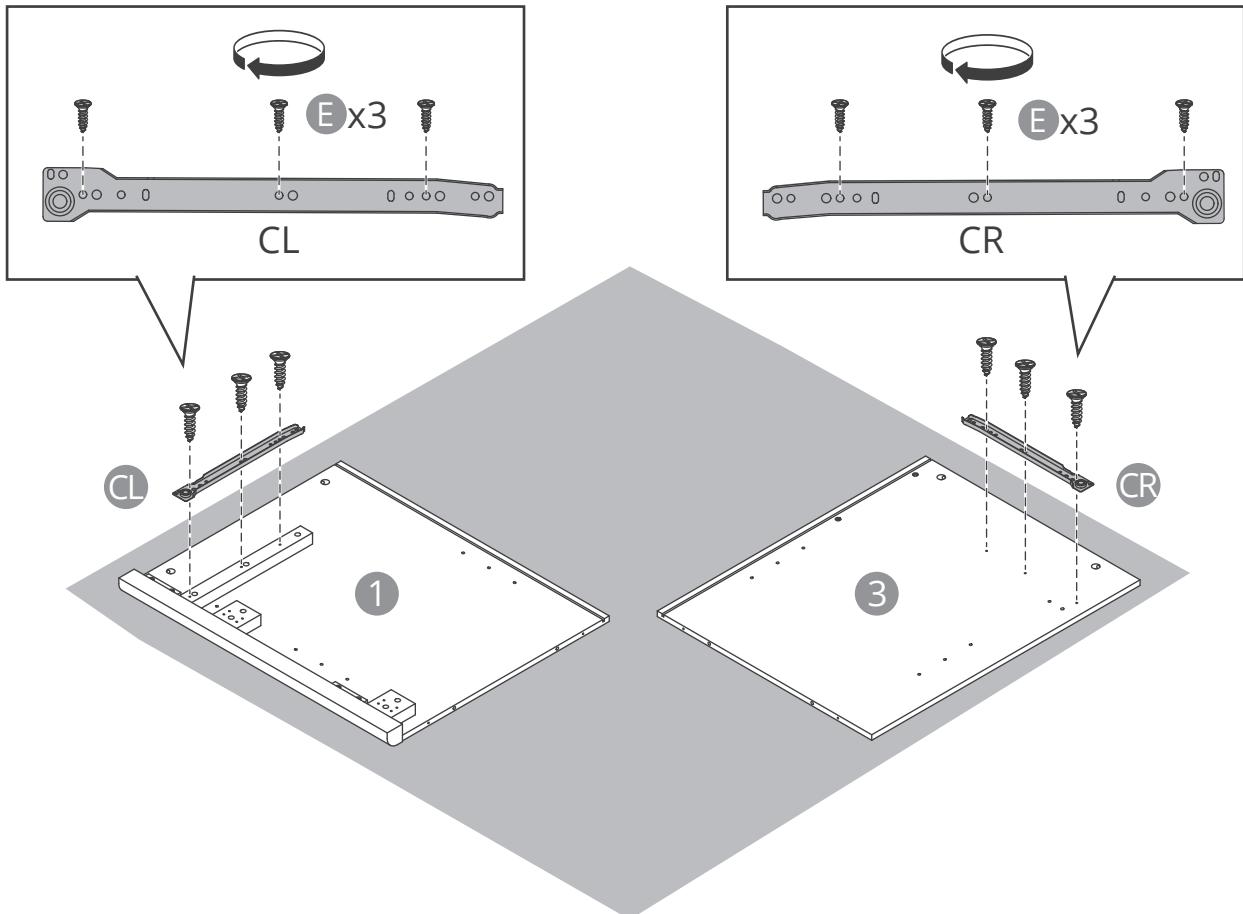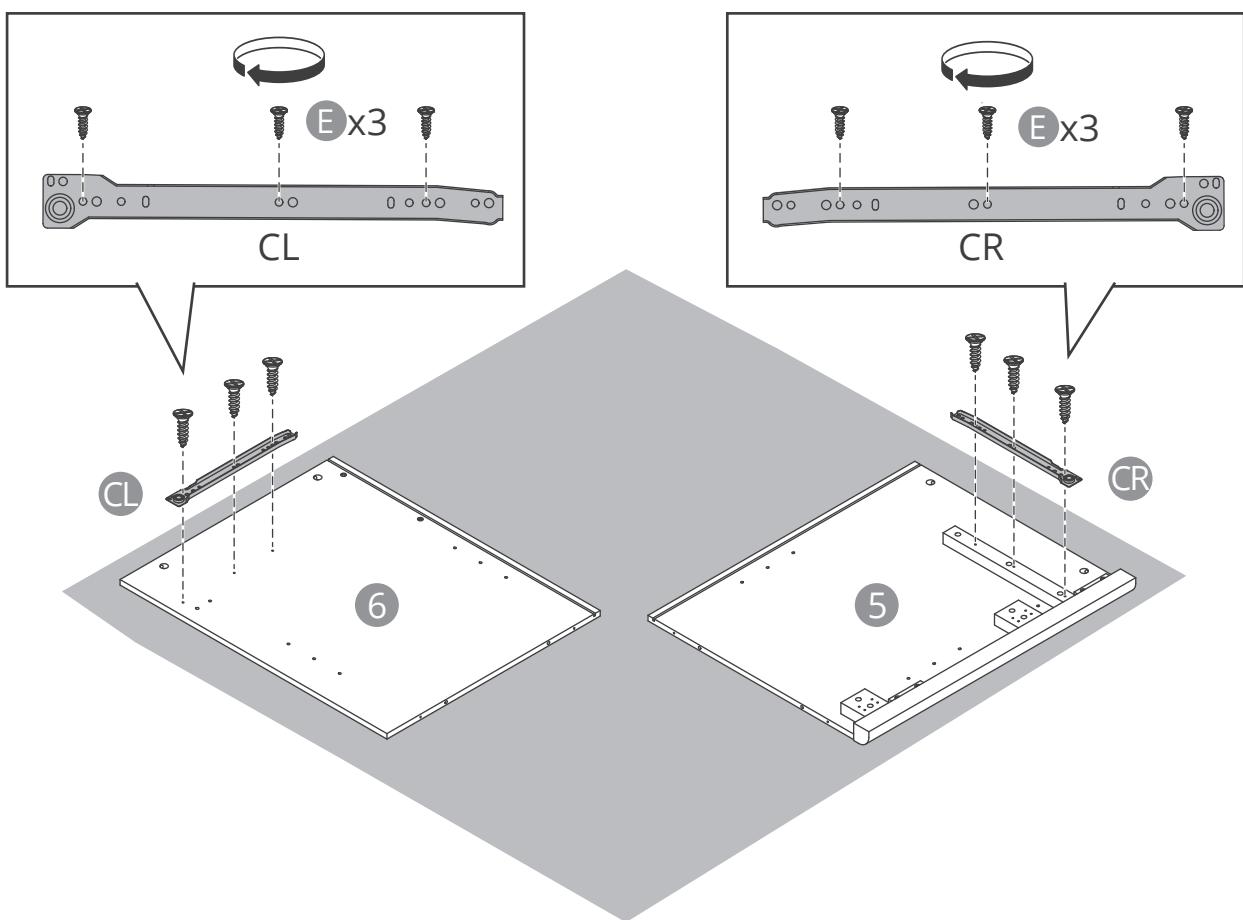1**2**


3

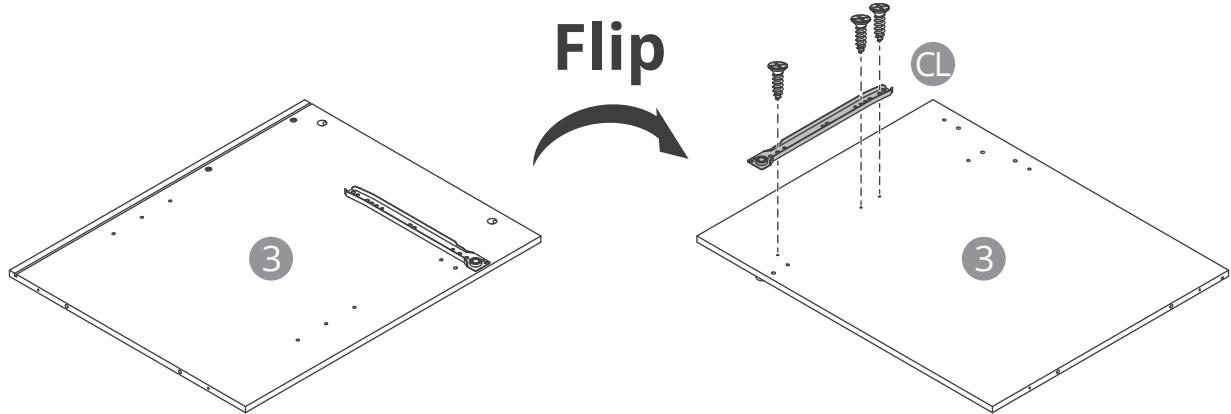


4

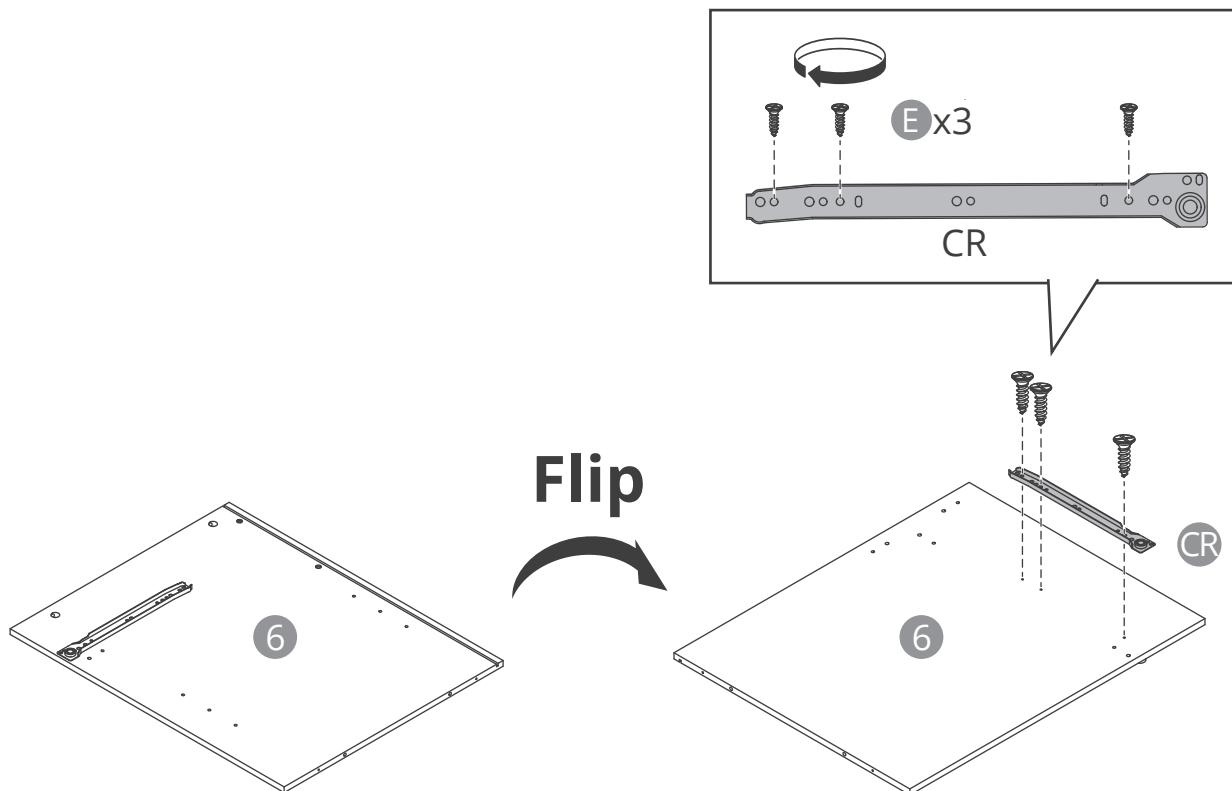



5

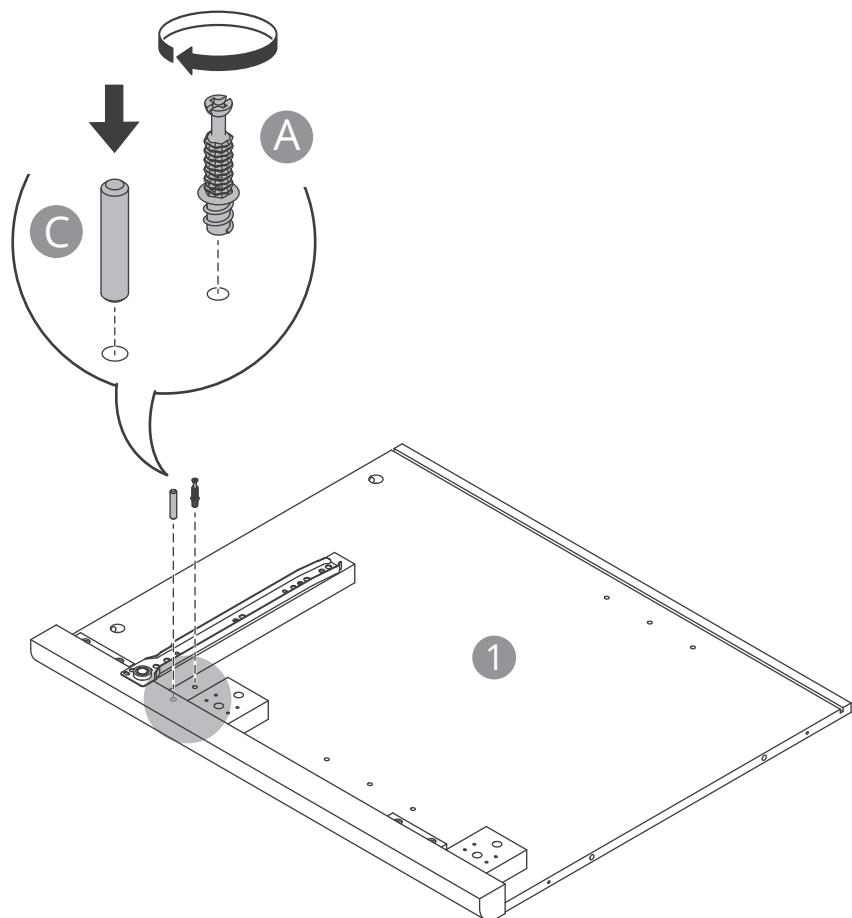


6

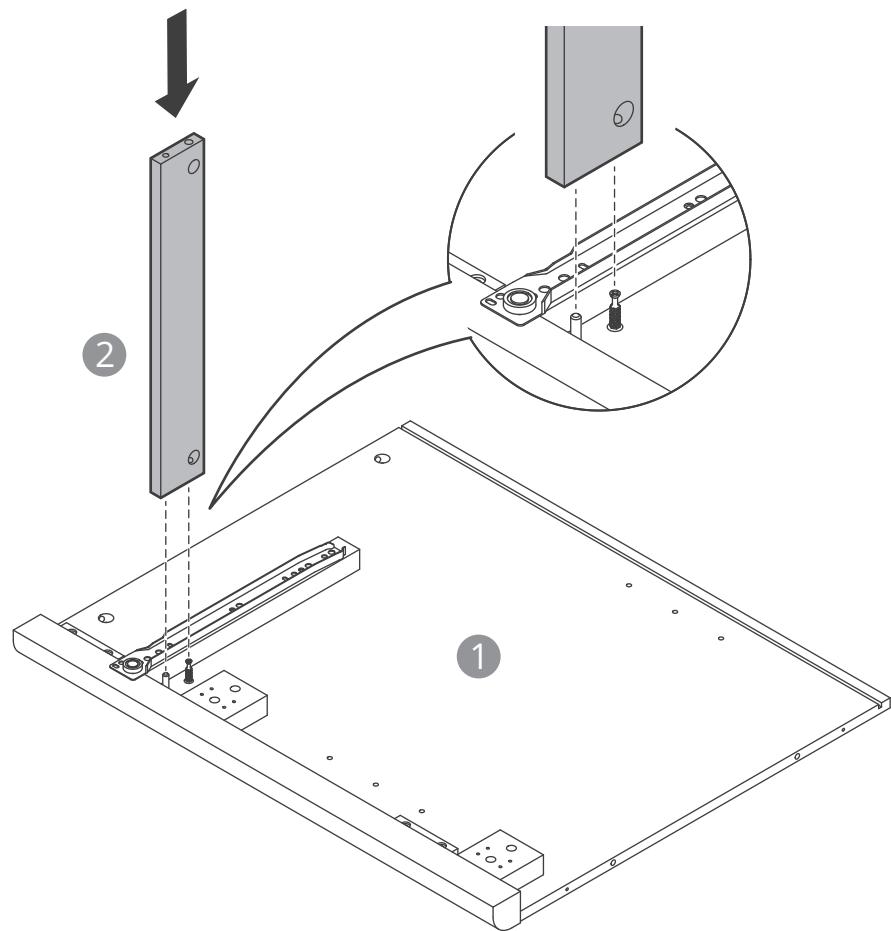


7

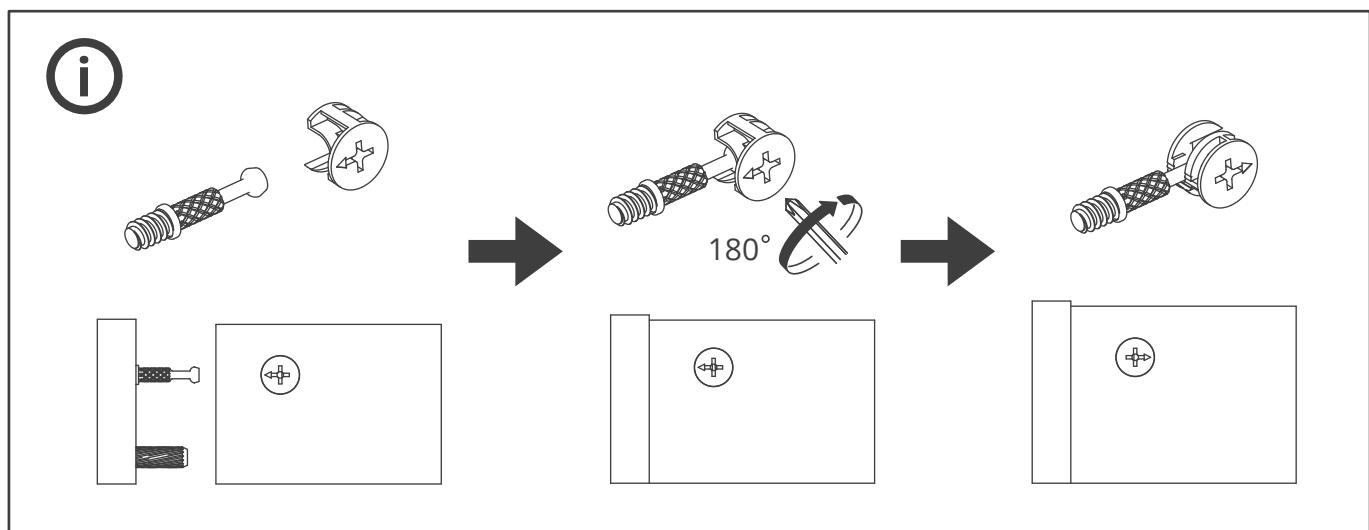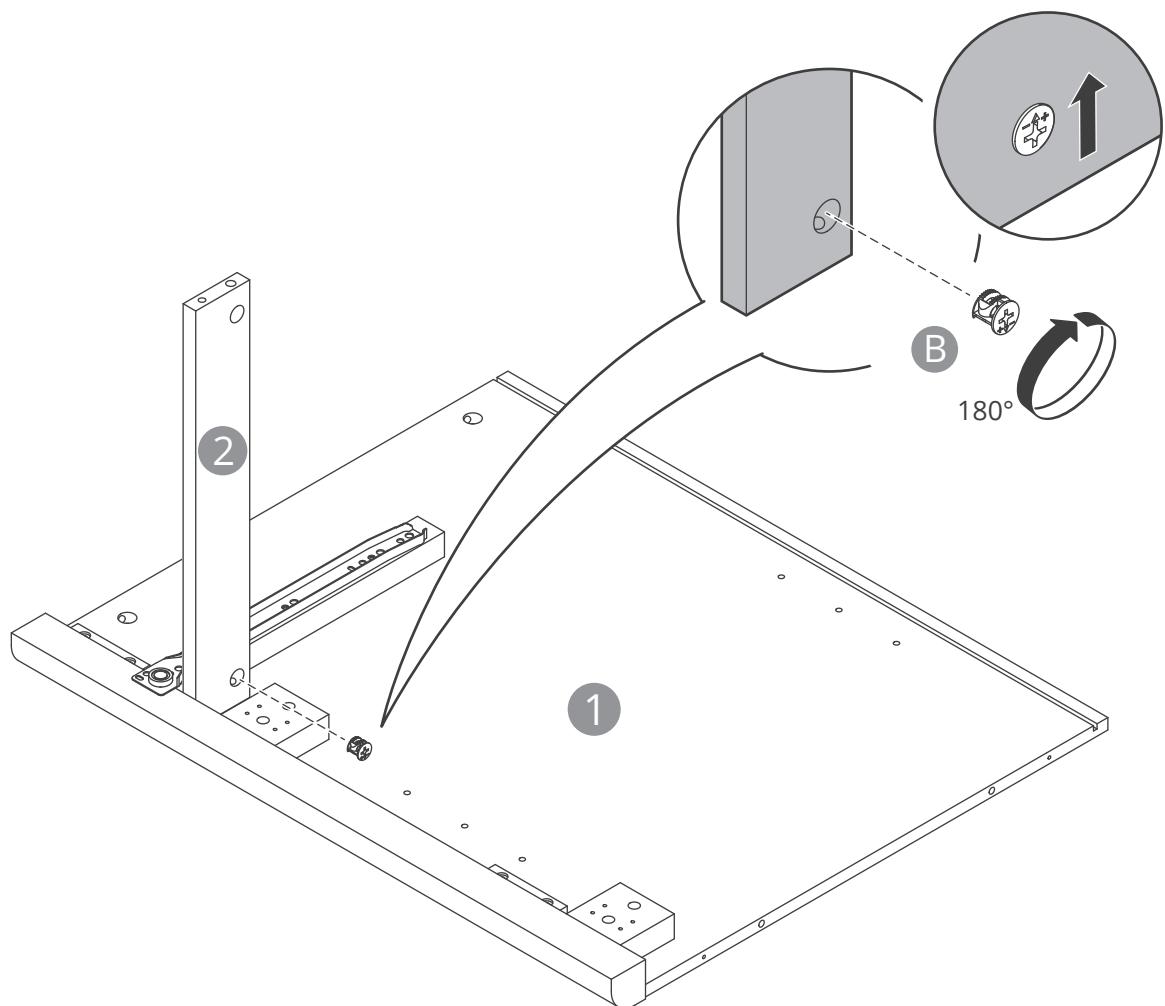


8

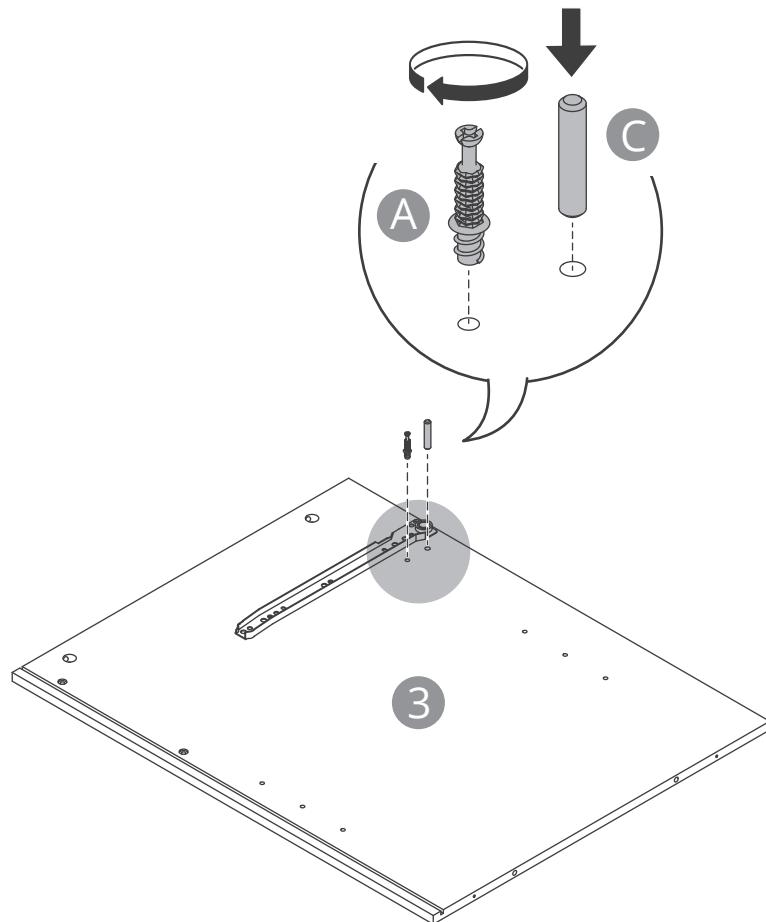


9


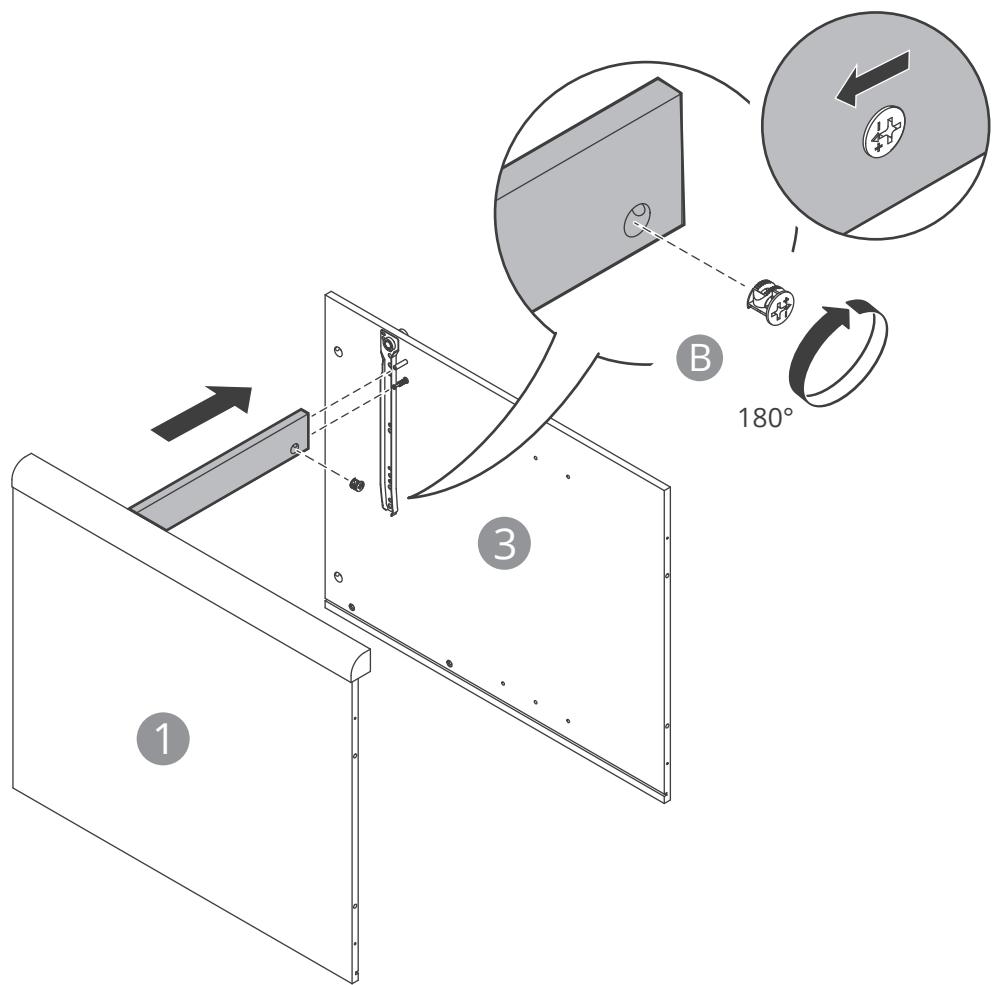


10

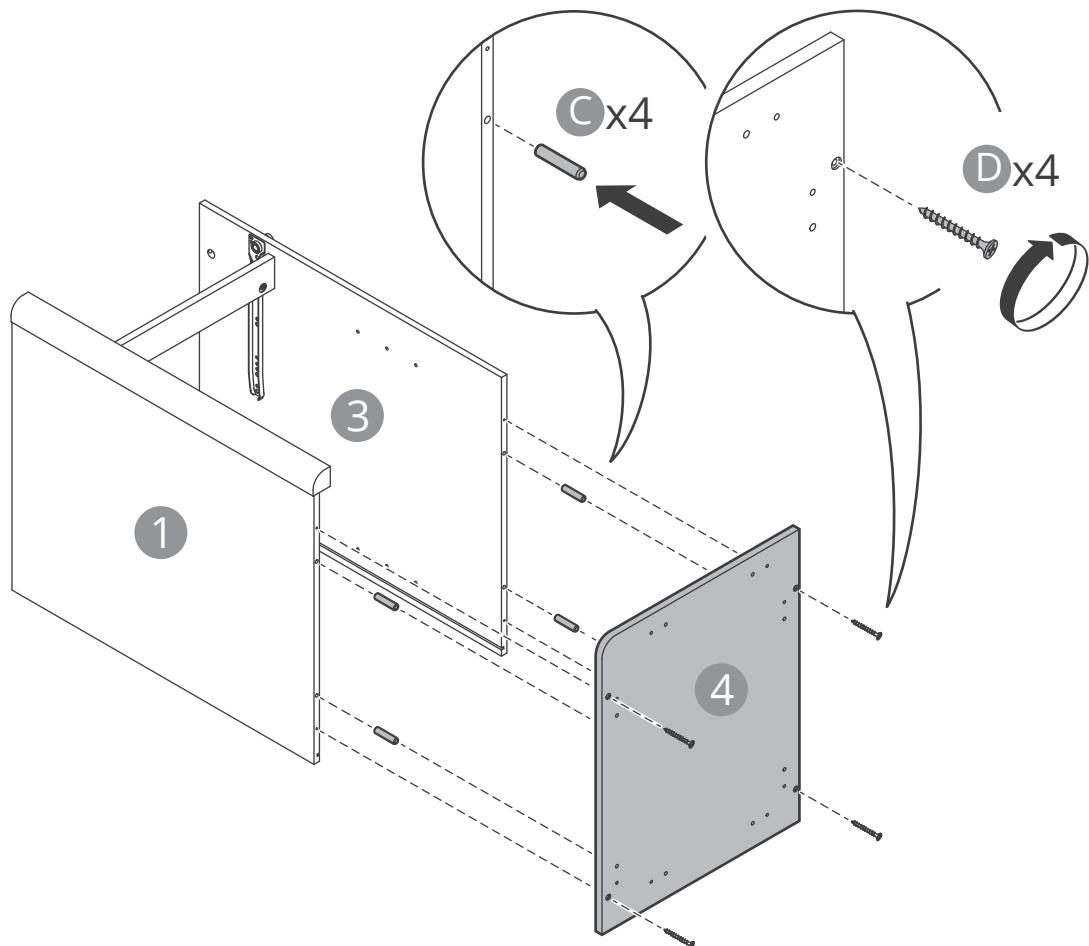


11

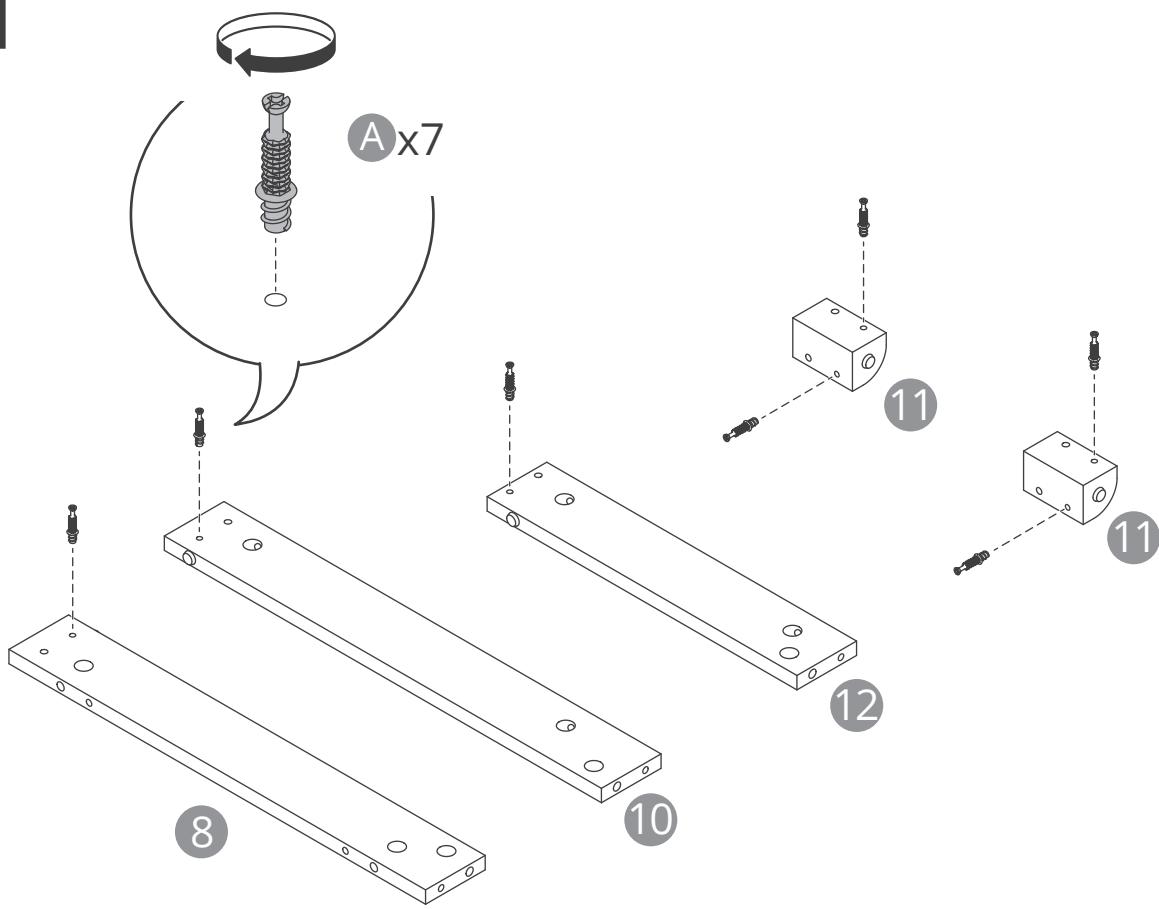


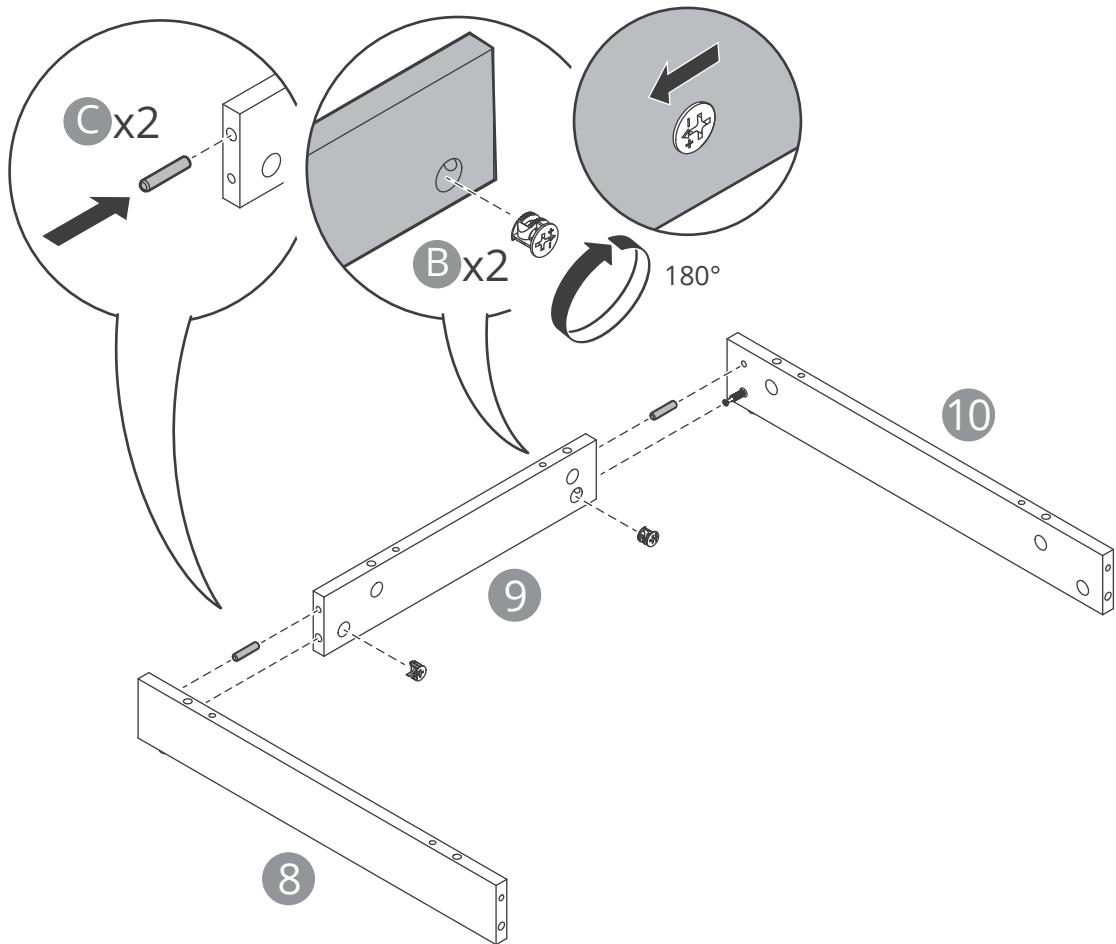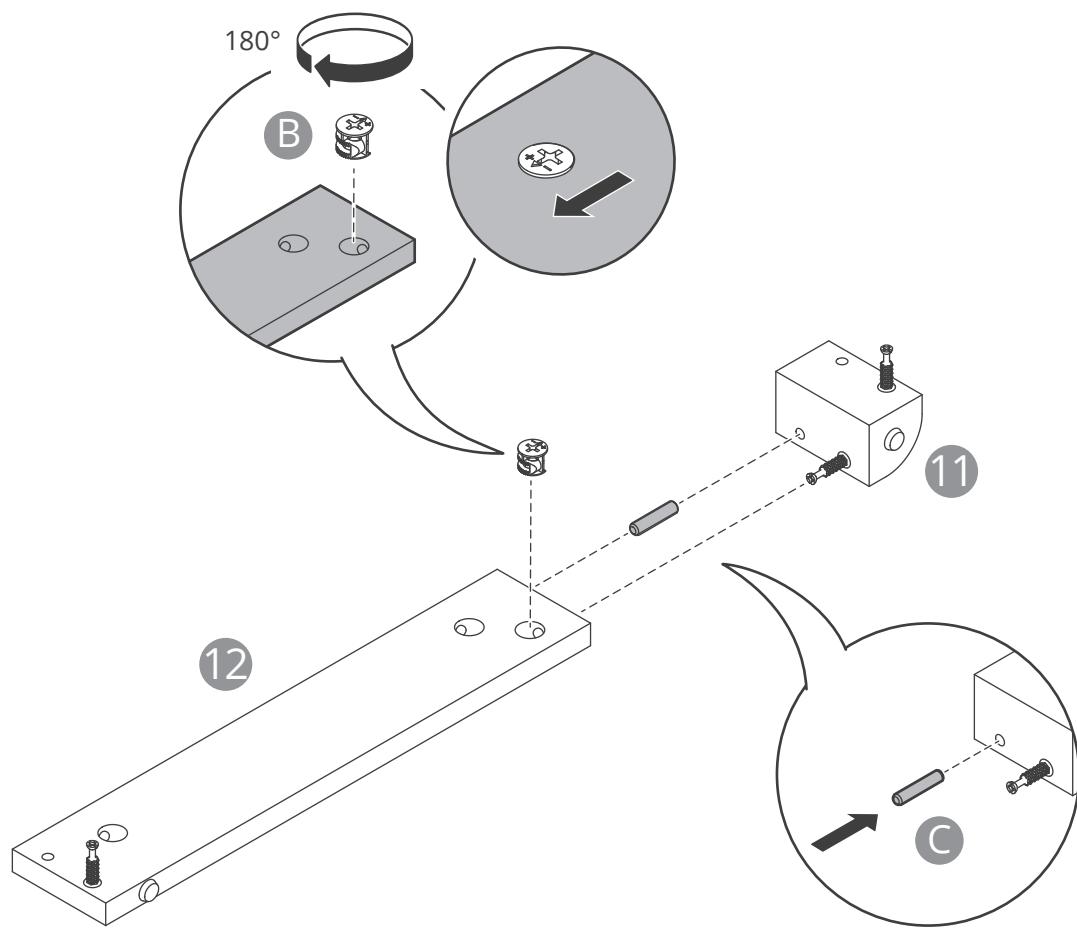12**13**


14

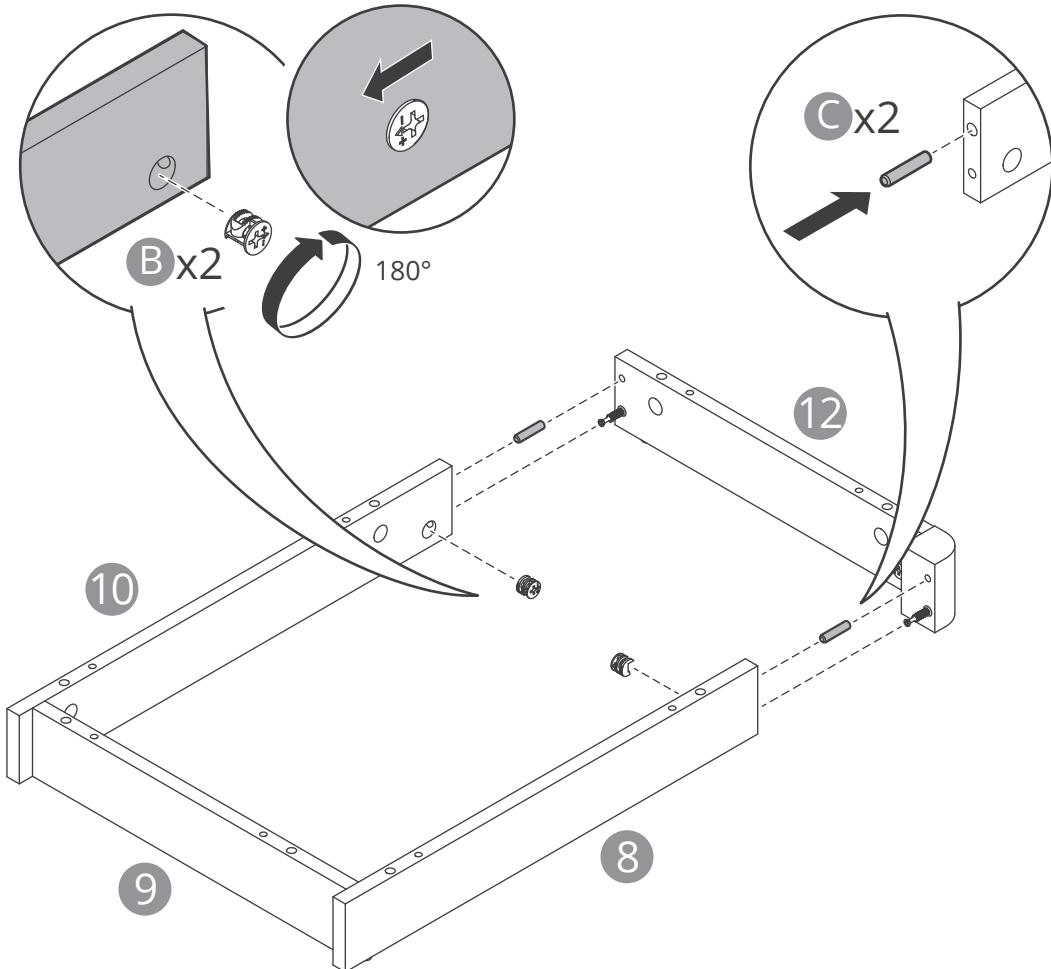


15

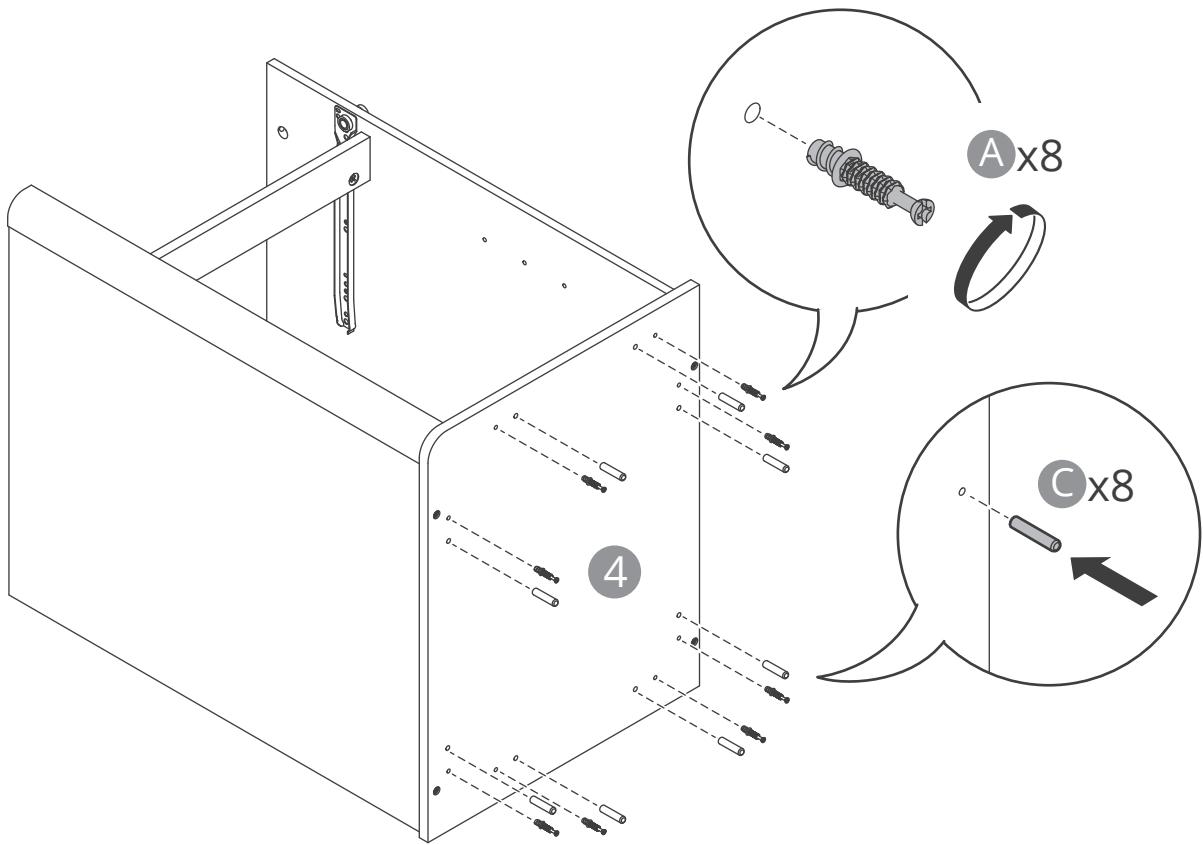


16

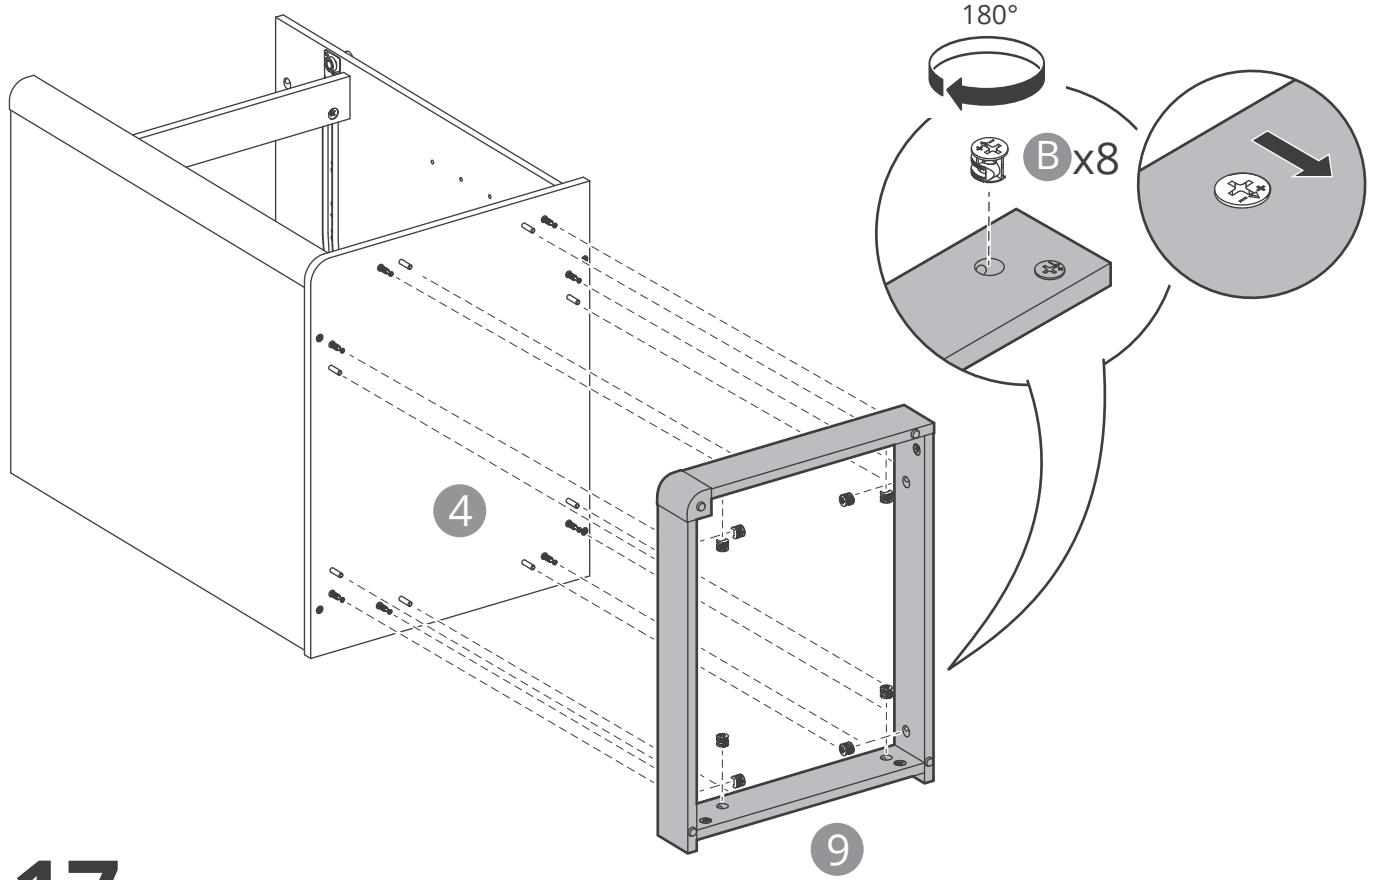


17

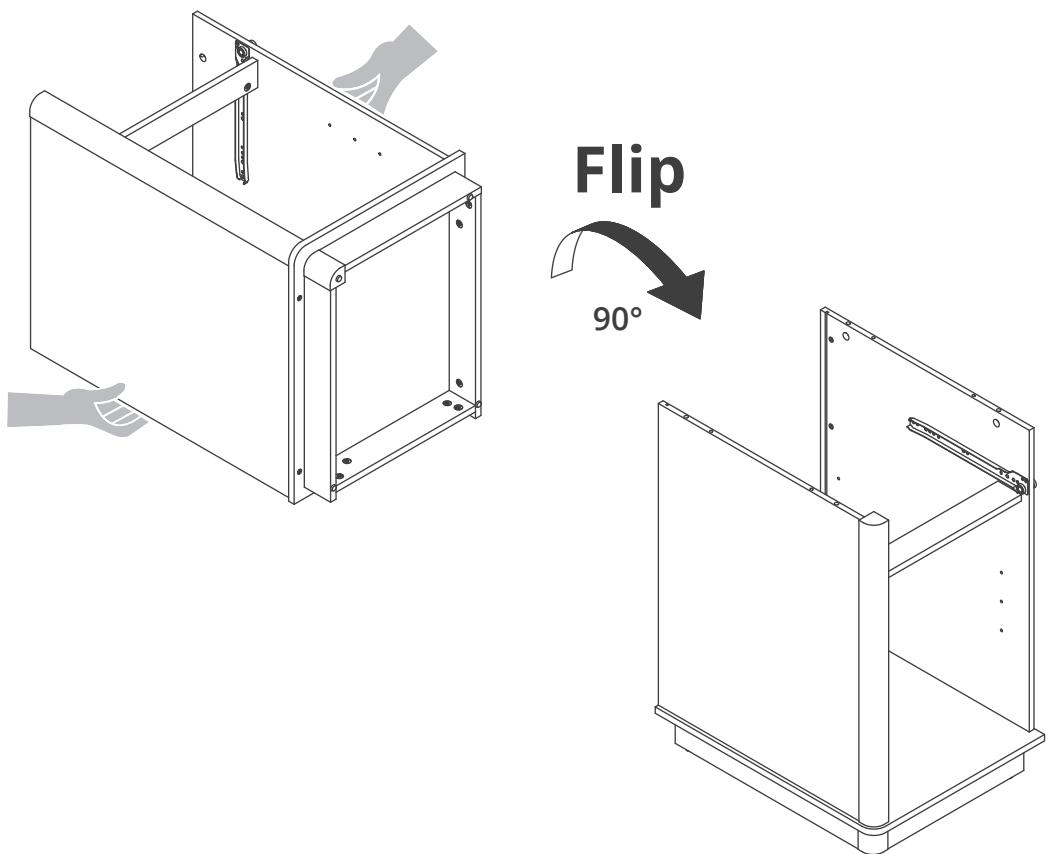


18

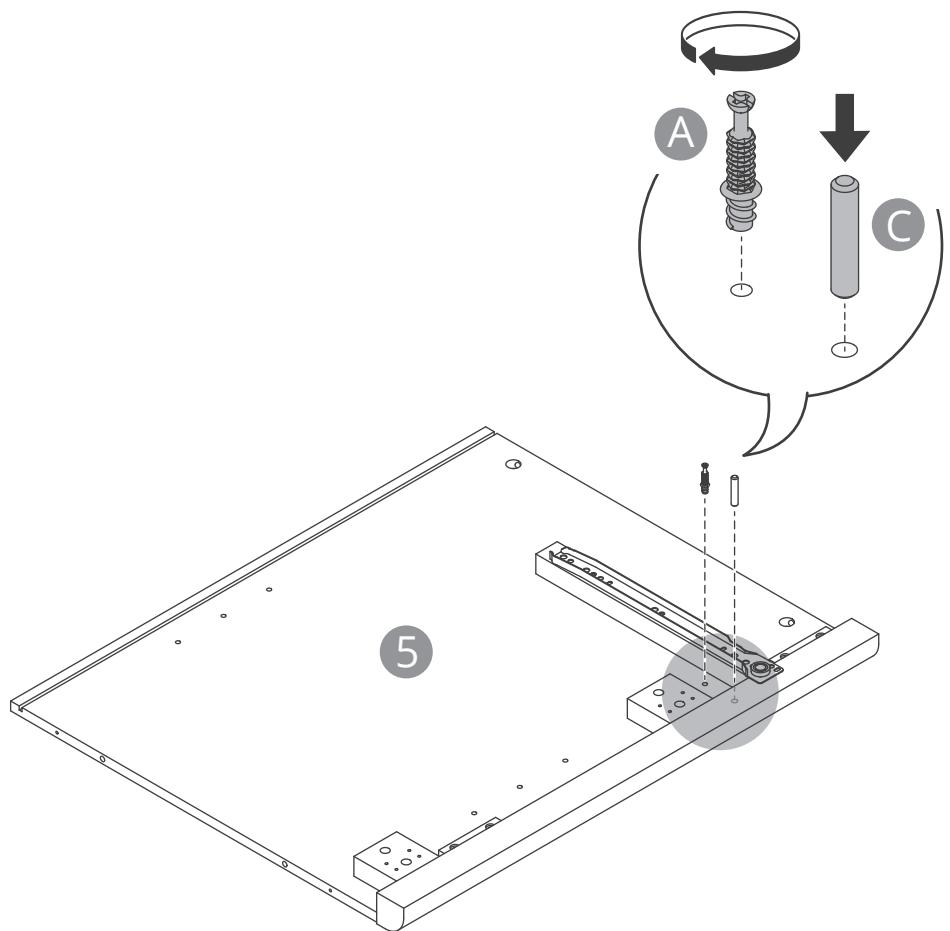


19

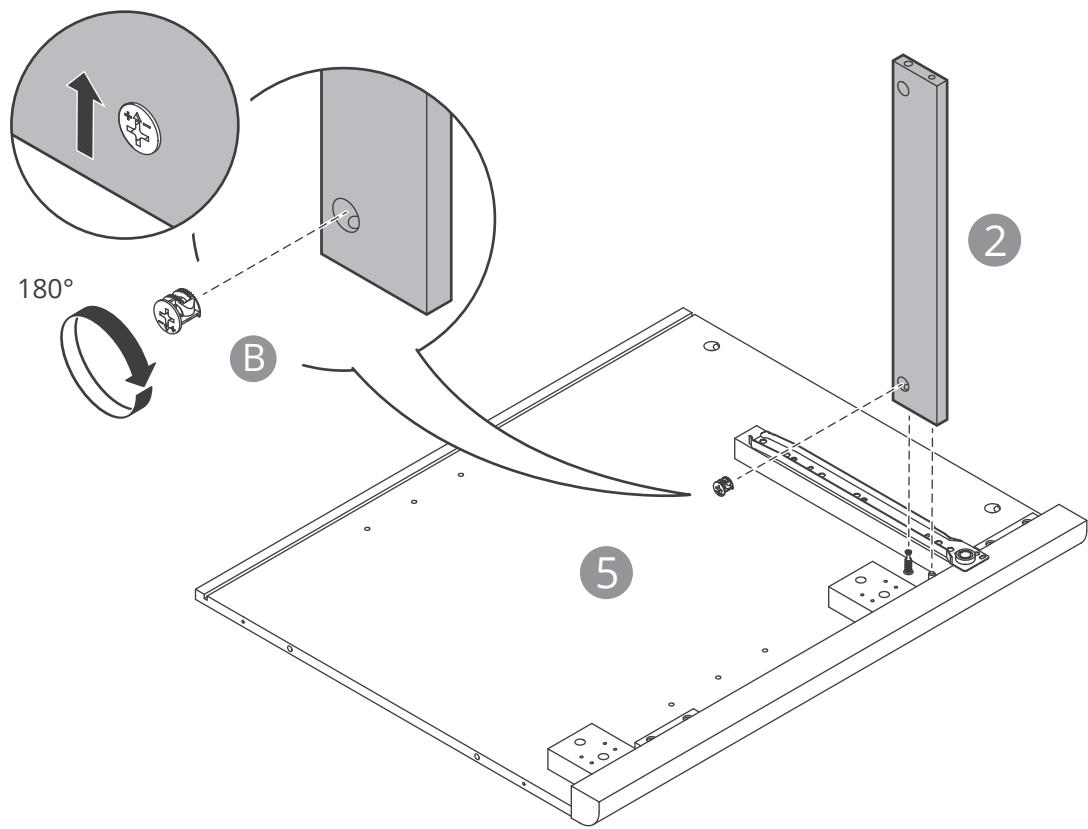


20

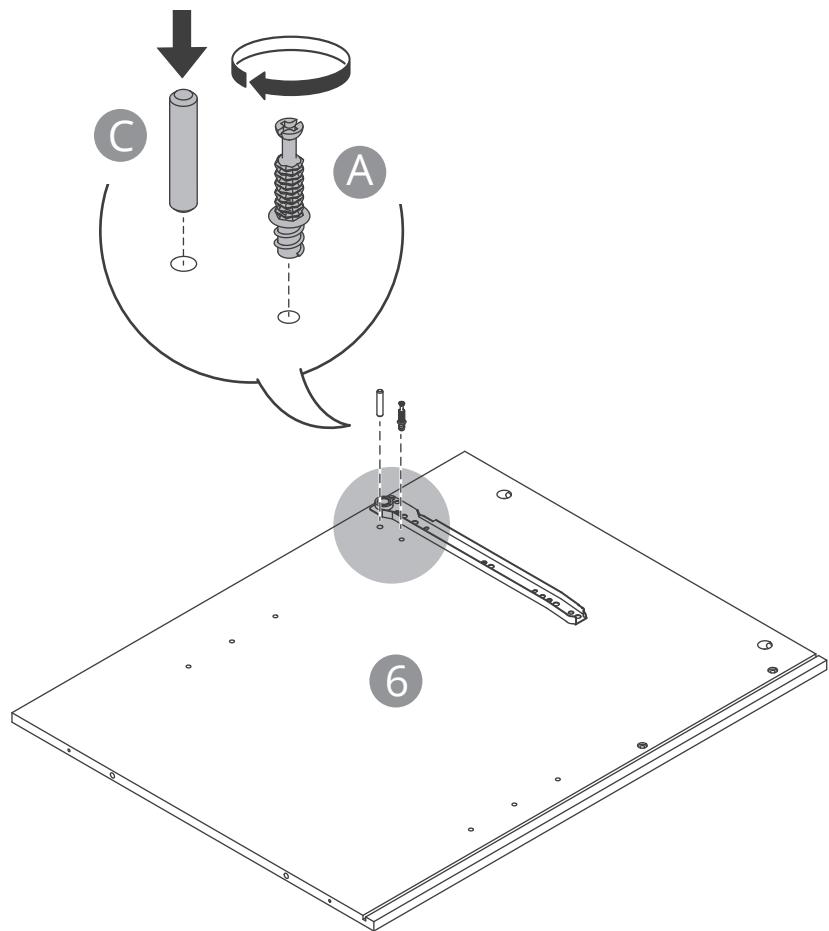


21

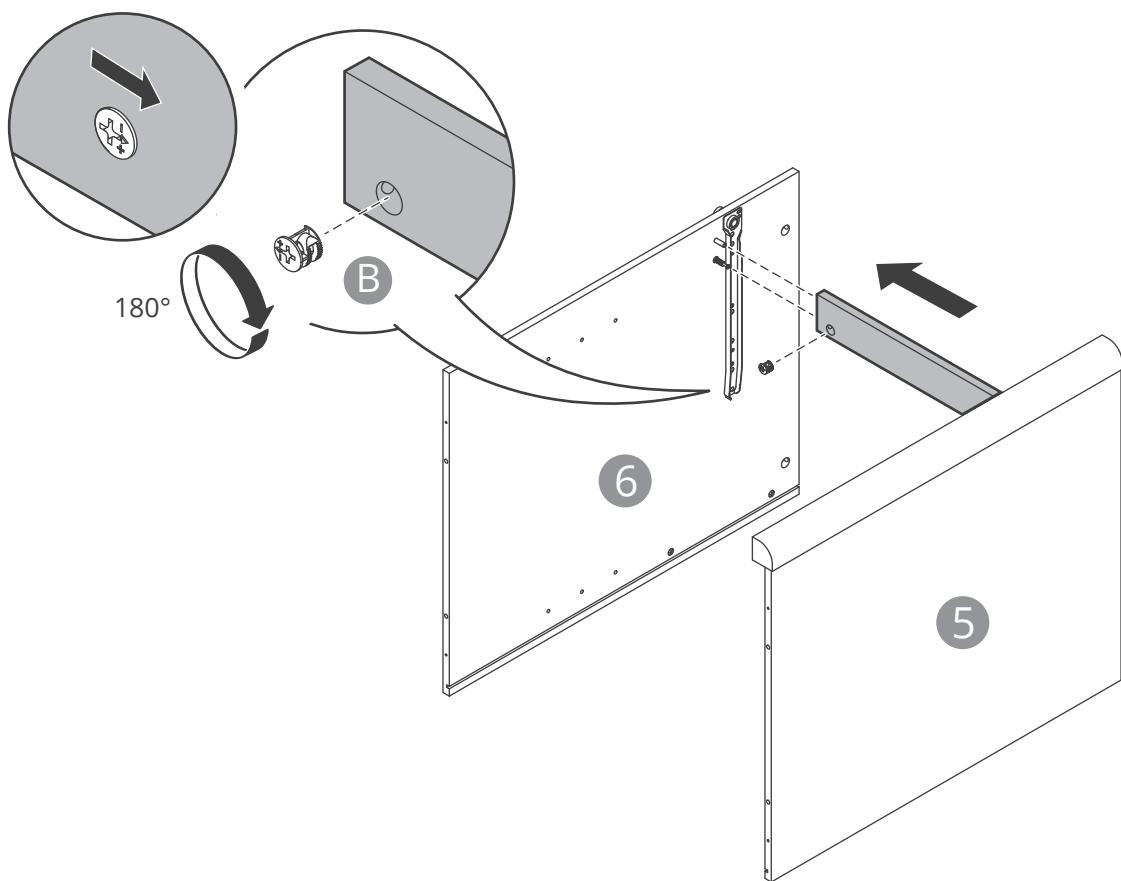


22

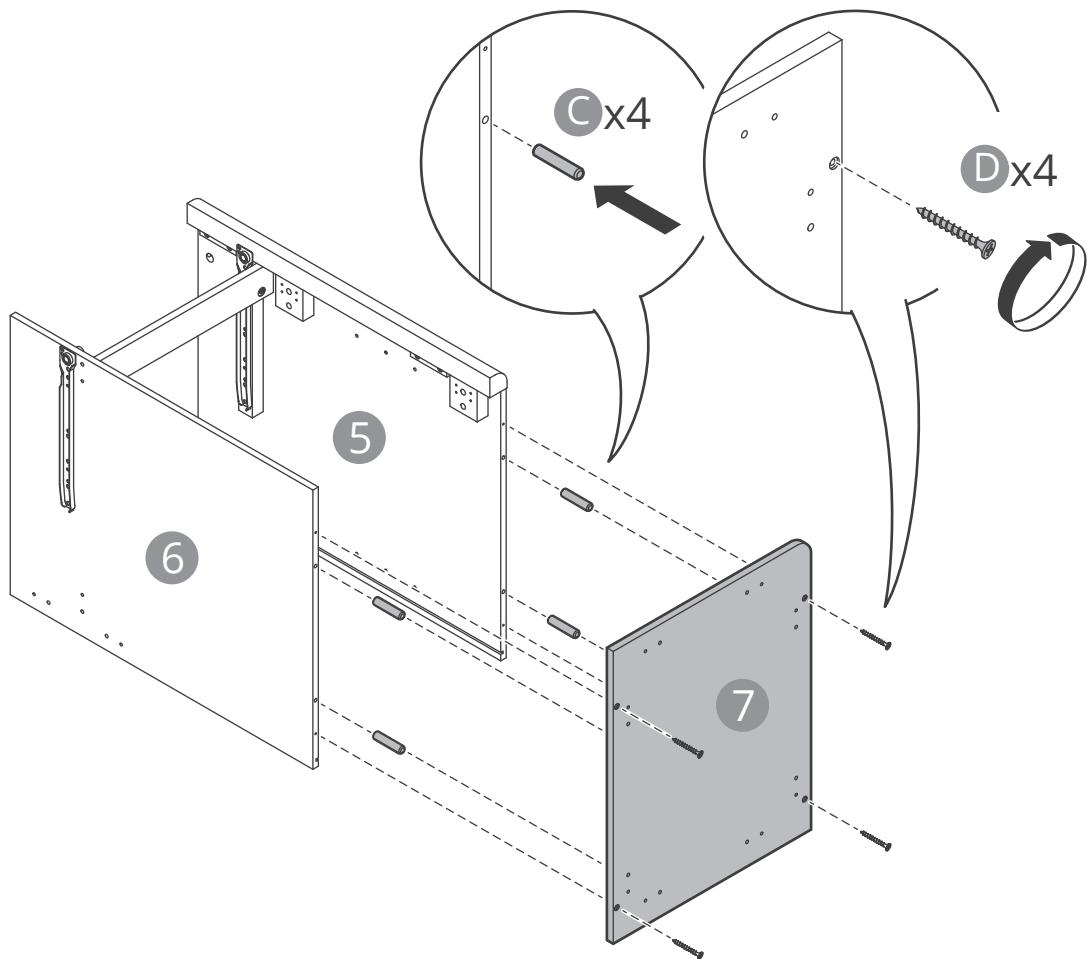


23

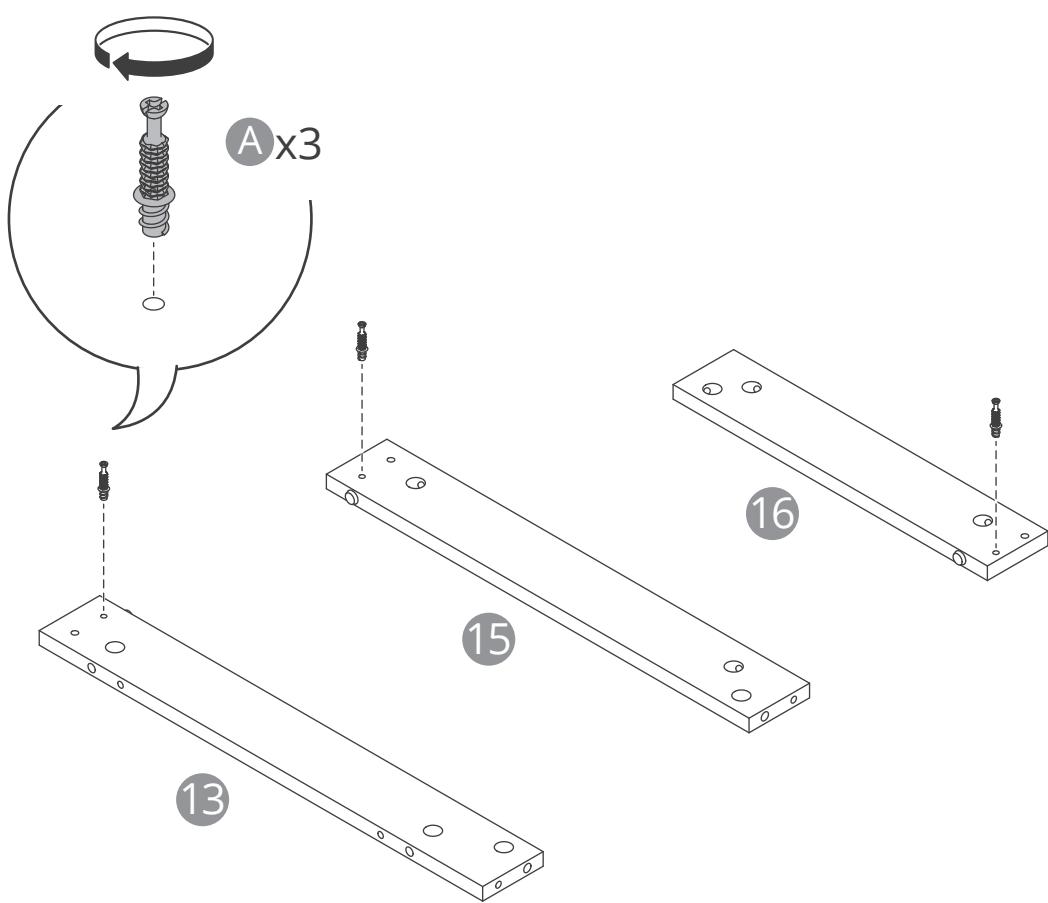


24

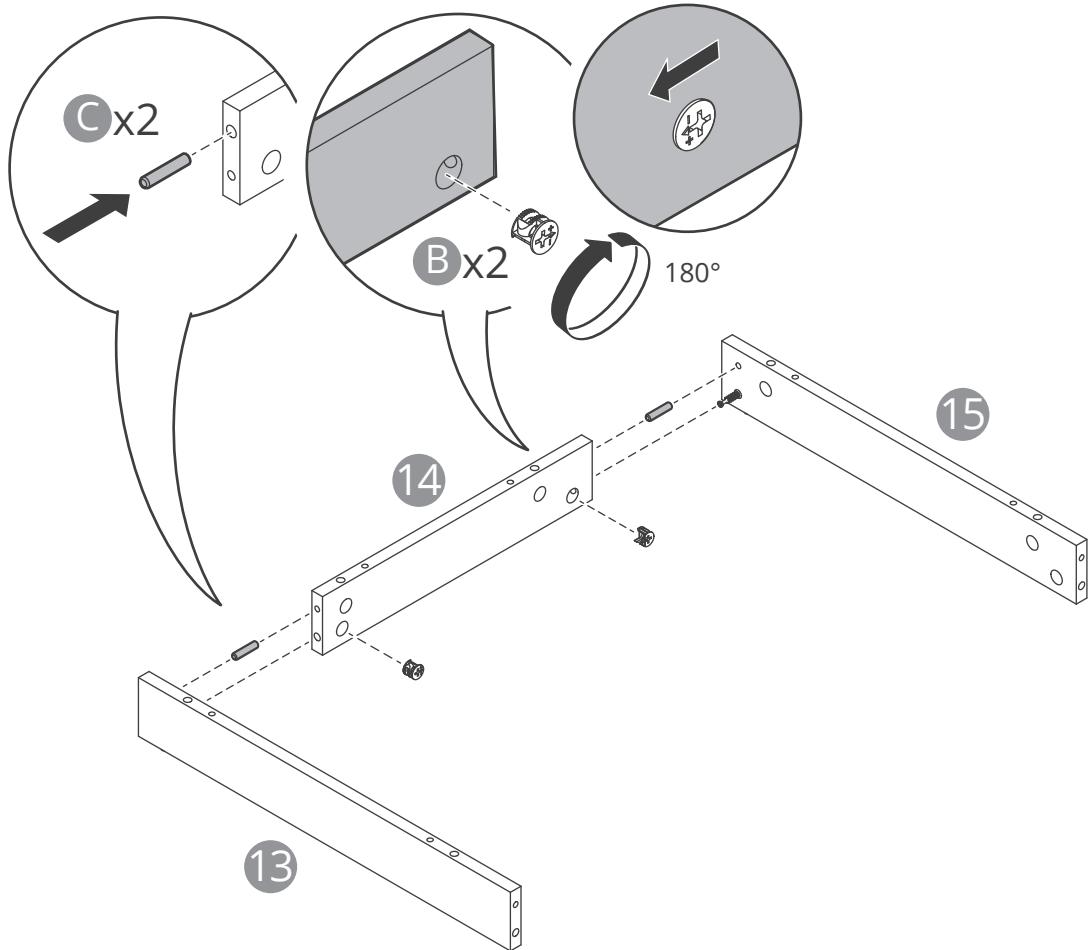


25

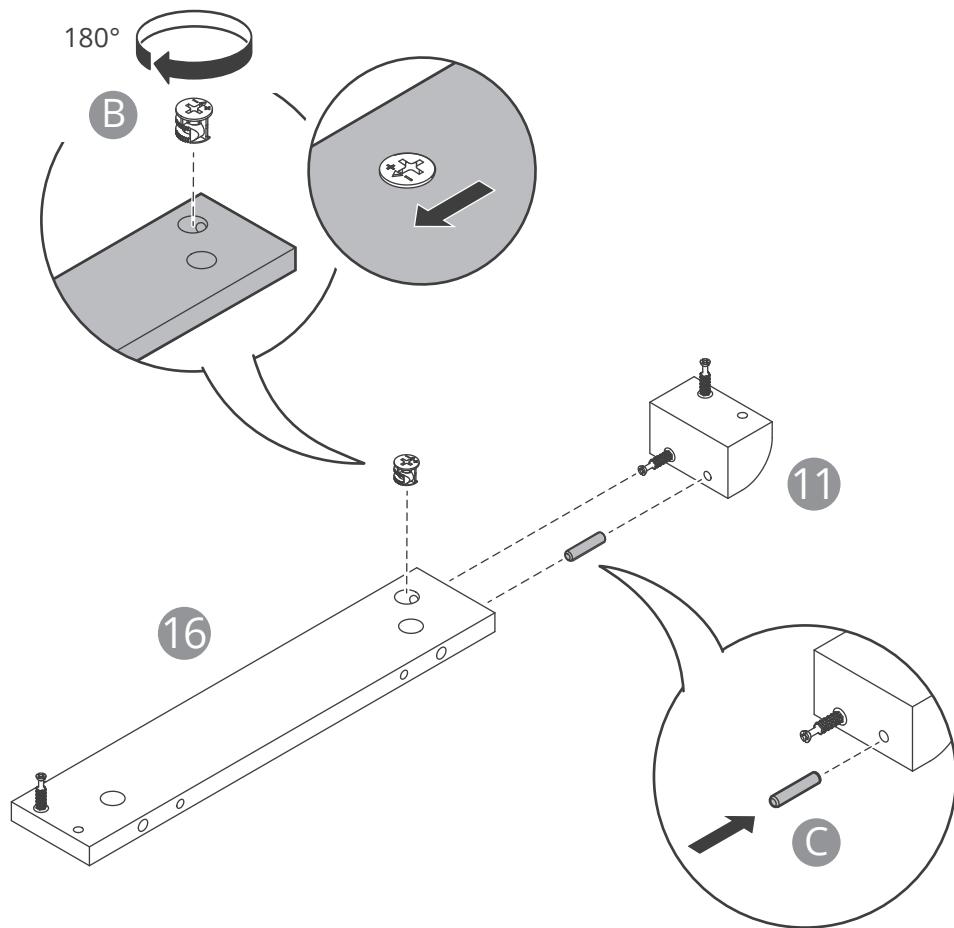


26

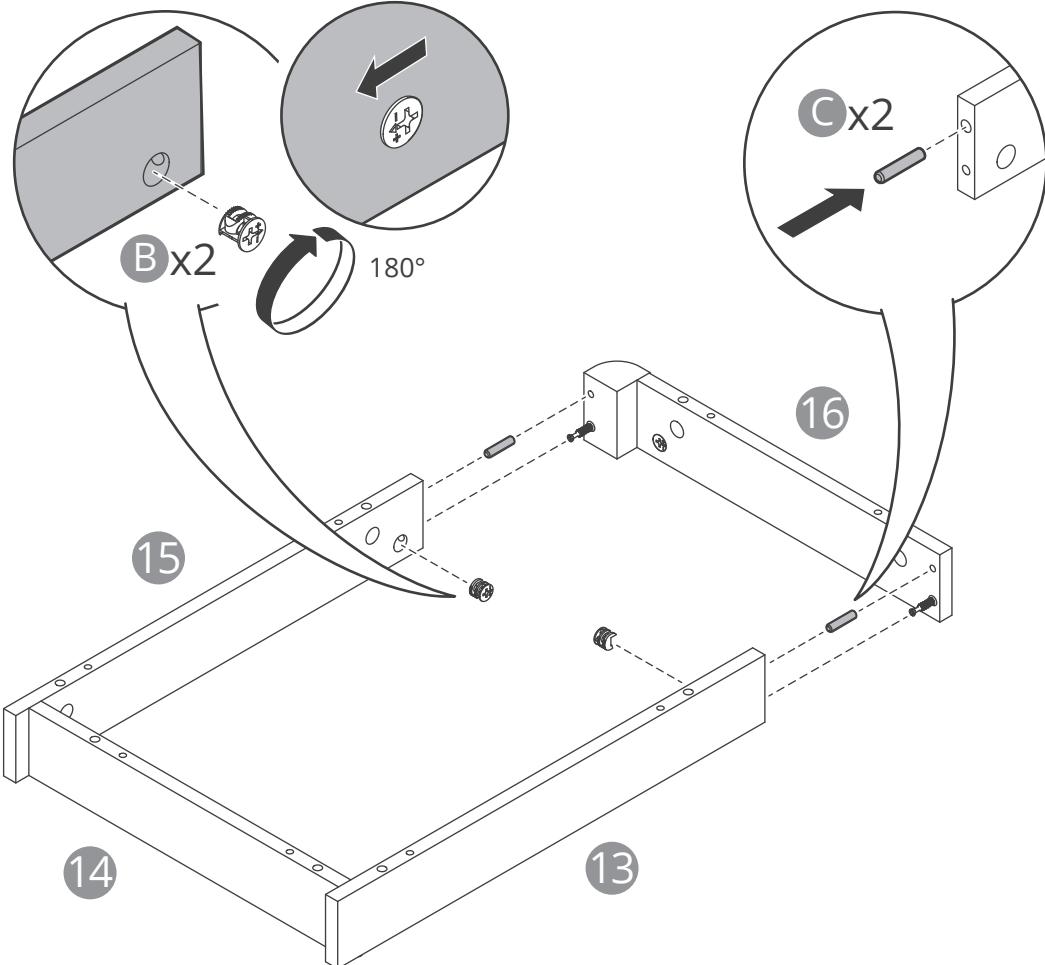


27


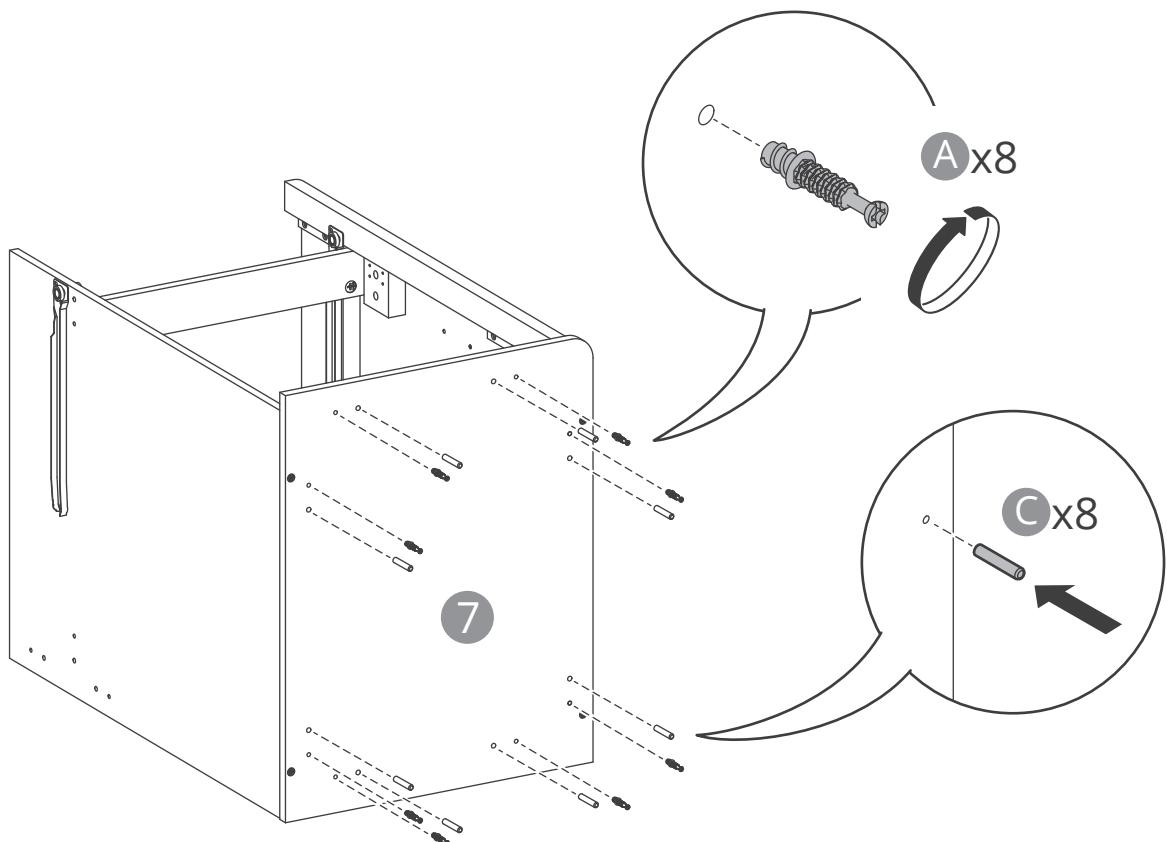


28

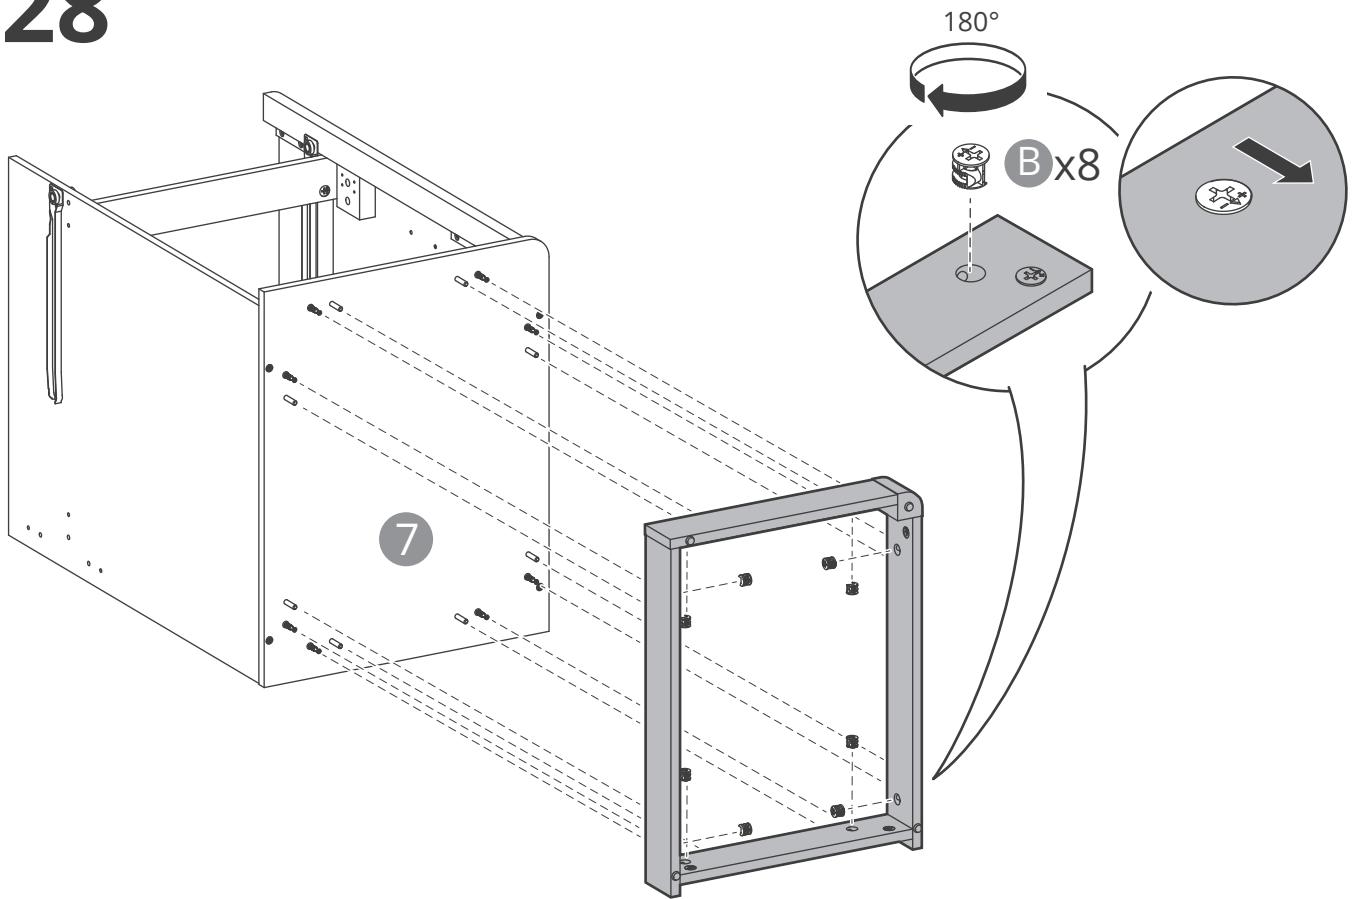


29

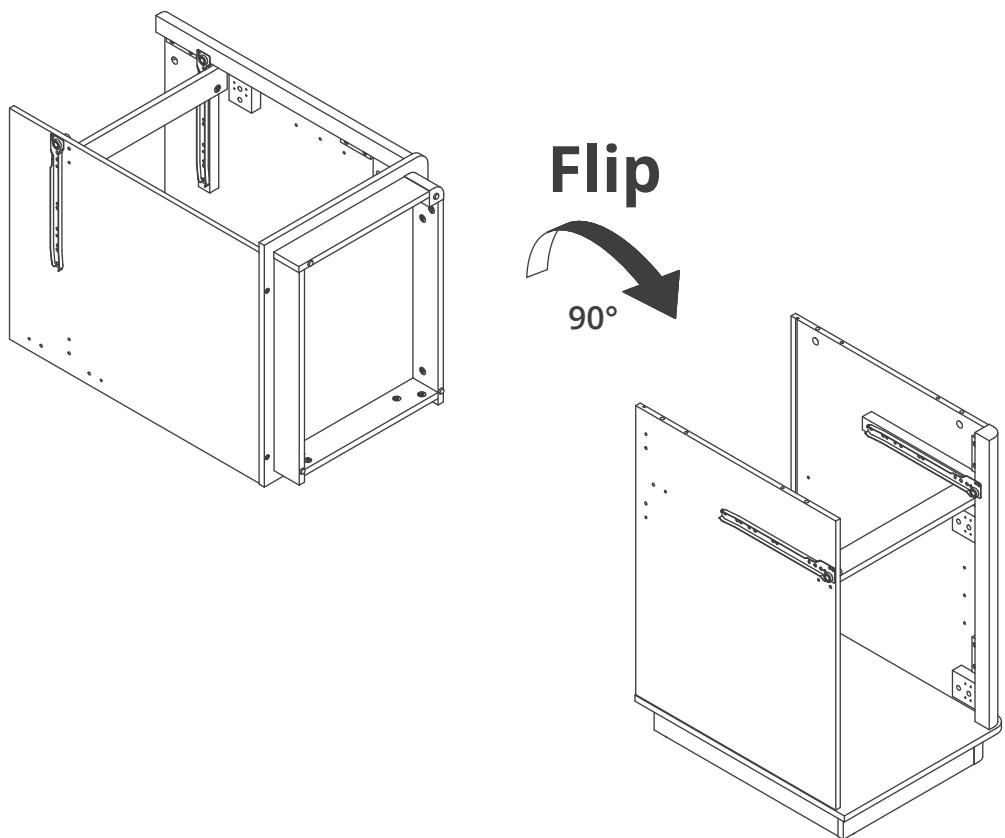


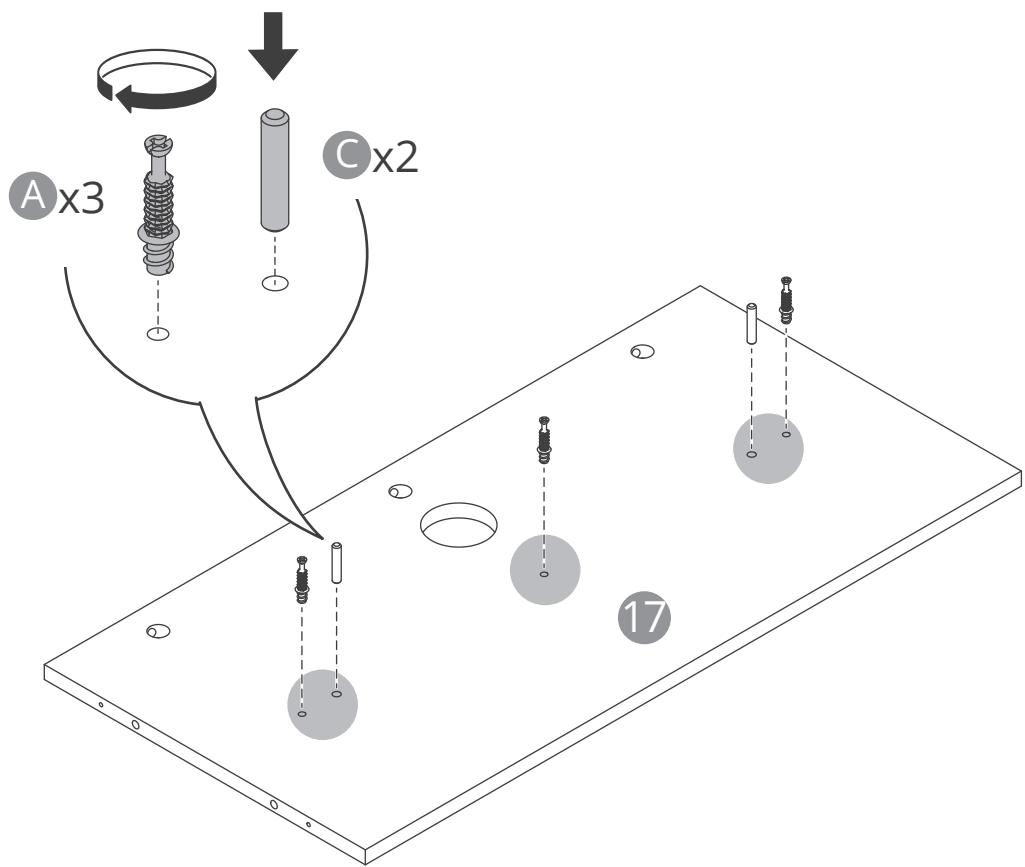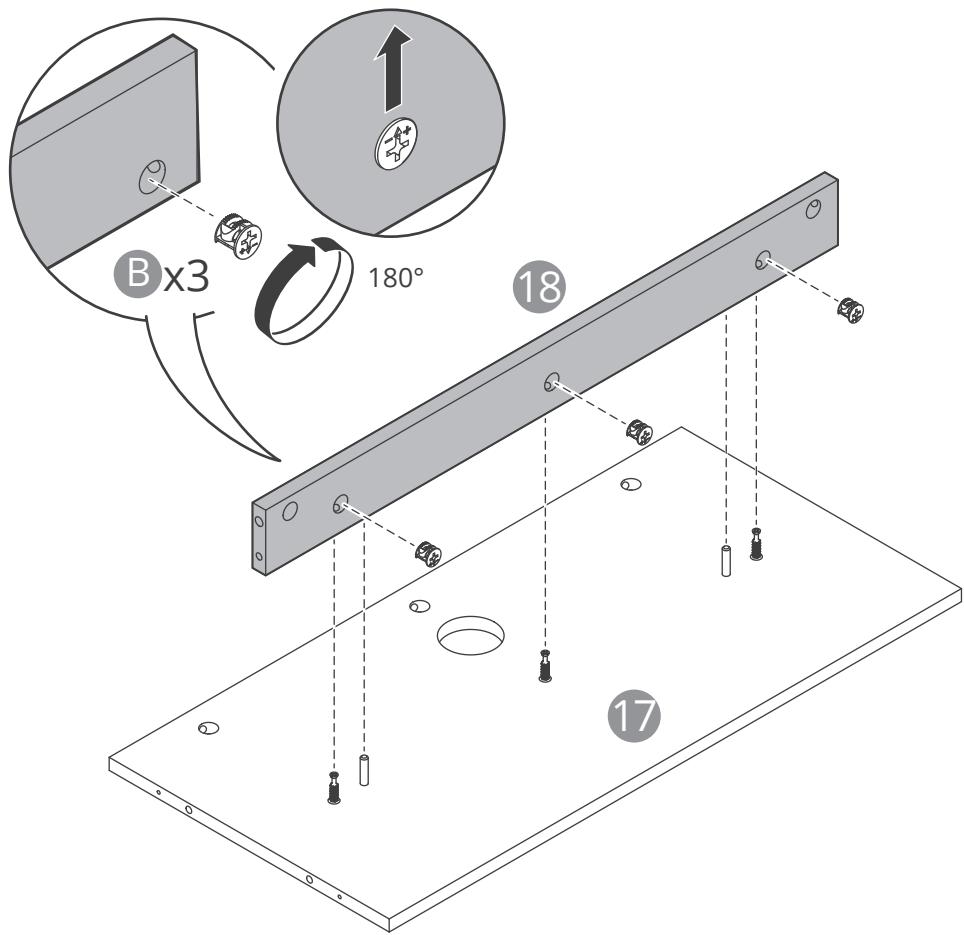30**31**

32

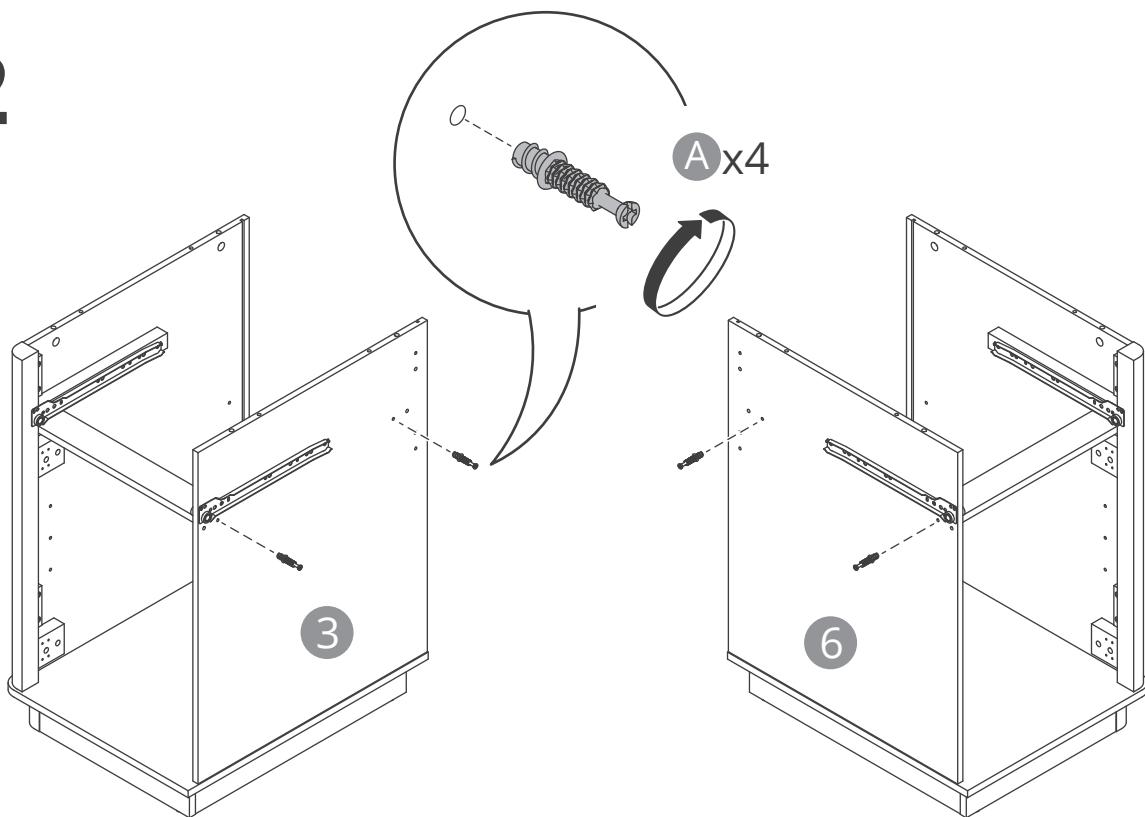

33

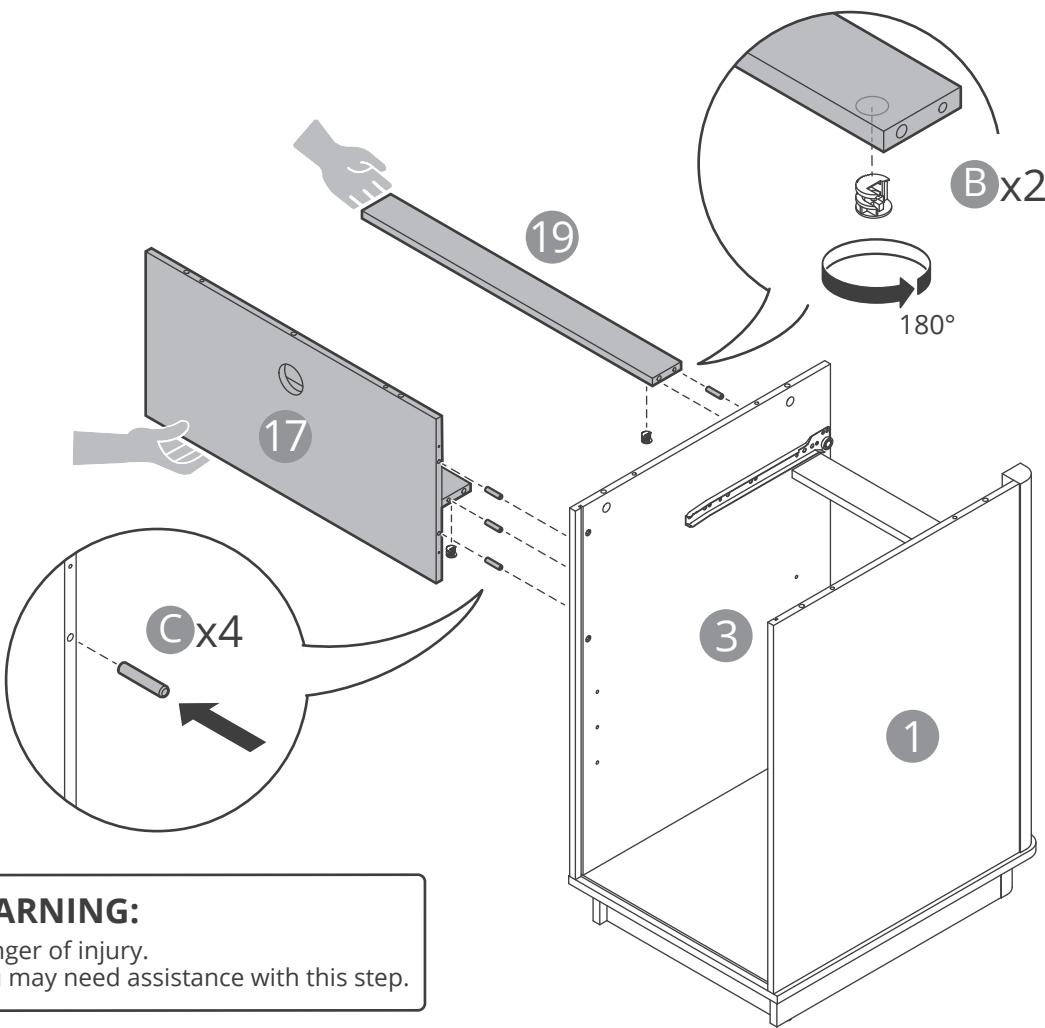

WARNING:


Danger of injury.
You may need assistance with this step.

34



Important:


Hold stretcher (19) in place until the next step.

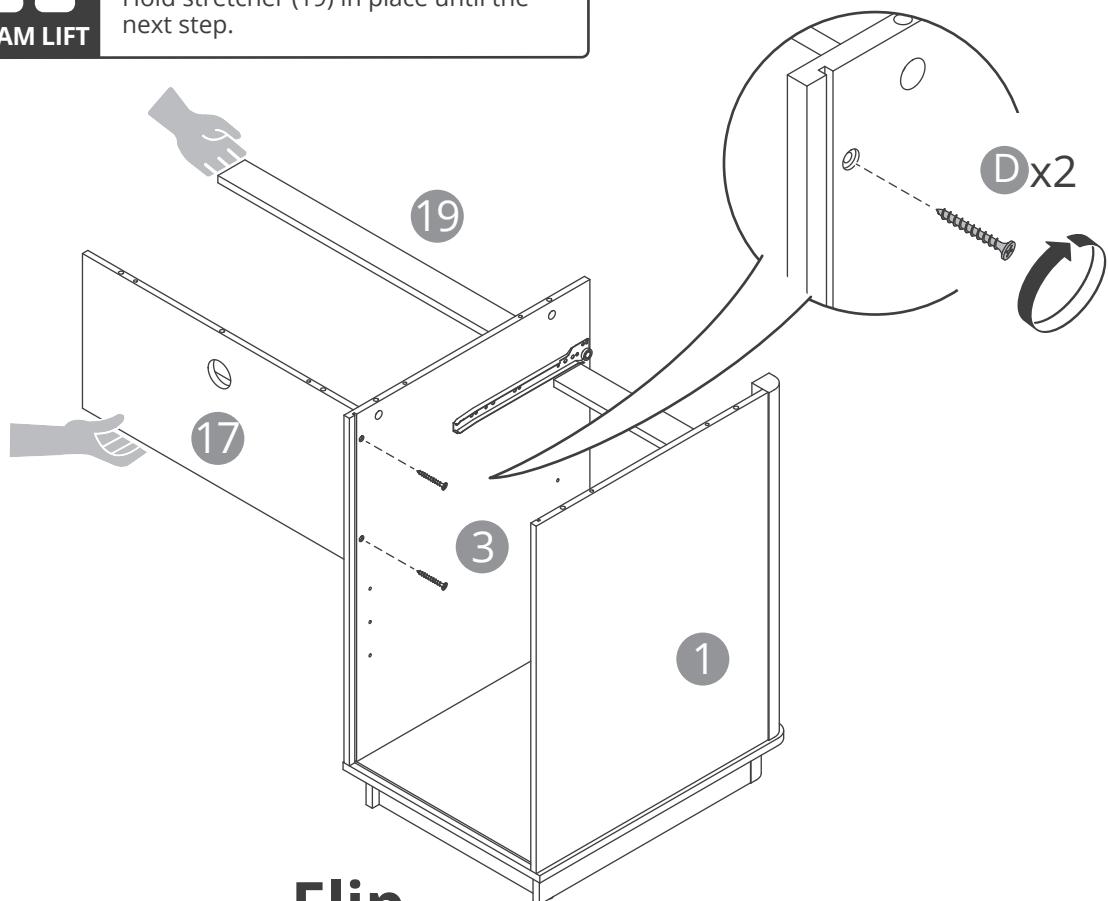


35

Flip


180°

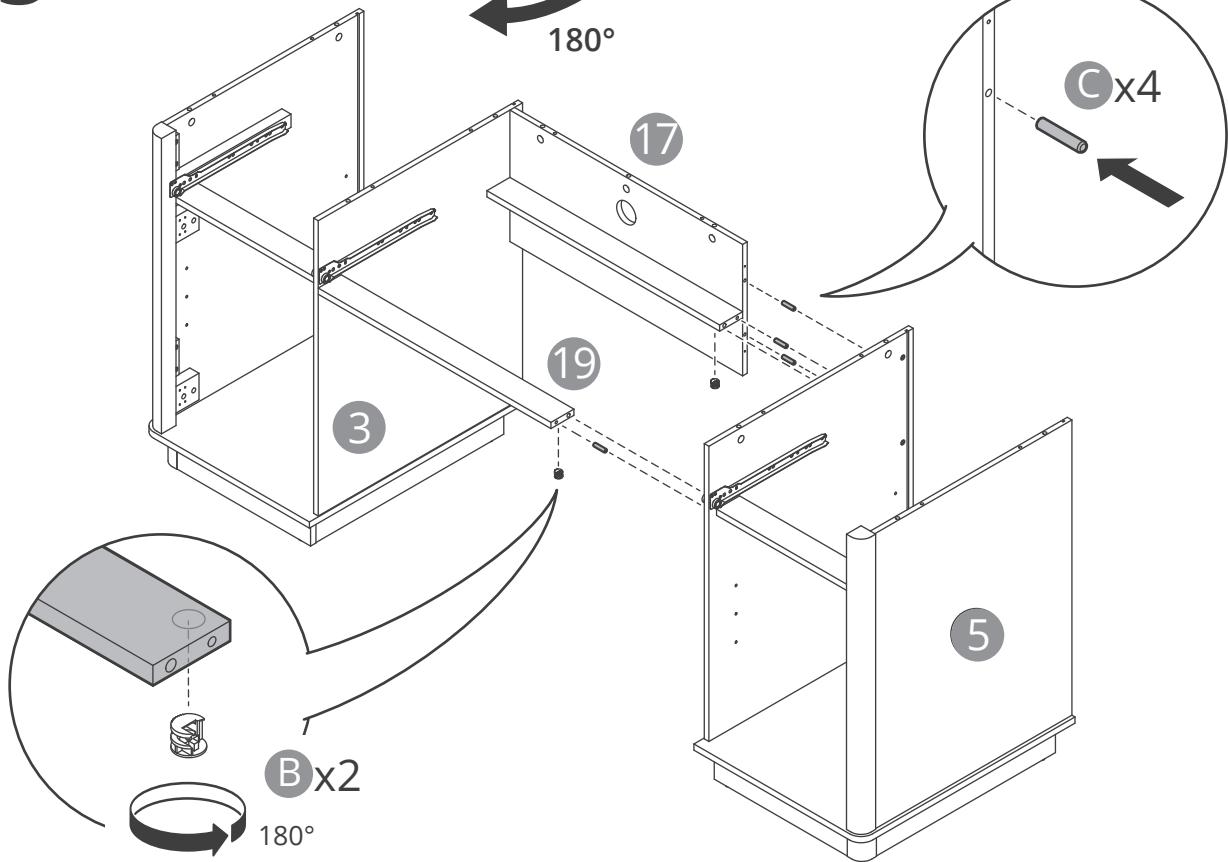


36

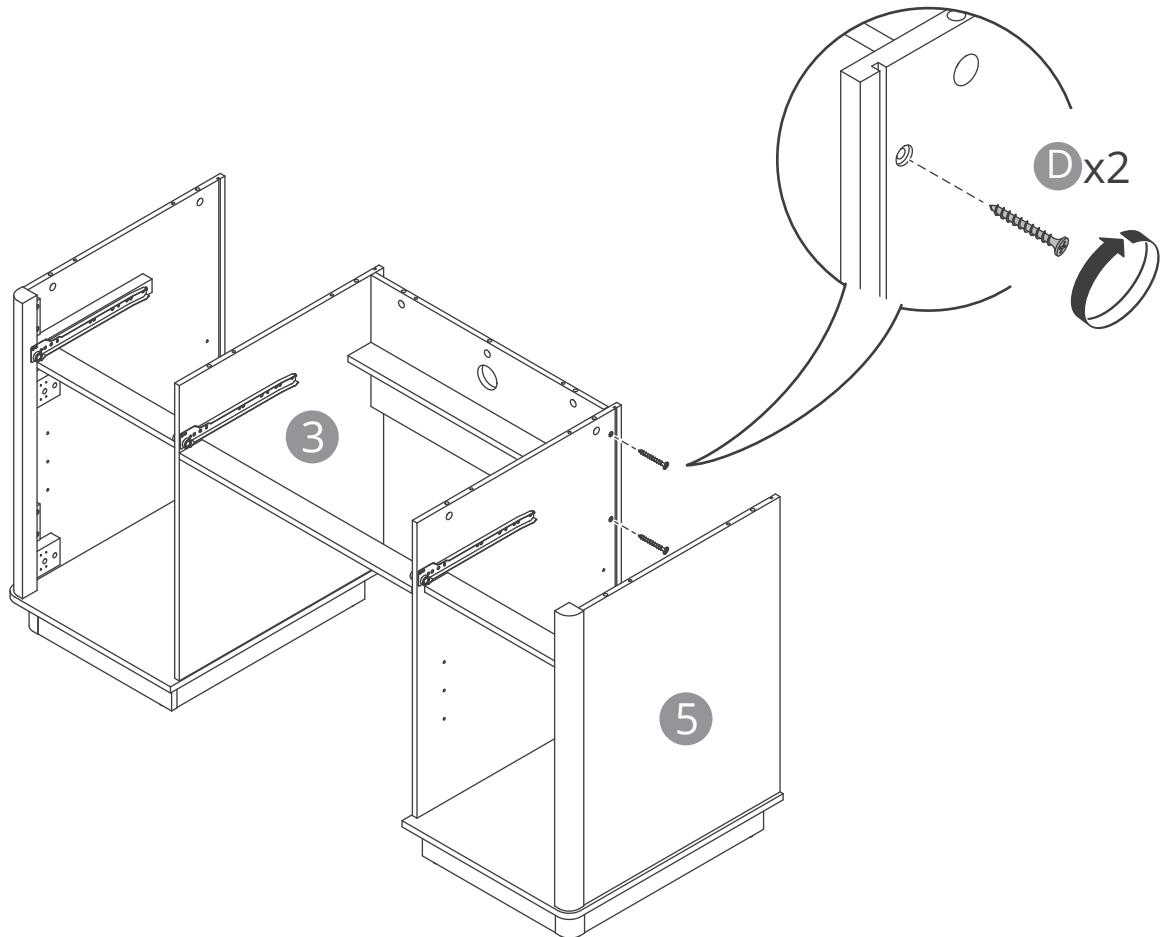


37

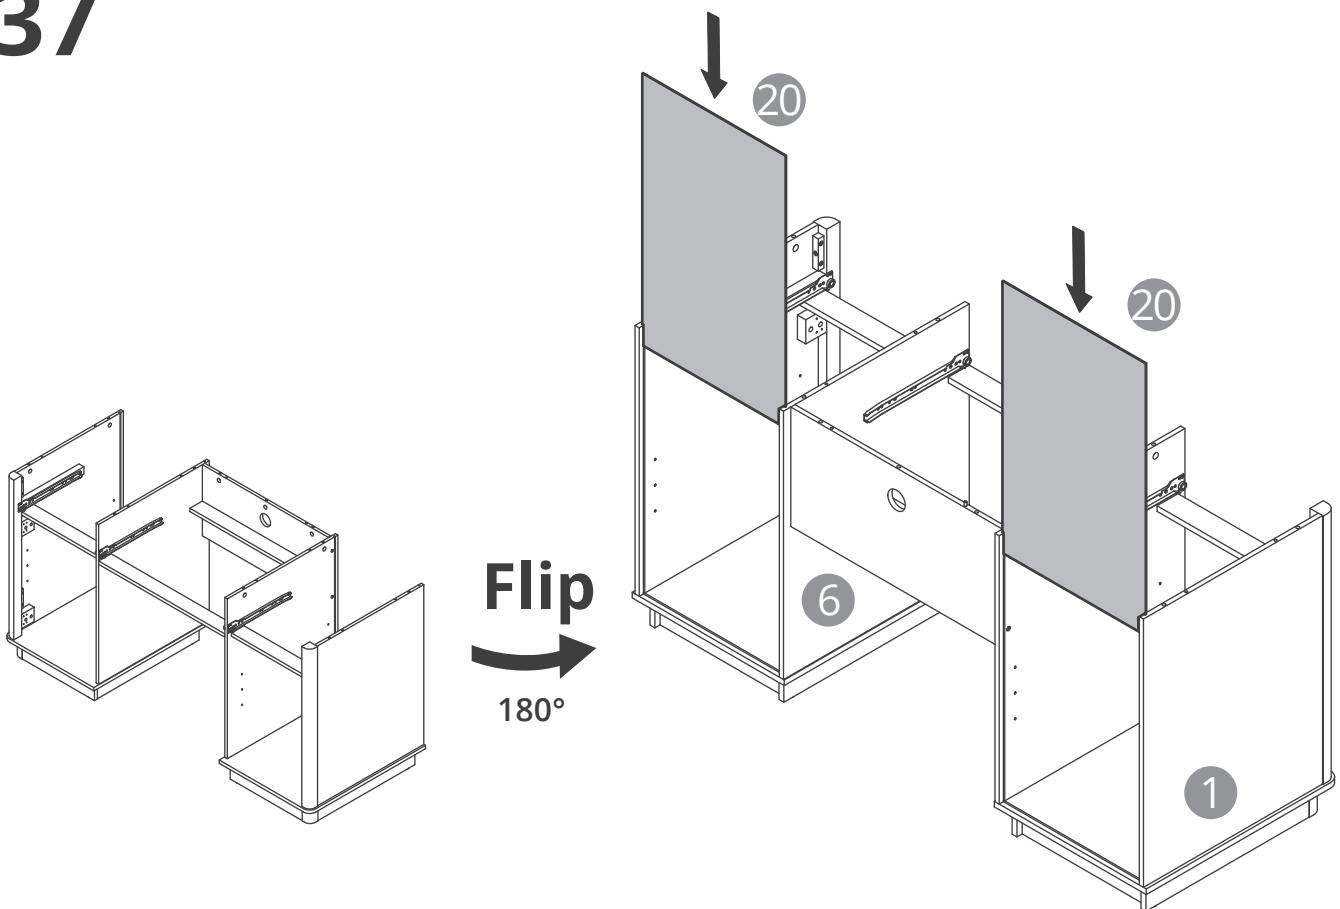


38

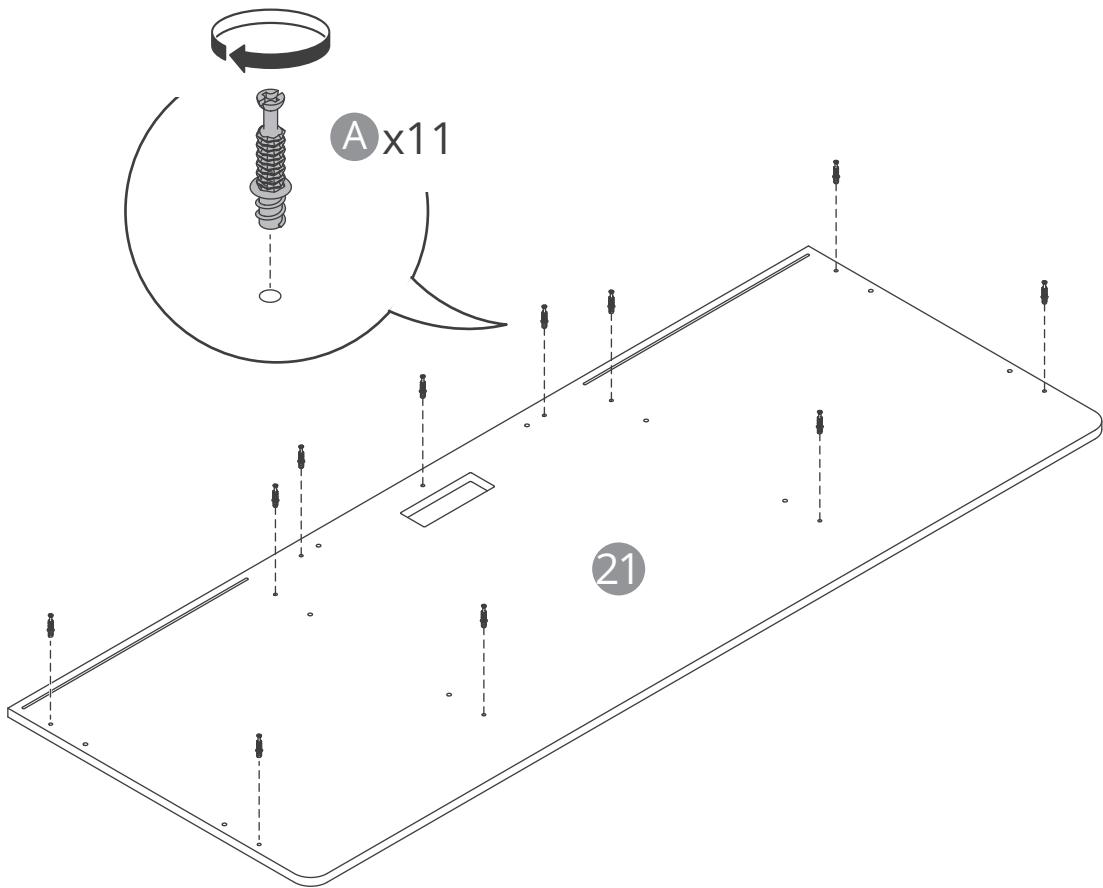


39


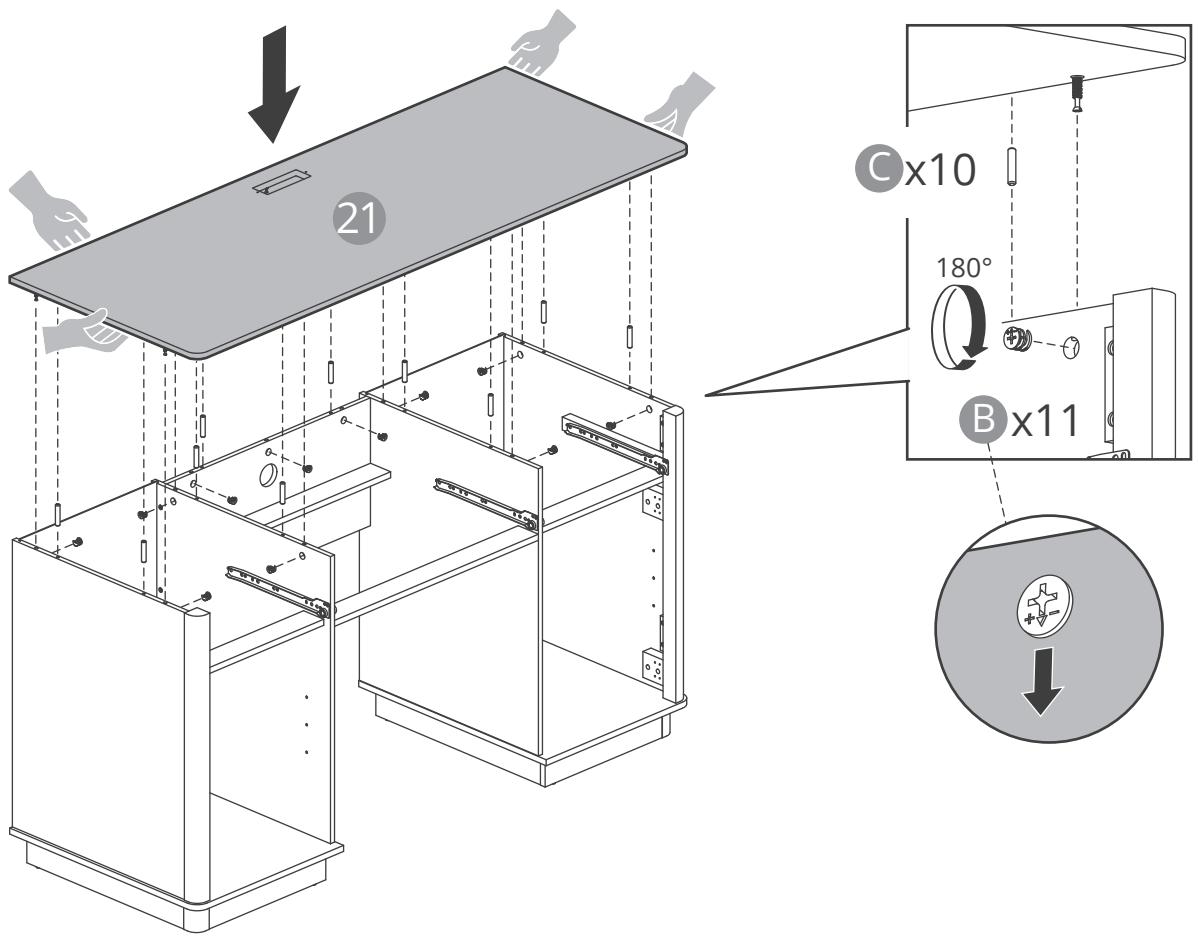


40

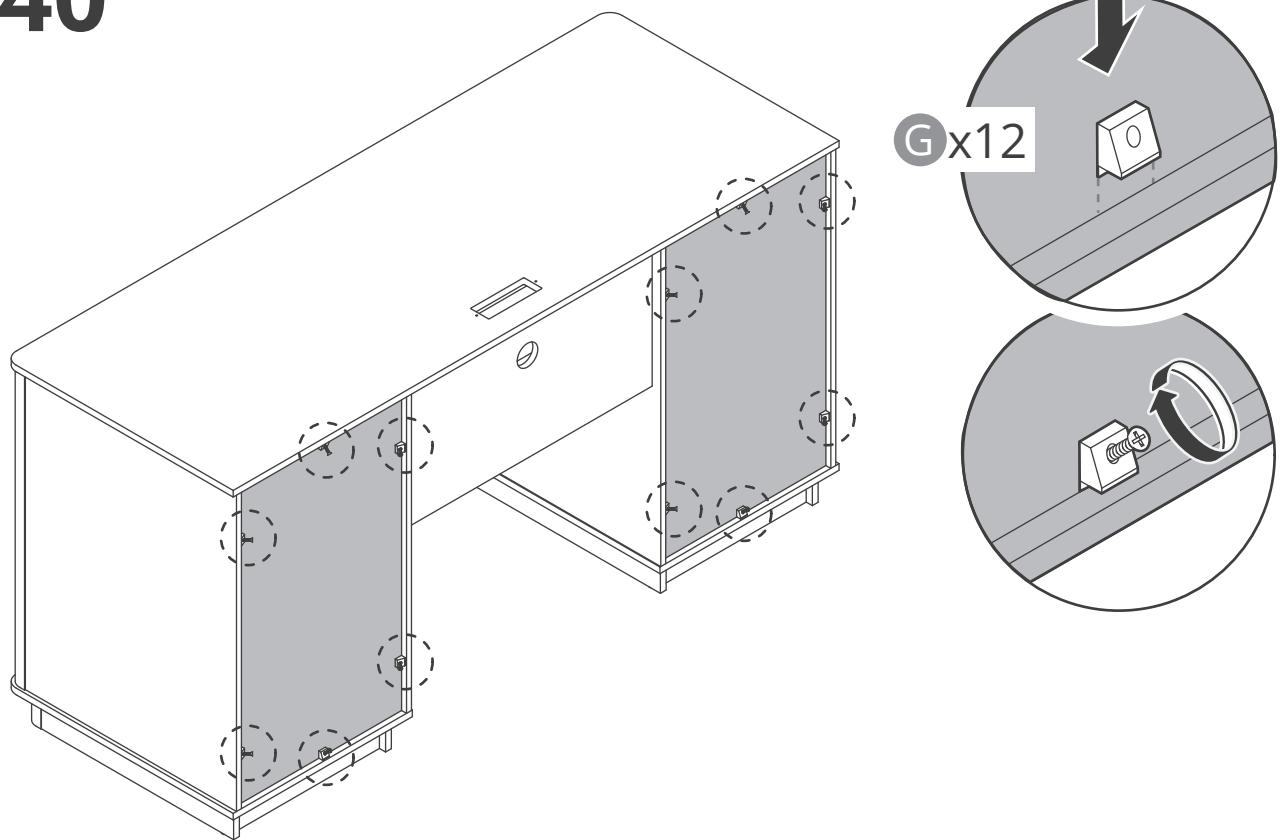


41

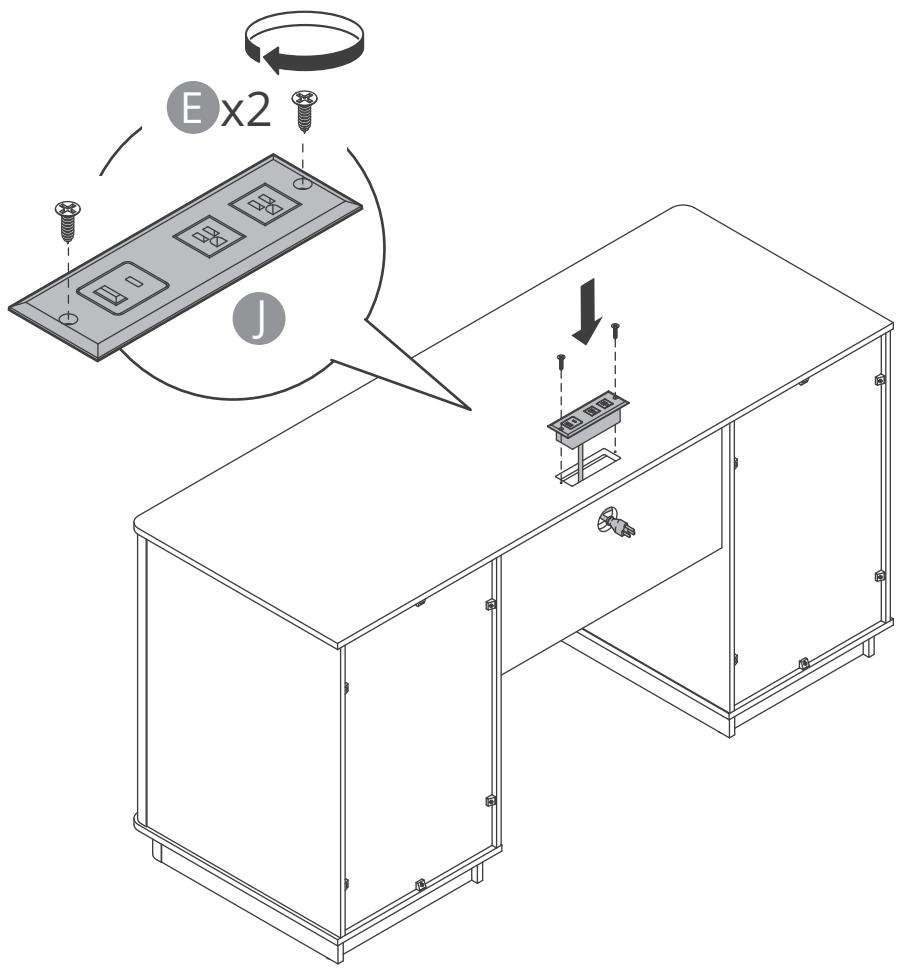

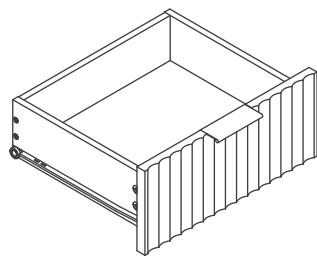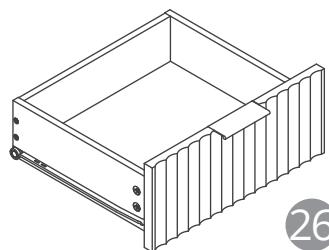


Repeat steps 42 - 46 for 2 drawers.


42

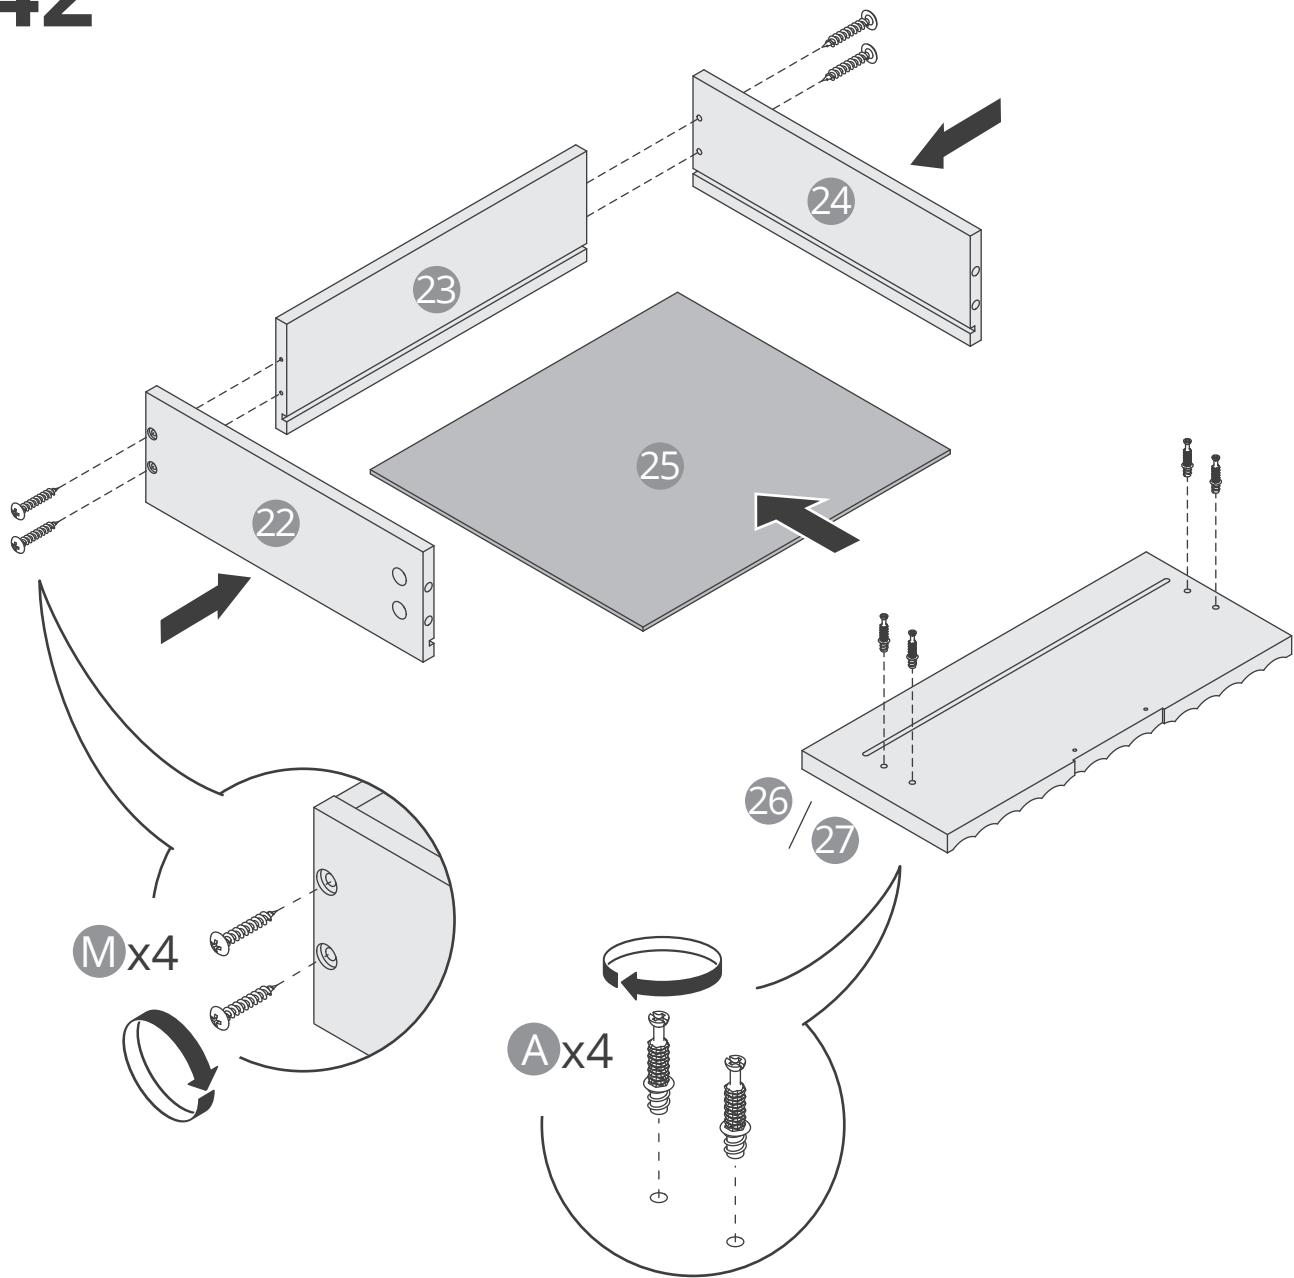


43

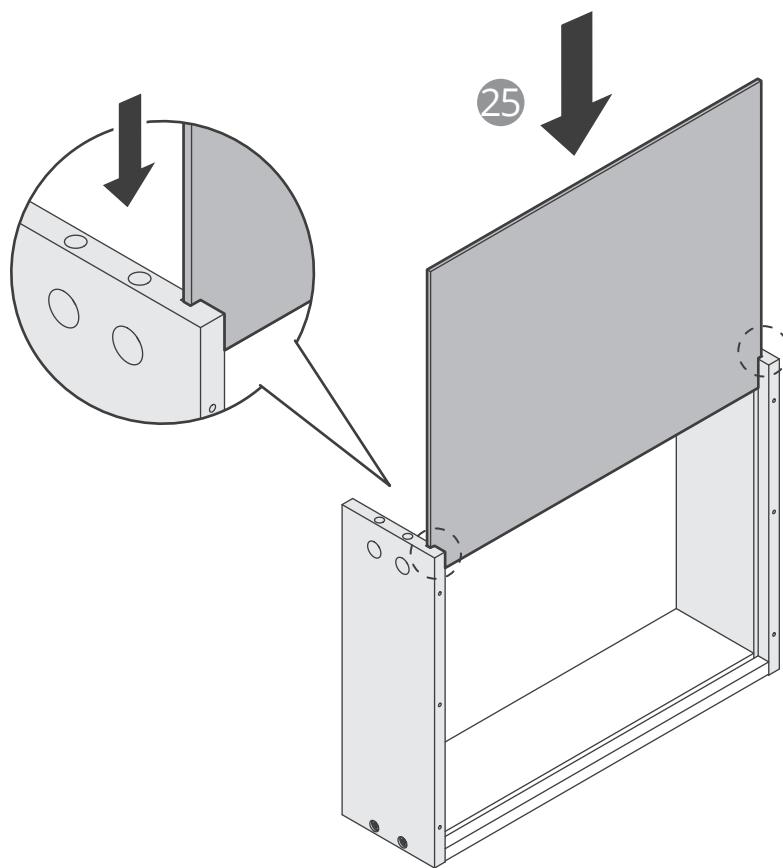




44

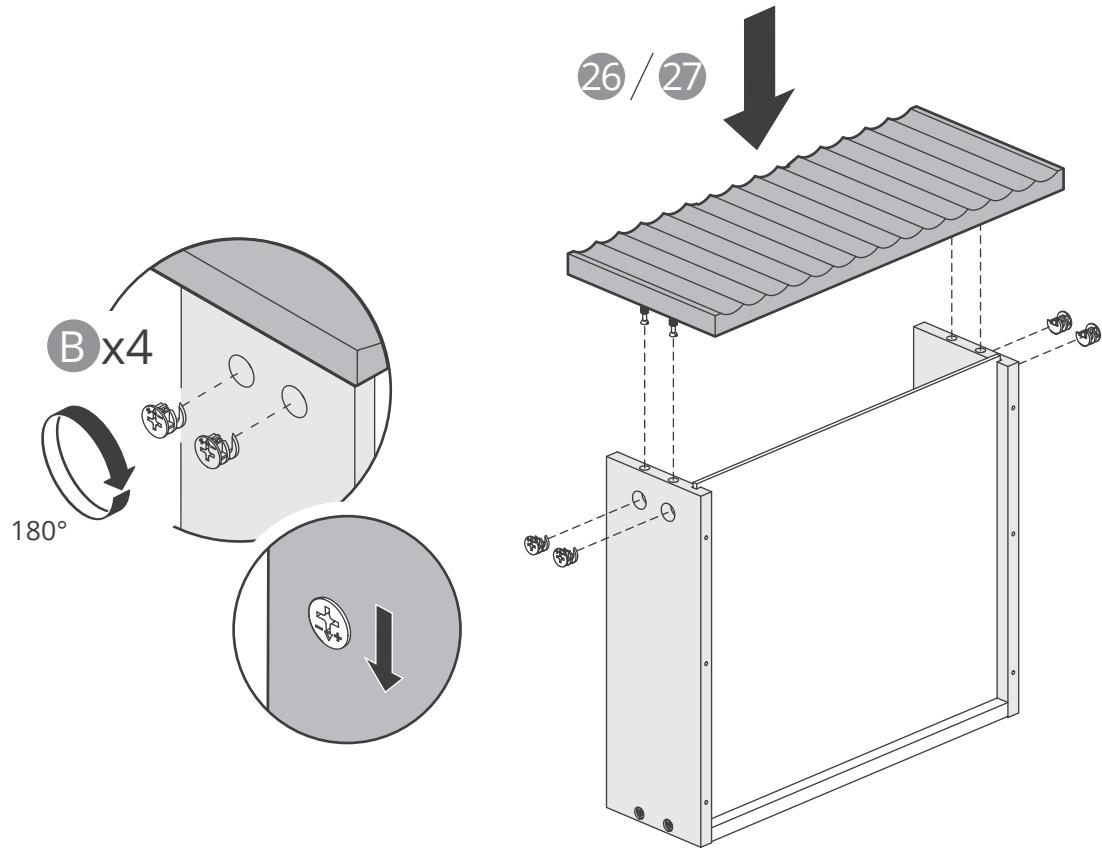


45

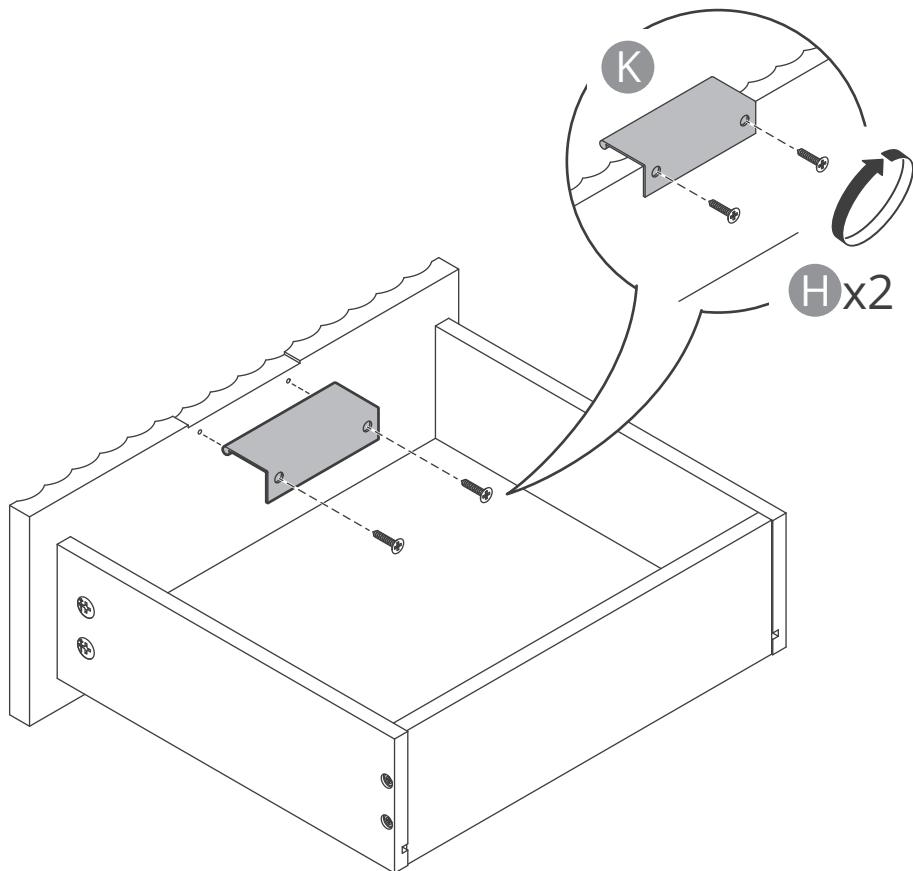


46

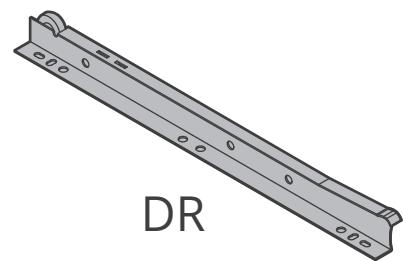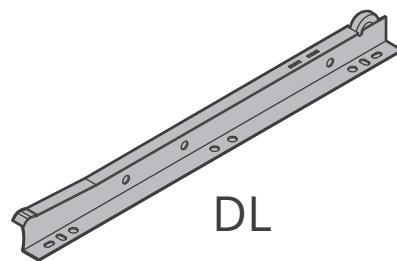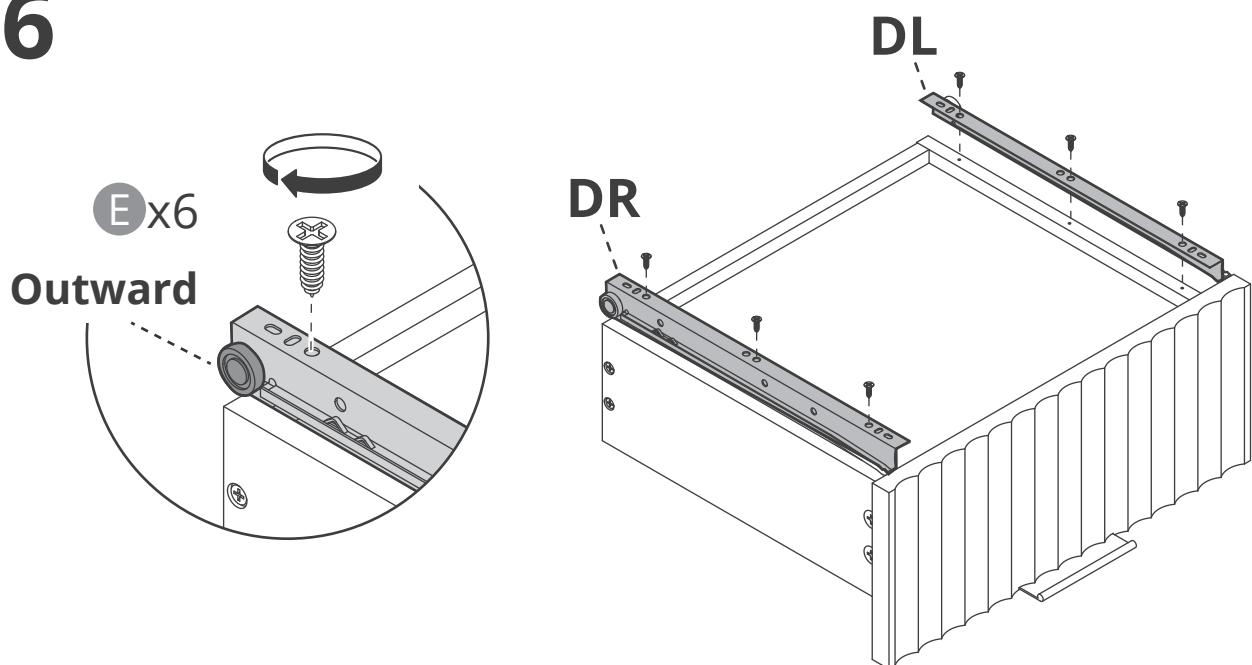


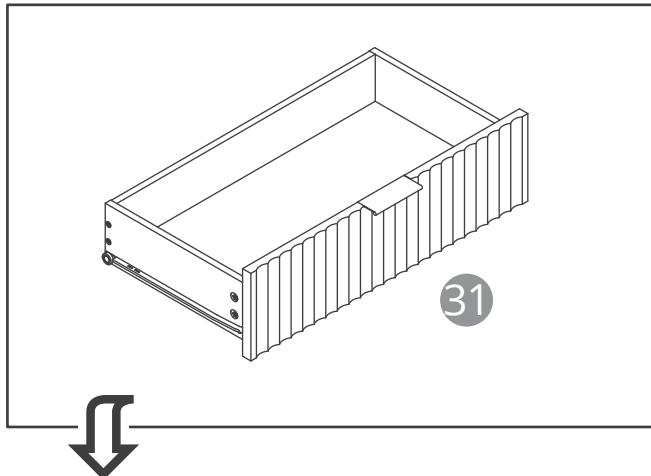


47

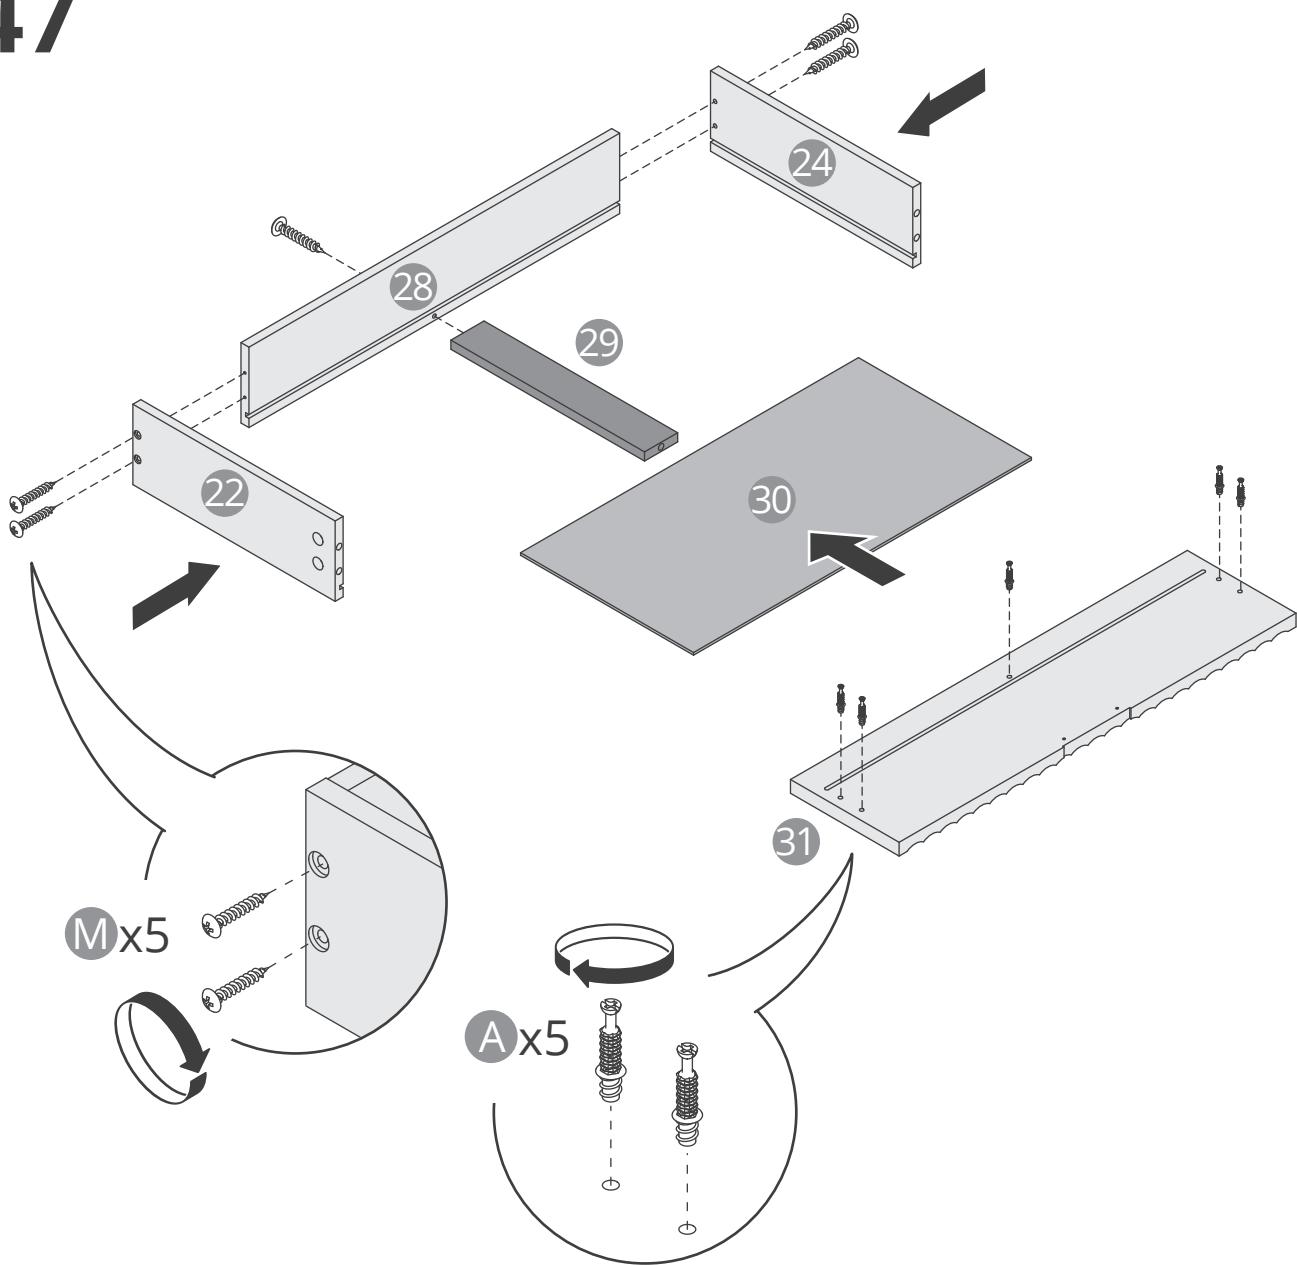


48

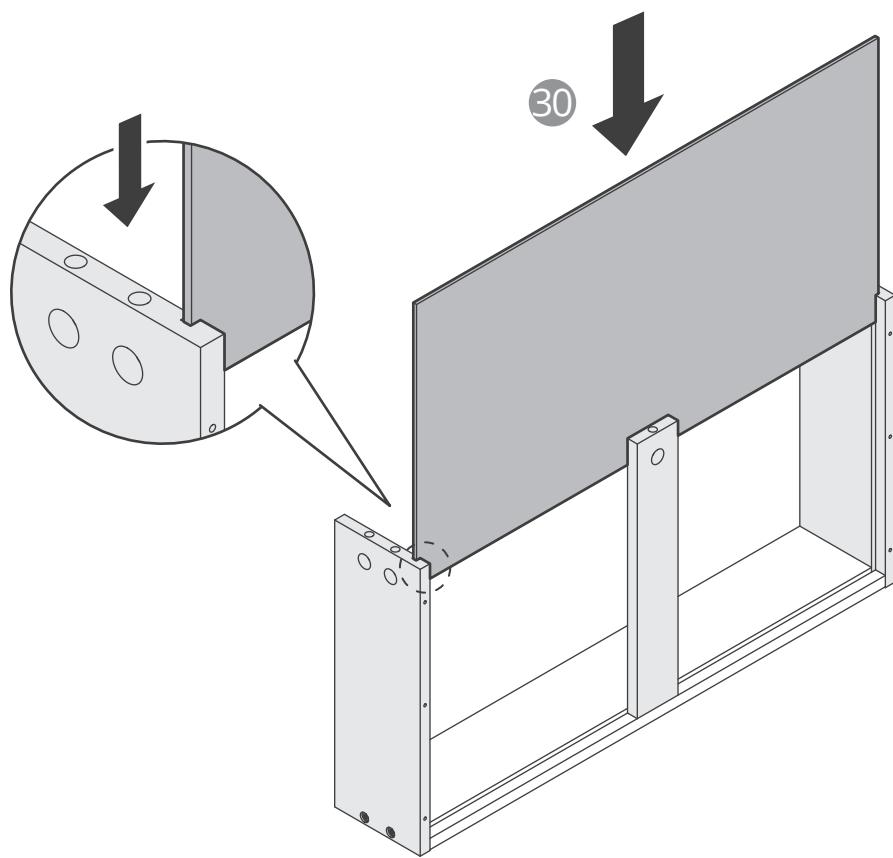



49

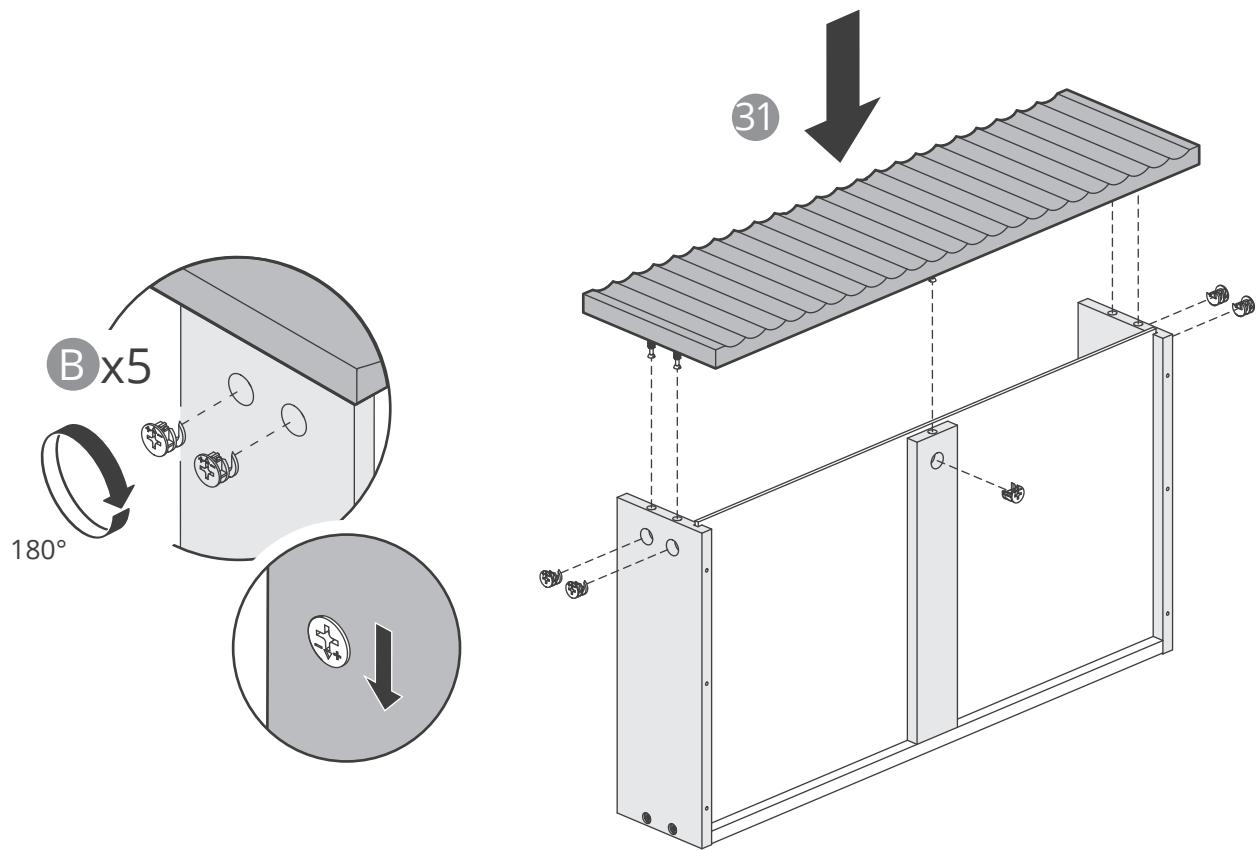



50

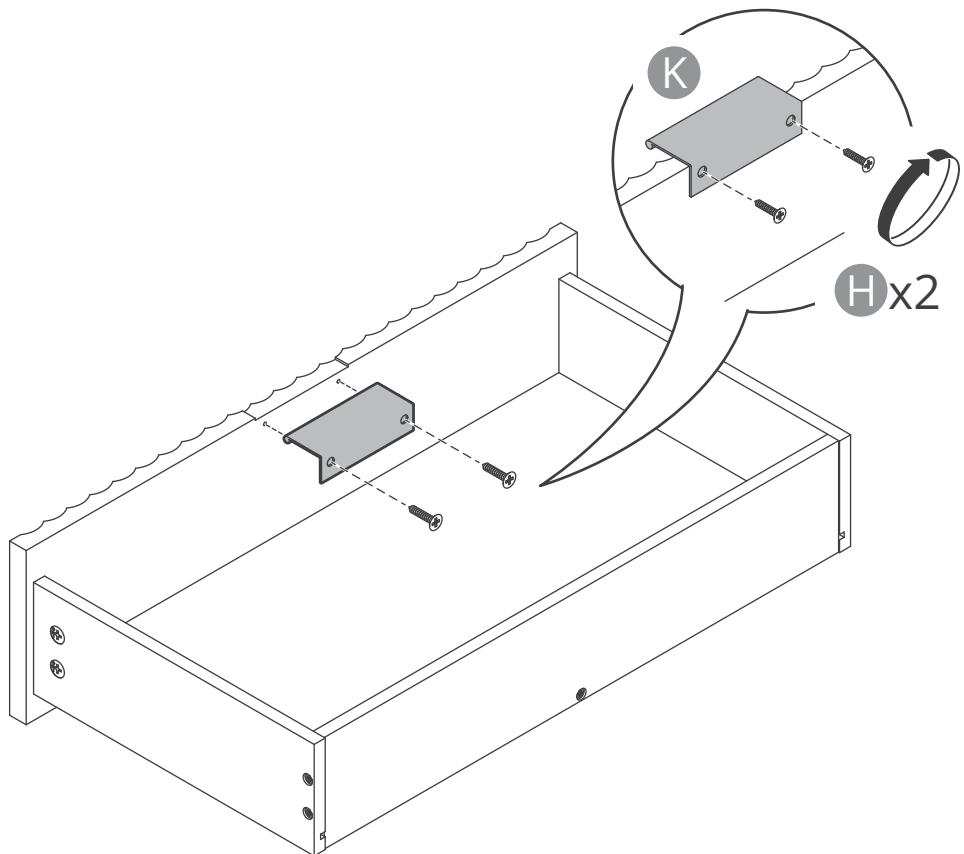


51

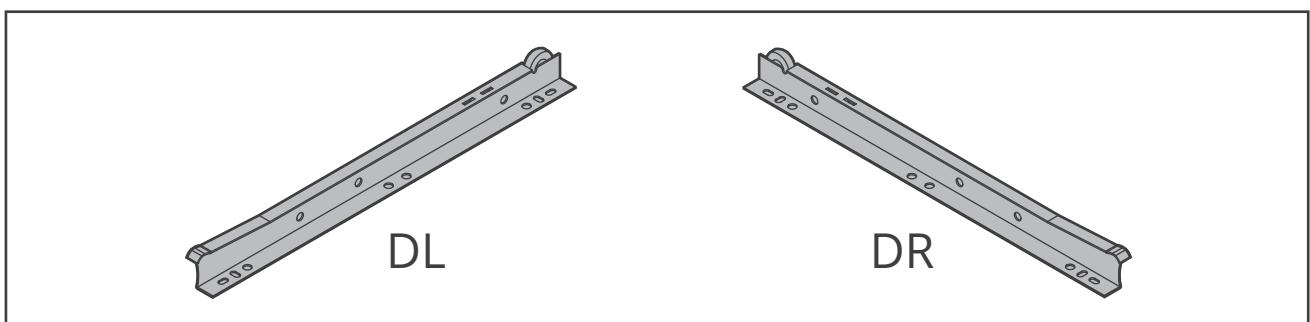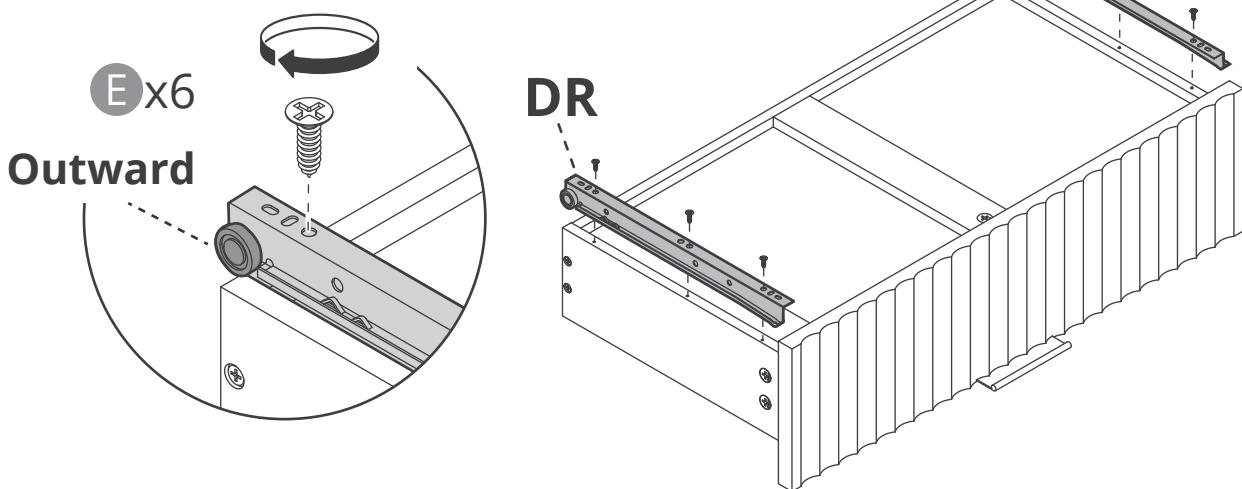


52

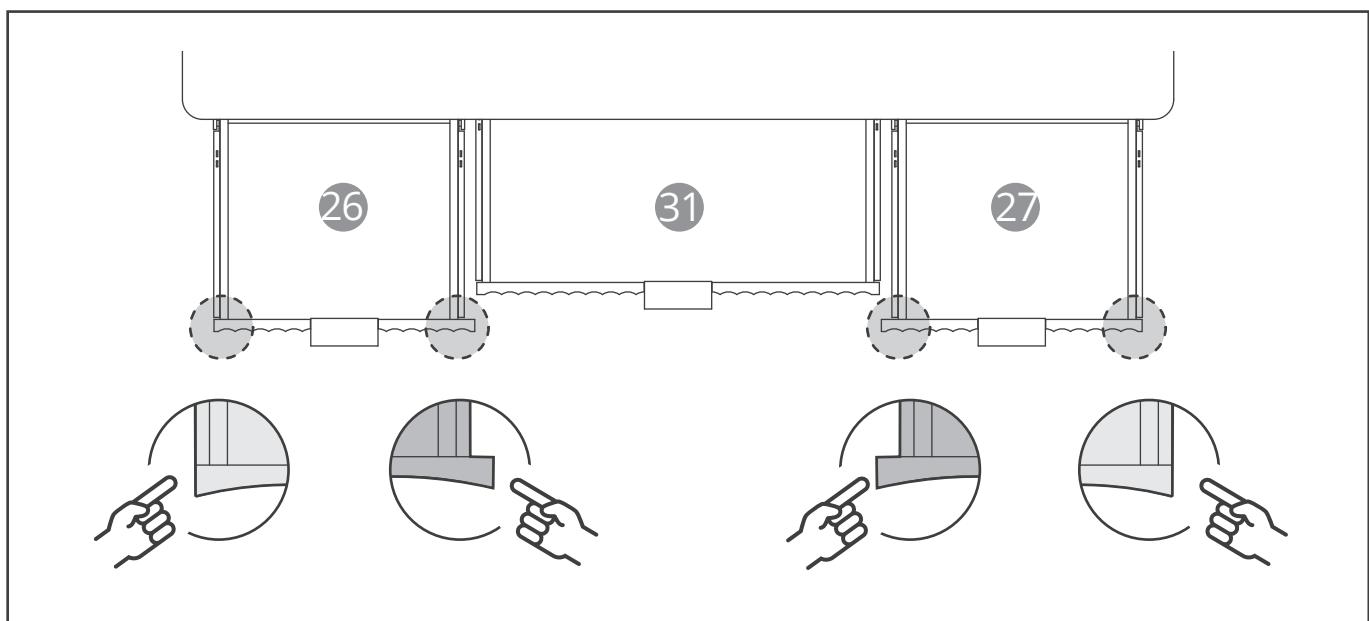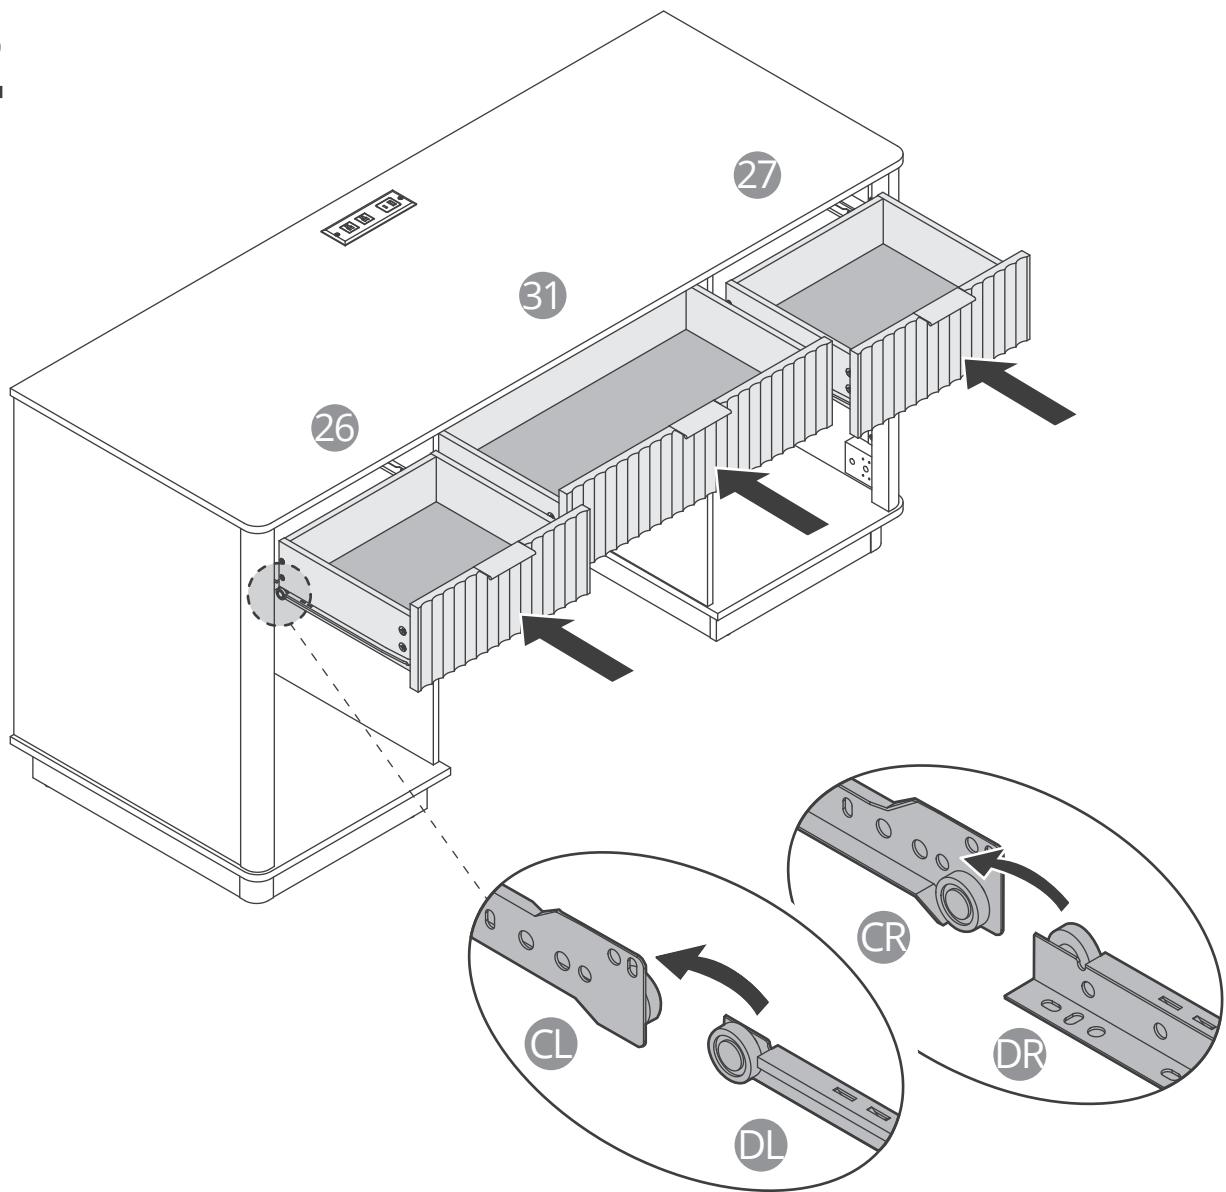


53

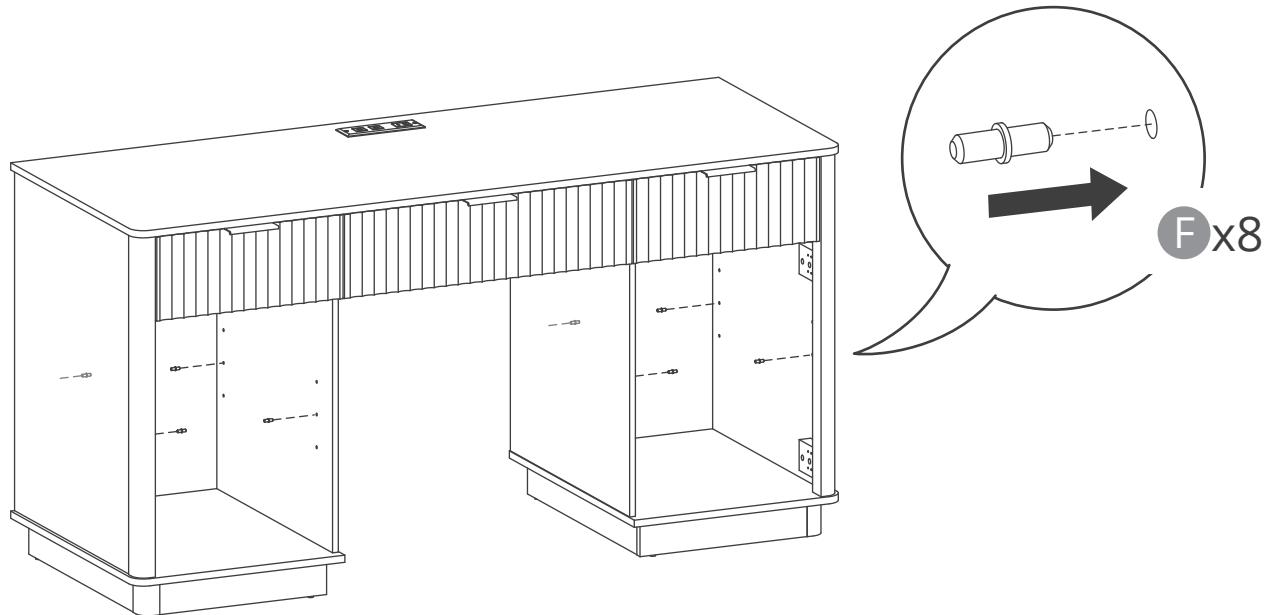


54

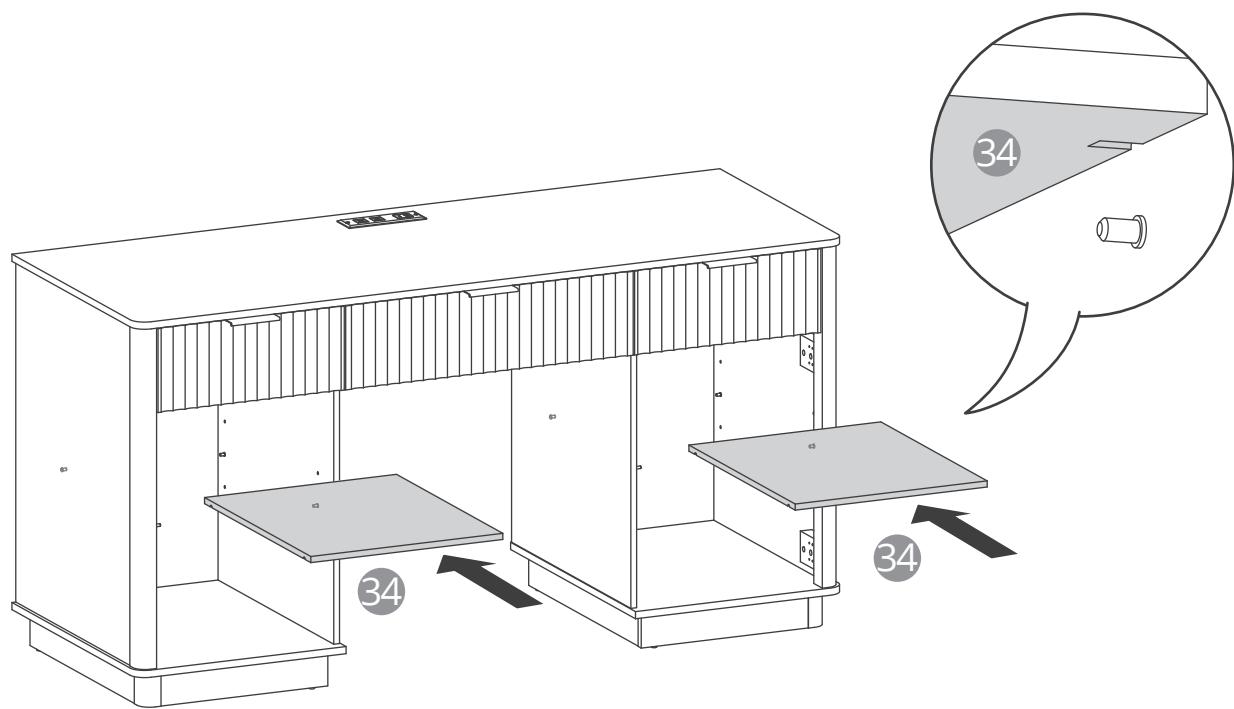

55


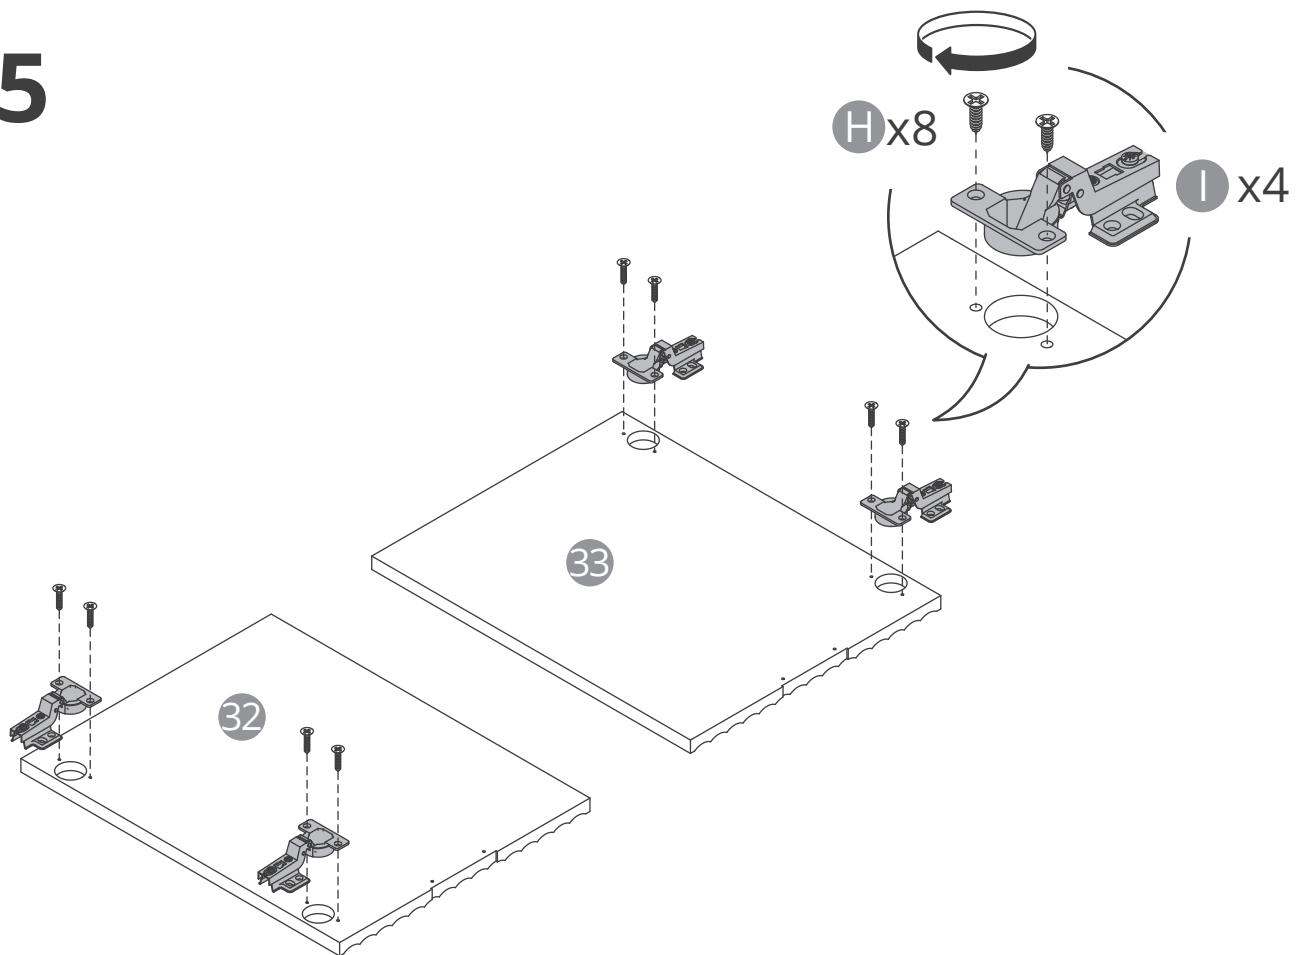


56


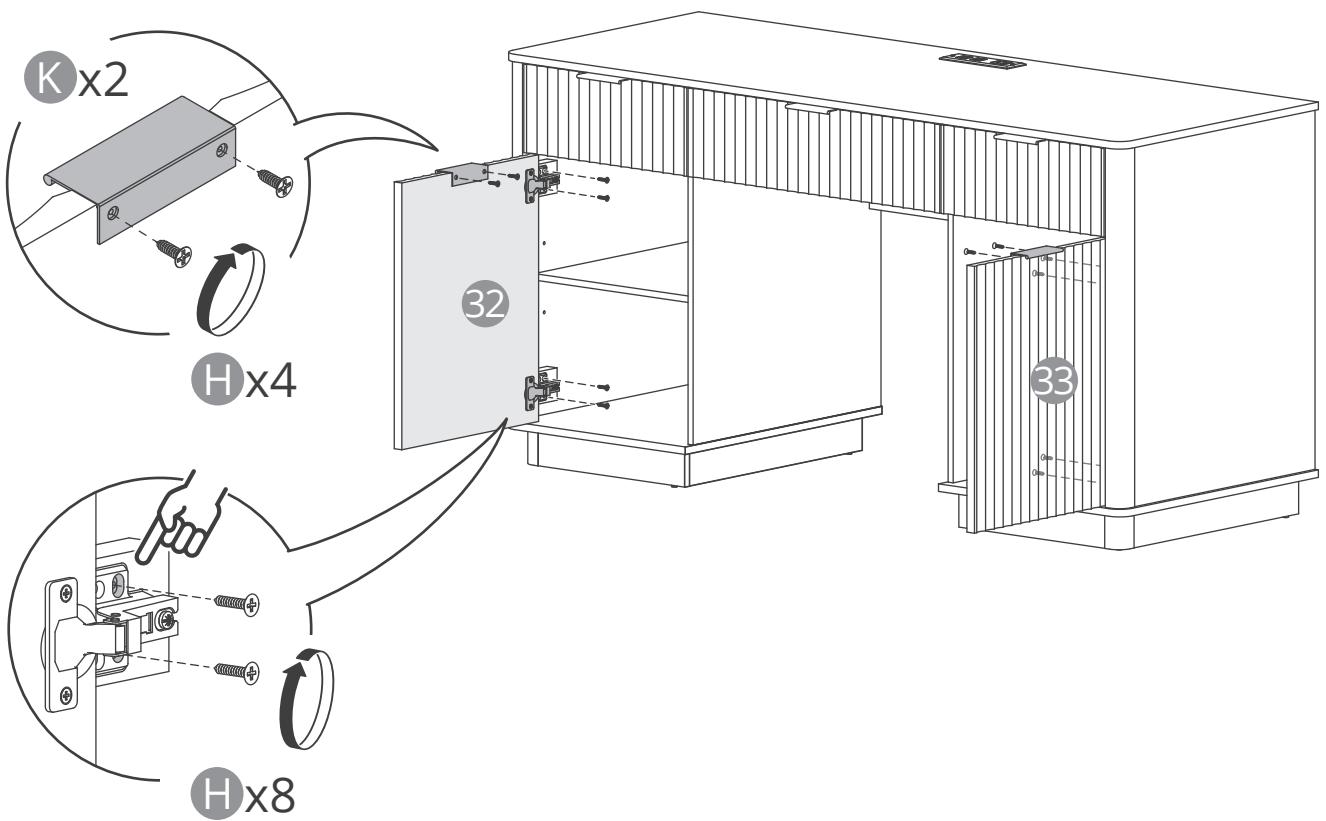






To adjust the door left or right, LOOSEN the corresponding SCREW on the HINGE.

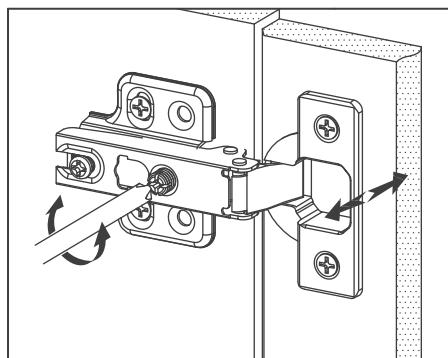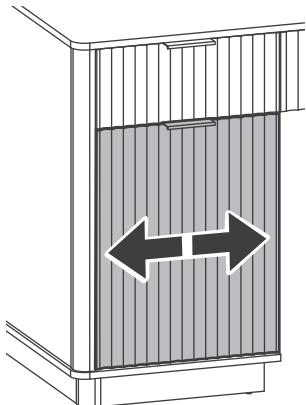


To adjust the door up or down, LOOSEN the corresponding SCREW on the HINGE.

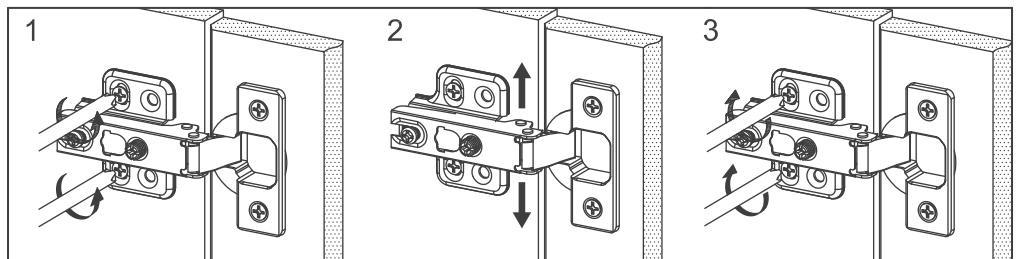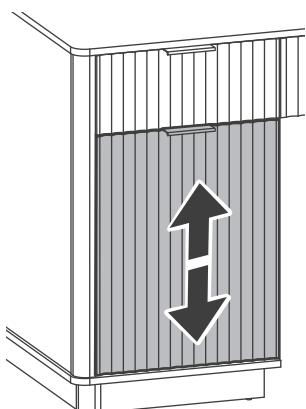

To adjust the door forward or backward, LOOSEN the corresponding SCREW on the HINGE.

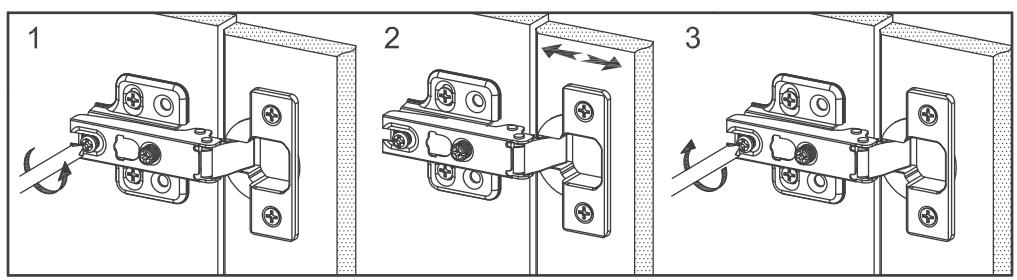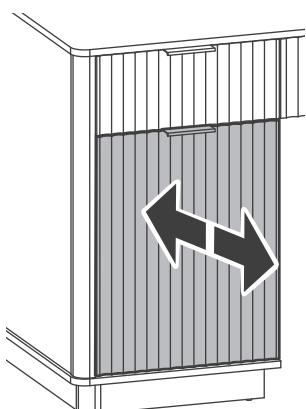

57

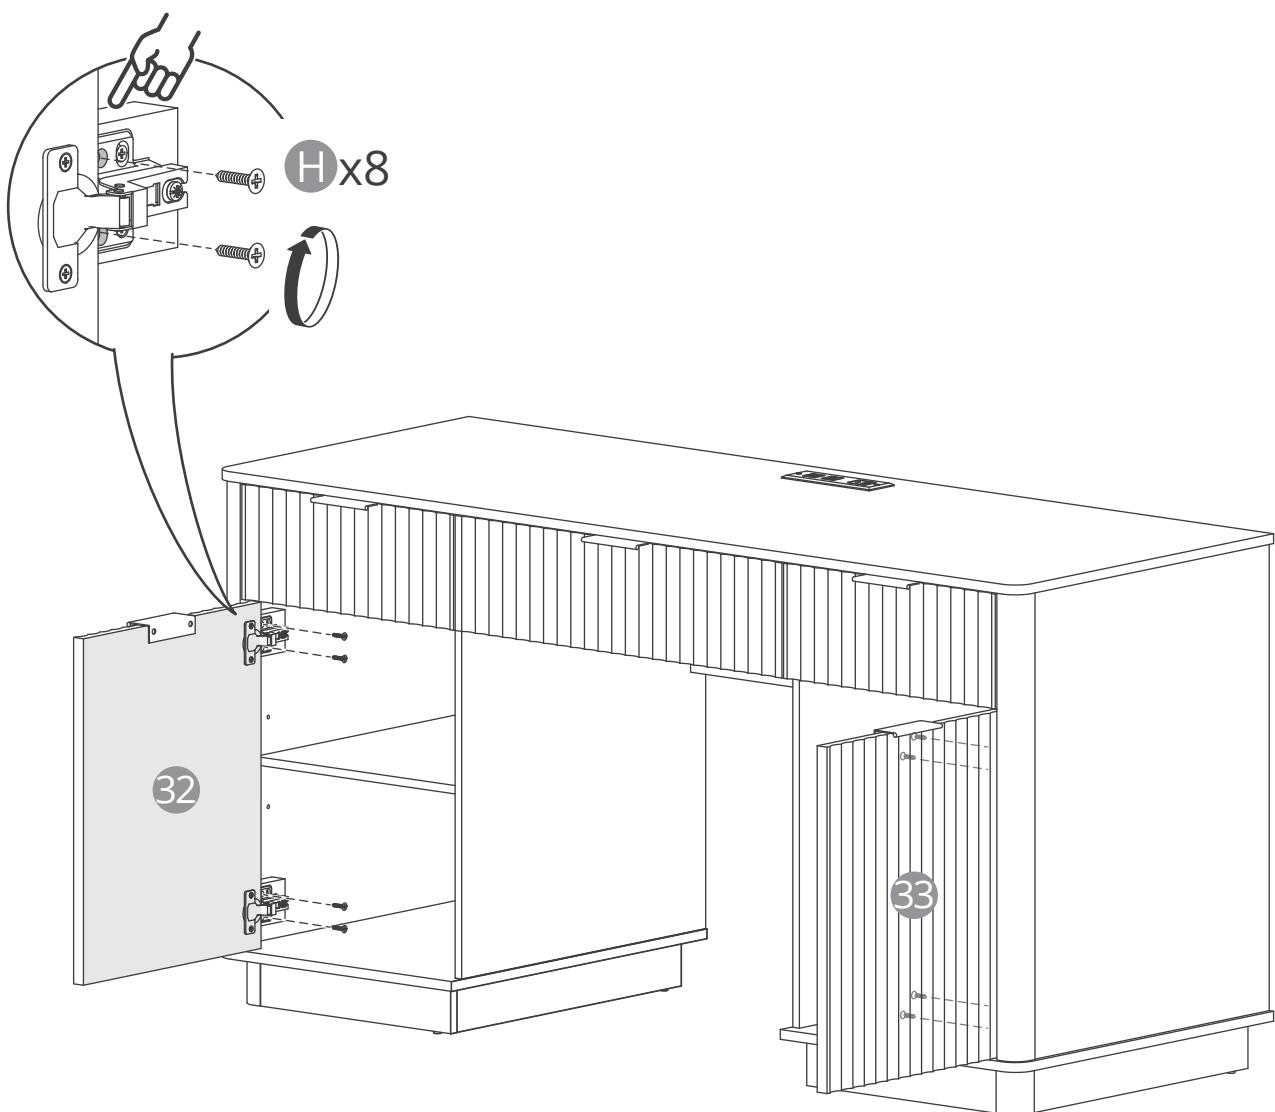

58

