 



# ASSEMBLY INSTRUCTIONS

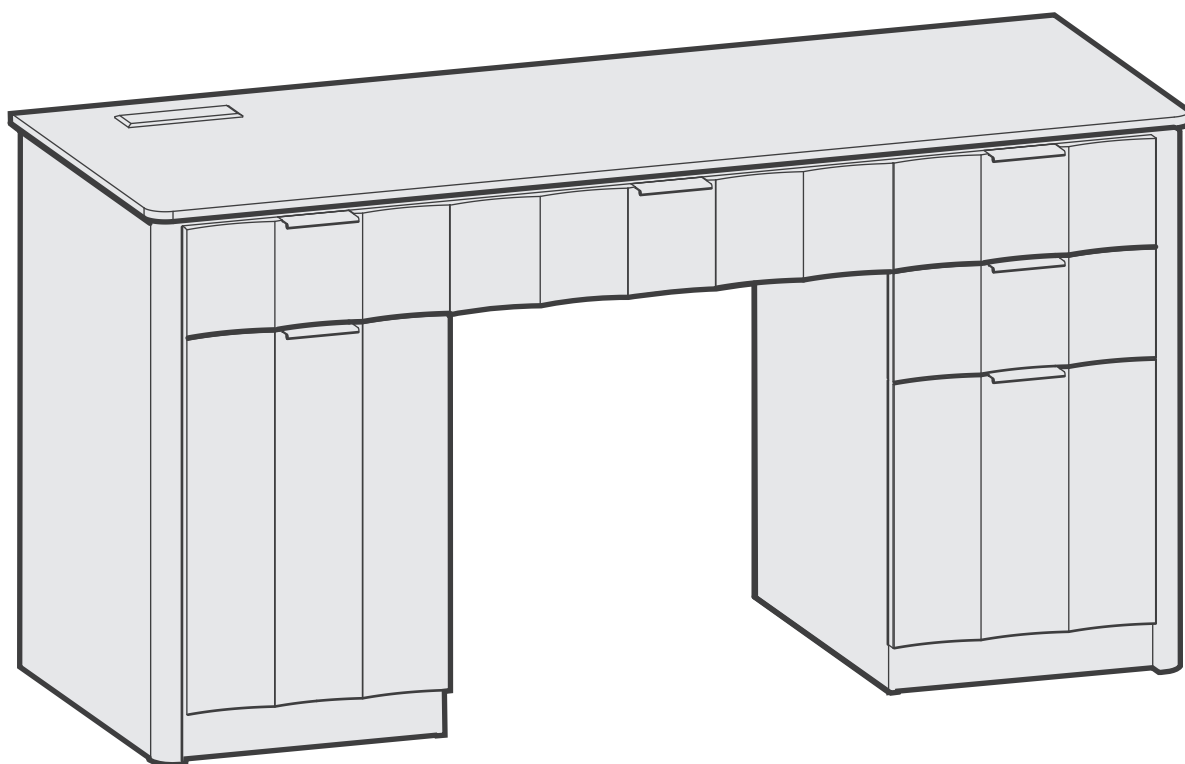

▶ Scan QR code for  
installation video



 For assembly assistance,  
✉ [support@yfs.life](mailto:support@yfs.life)    🌐 [yfs.life/WCD0002-C1](https://yfs.life/WCD0002-C1)

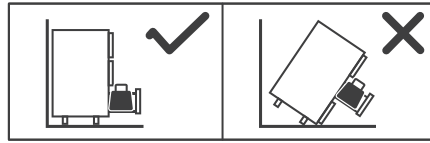

## WARNING

Keep away from fire.

This product is only for indoor use.

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

 
- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, desks, or shelves.

## IMPORTANT

- Before you begin: Lay out all parts on a clean surface to check if the tags and numbers are correct.
- Don't screw tightly before all the screws are put into the corresponding holes.
- Please use the screws correctly. Otherwise, you might damage the tabletop.


## POWER STRIP SAFETY WARNING

- Do not overload the power outlets. Ensure the total power consumption does not exceed 1500W of the outlets.
- Avoid using the desk in humid environments to prevent electric shock or short circuits.
- Regularly inspect the power cords and outlets. If any damage is found (e.g., cracks, looseness, or burn marks), stop using the product immediately and contact a professional for repair or replacement.
- Do not unplug an electrical appliance by pulling its flexible power cord. Otherwise, it may damage the wire connection and cause danger.
- Do not spill food or liquids on the outlets.
- Place the desk where children cannot easily access the power outlets.
- Use childproof outlet covers to prevent accidental contact by children.
- Educate children not to climb on or pull the desk to avoid accidents.

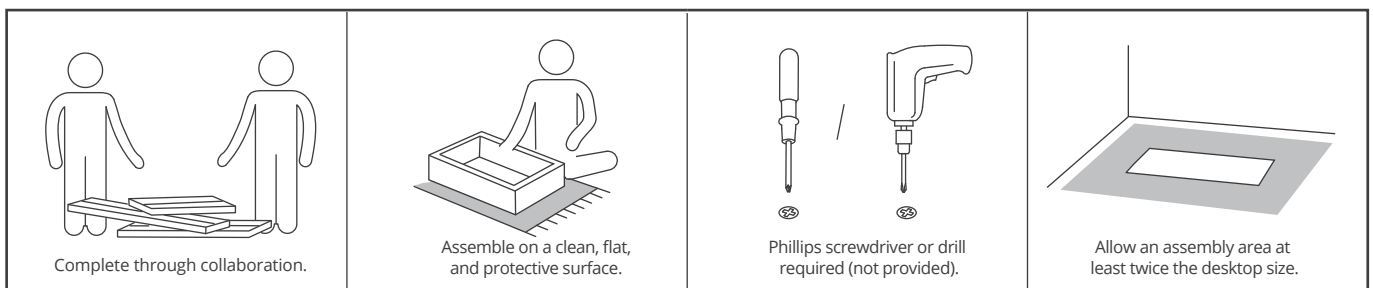




















Page 6-20


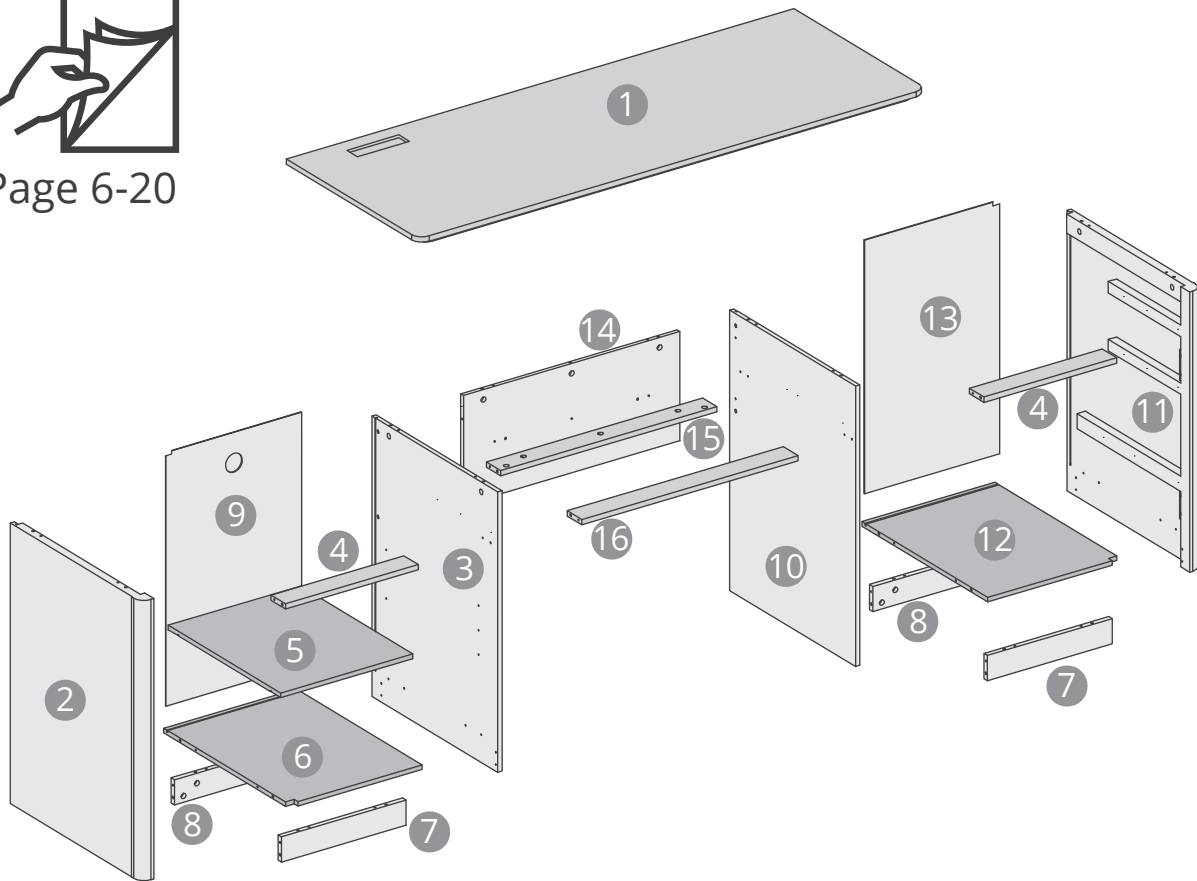 


Page 21-30

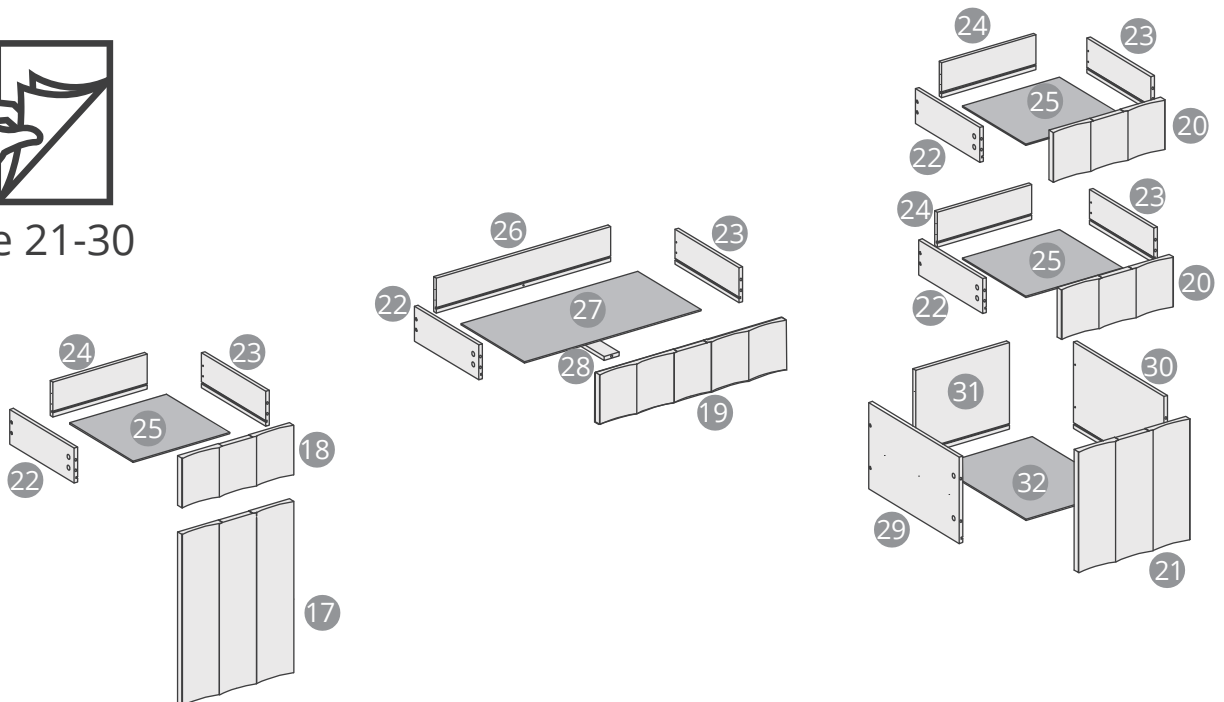 


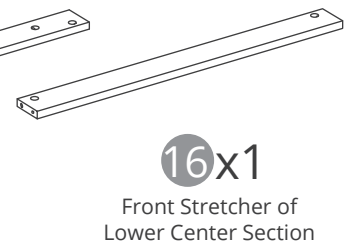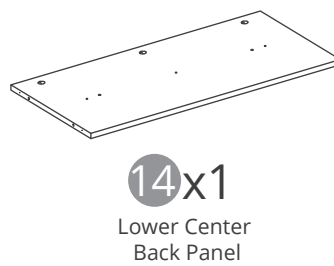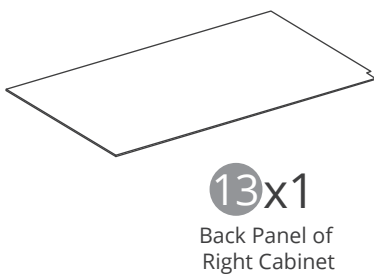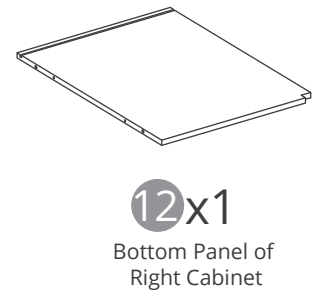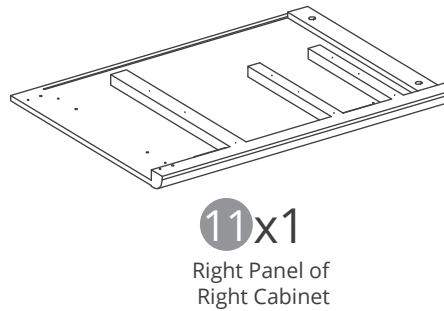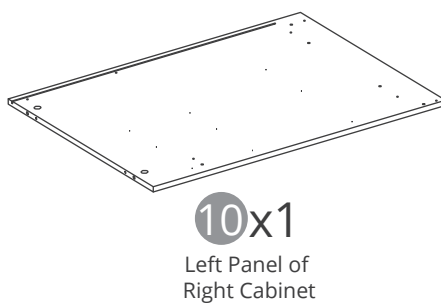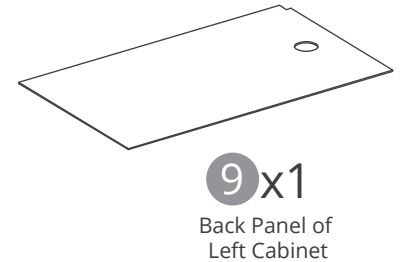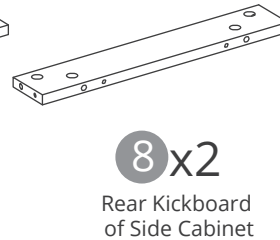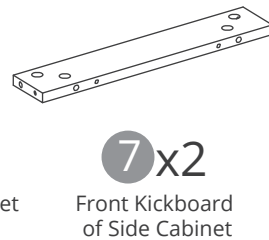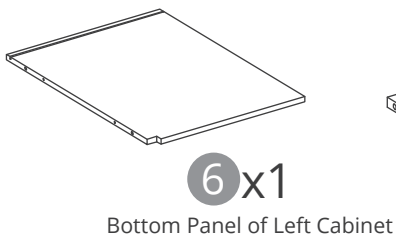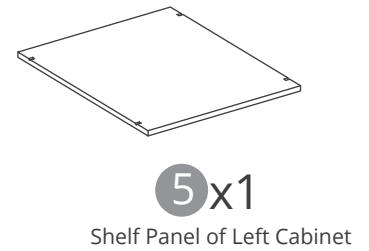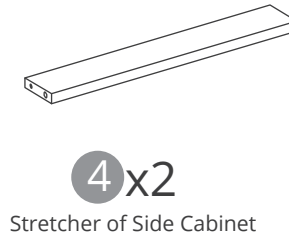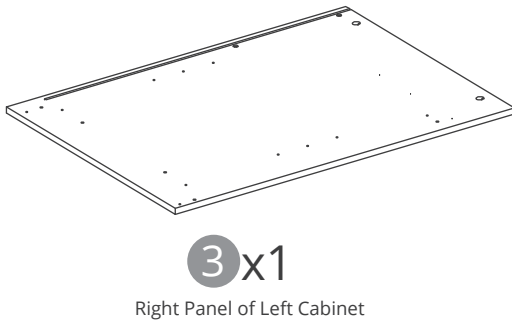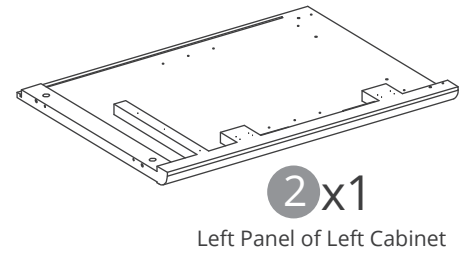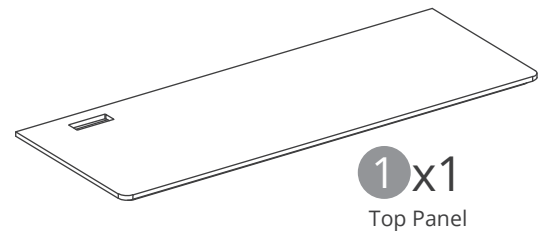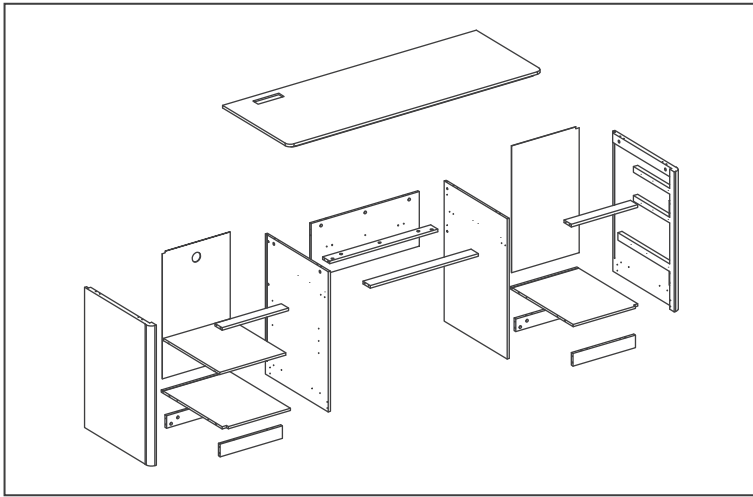                




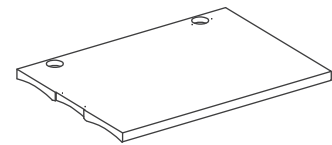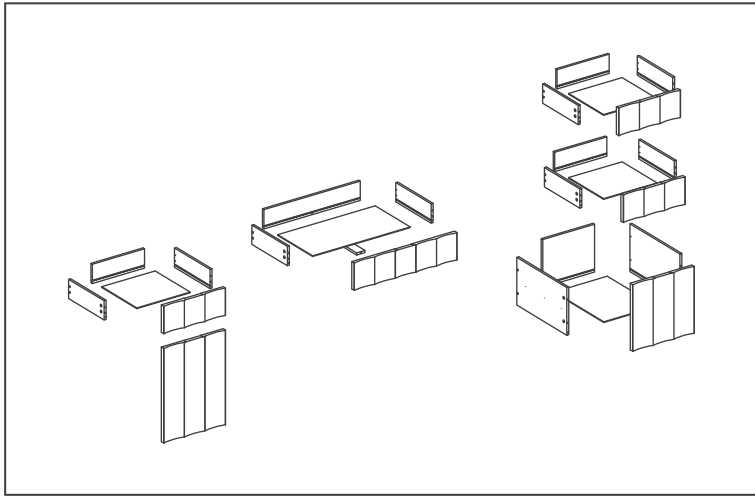  


**17x1**  
Door Panel  
of Left Cabinet

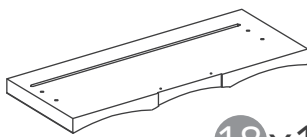 

 
**18x1**  
Drawer Front  
of Left Cabinet

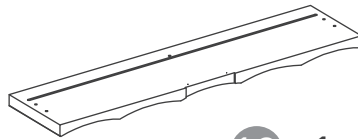


**19x1**  
Middle Drawer Front

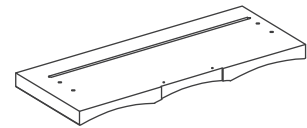 

 
**20x2**  
Upper Drawer Front  
of Right Cabinet

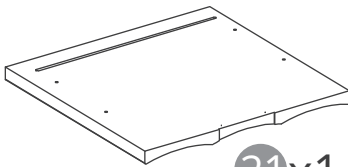

 
**21x1**  
Lower Drawer Front  
of Right Cabinet




**22x4**  
Left Panel of  
Small Drawer

 

 
**23x4**  
Right Panel of  
Small Drawer




**24x3**  
Back Panel  
of Small Drawer

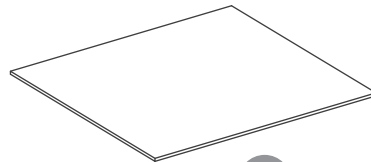 

 
**25x3**  
Bottom Panel  
of Small Drawer



 
**26x1**  
Back Panel  
of Middle Drawer

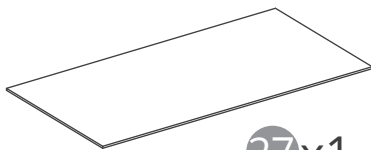

 
**27x1**  
Bottom Panel  
of Middle Drawer



 
**28x1**  
Support Rail Under  
Middle Drawer Bottom

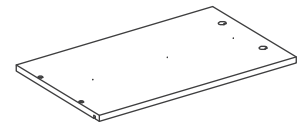


**29x1**  
Left Panel  
of Large Drawer

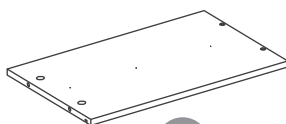 

 **30x1**  
Right Panel  
of Large Drawer

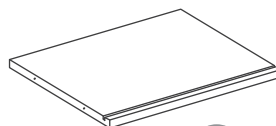

**31x1**  
Back Panel  
of Large Drawer

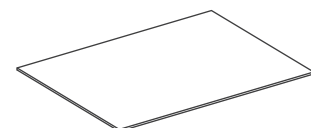 

**32x1**  
Bottom Panel  
of Large Drawer



Ø6x30mm

**A**x48

Right Panel  
of Large Drawer



L-25mm

**B**x67

Cam Lock Screw



Ø15x9mm

**C**x67

 
Cam Lock Nut



M3x12mm

**D**x62


Countersunk  
Phillips Screw



M4x50mm

**E**x4

 
Countersunk  
Phillips Screw



M4x35mm

**F**x21

 Pan Head  
Phillips Screw

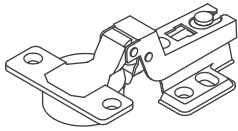

**G**x2

 
Hinge



M3.5x15mm


**H**x24

Countersunk  
Phillips Screw




**I**x4

 Shelf Support Pin

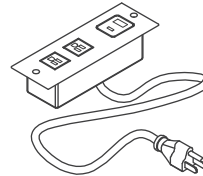


**J**x1

 Power Outlet

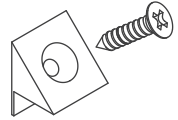


**K**x12

 Back Panel Clip

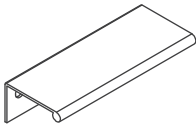

**L**x6

 Handle

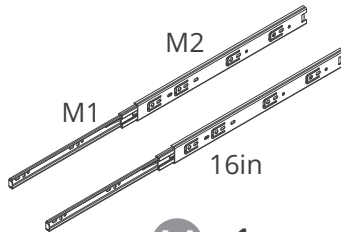


M2

M1

16in


**M**x1

 Full Extension  
Drawer Slide

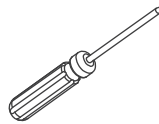


**N**x1

 Phillips  
Screwdriver

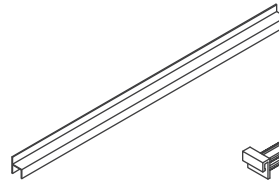


**O**x2

 Hanging File Rail

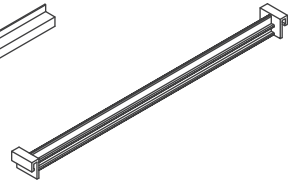


**P**x2

 Hanging File Rod

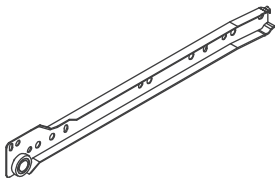


**CL**x4

 Left Cabinet Slide

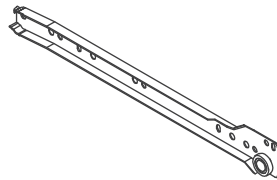


**CR**x4

 Right Cabinet Slide

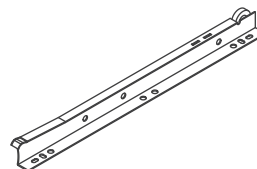

**DL**x4


 
Left Drawer Slide

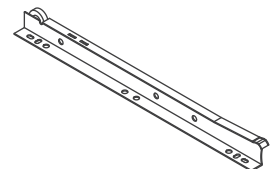




**DR**x4

Right Drawer Slide


# 1

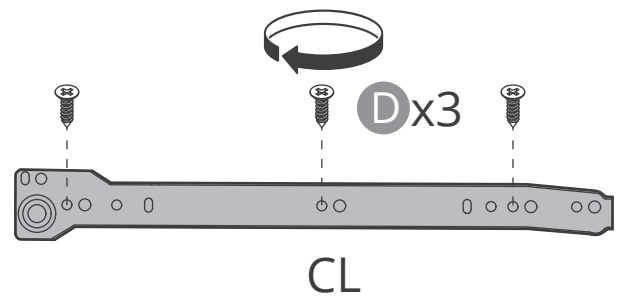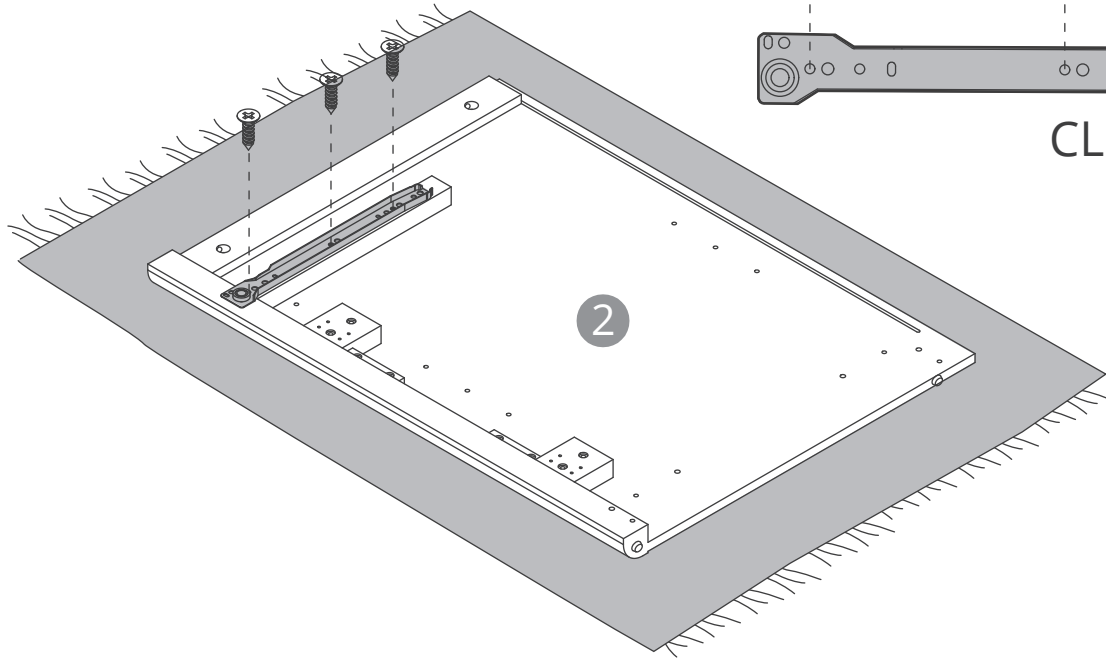  


# 2

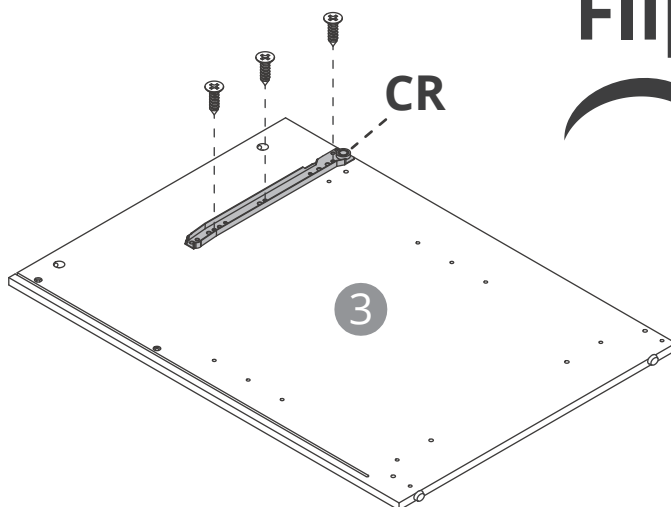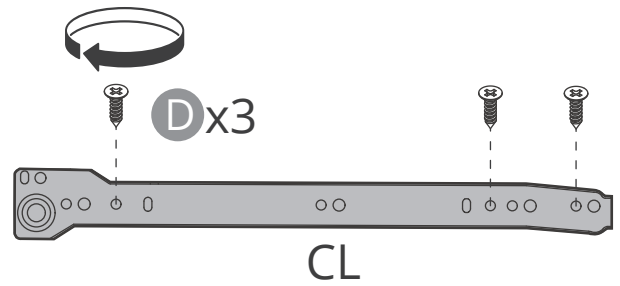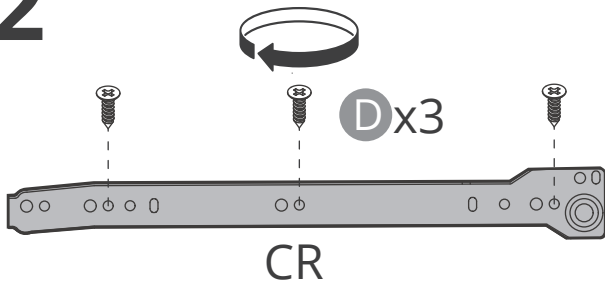   


Flip

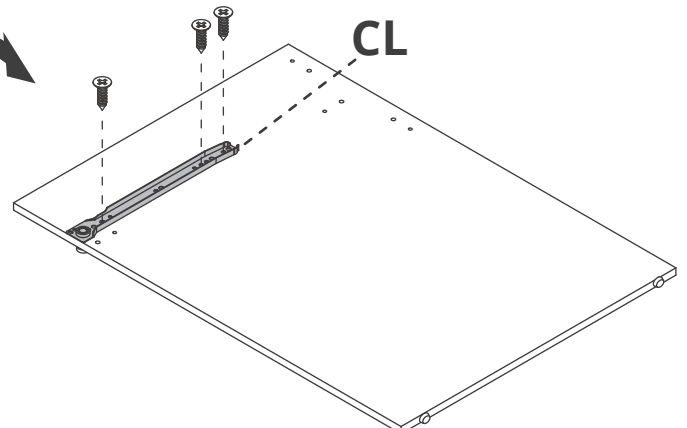 


# 3

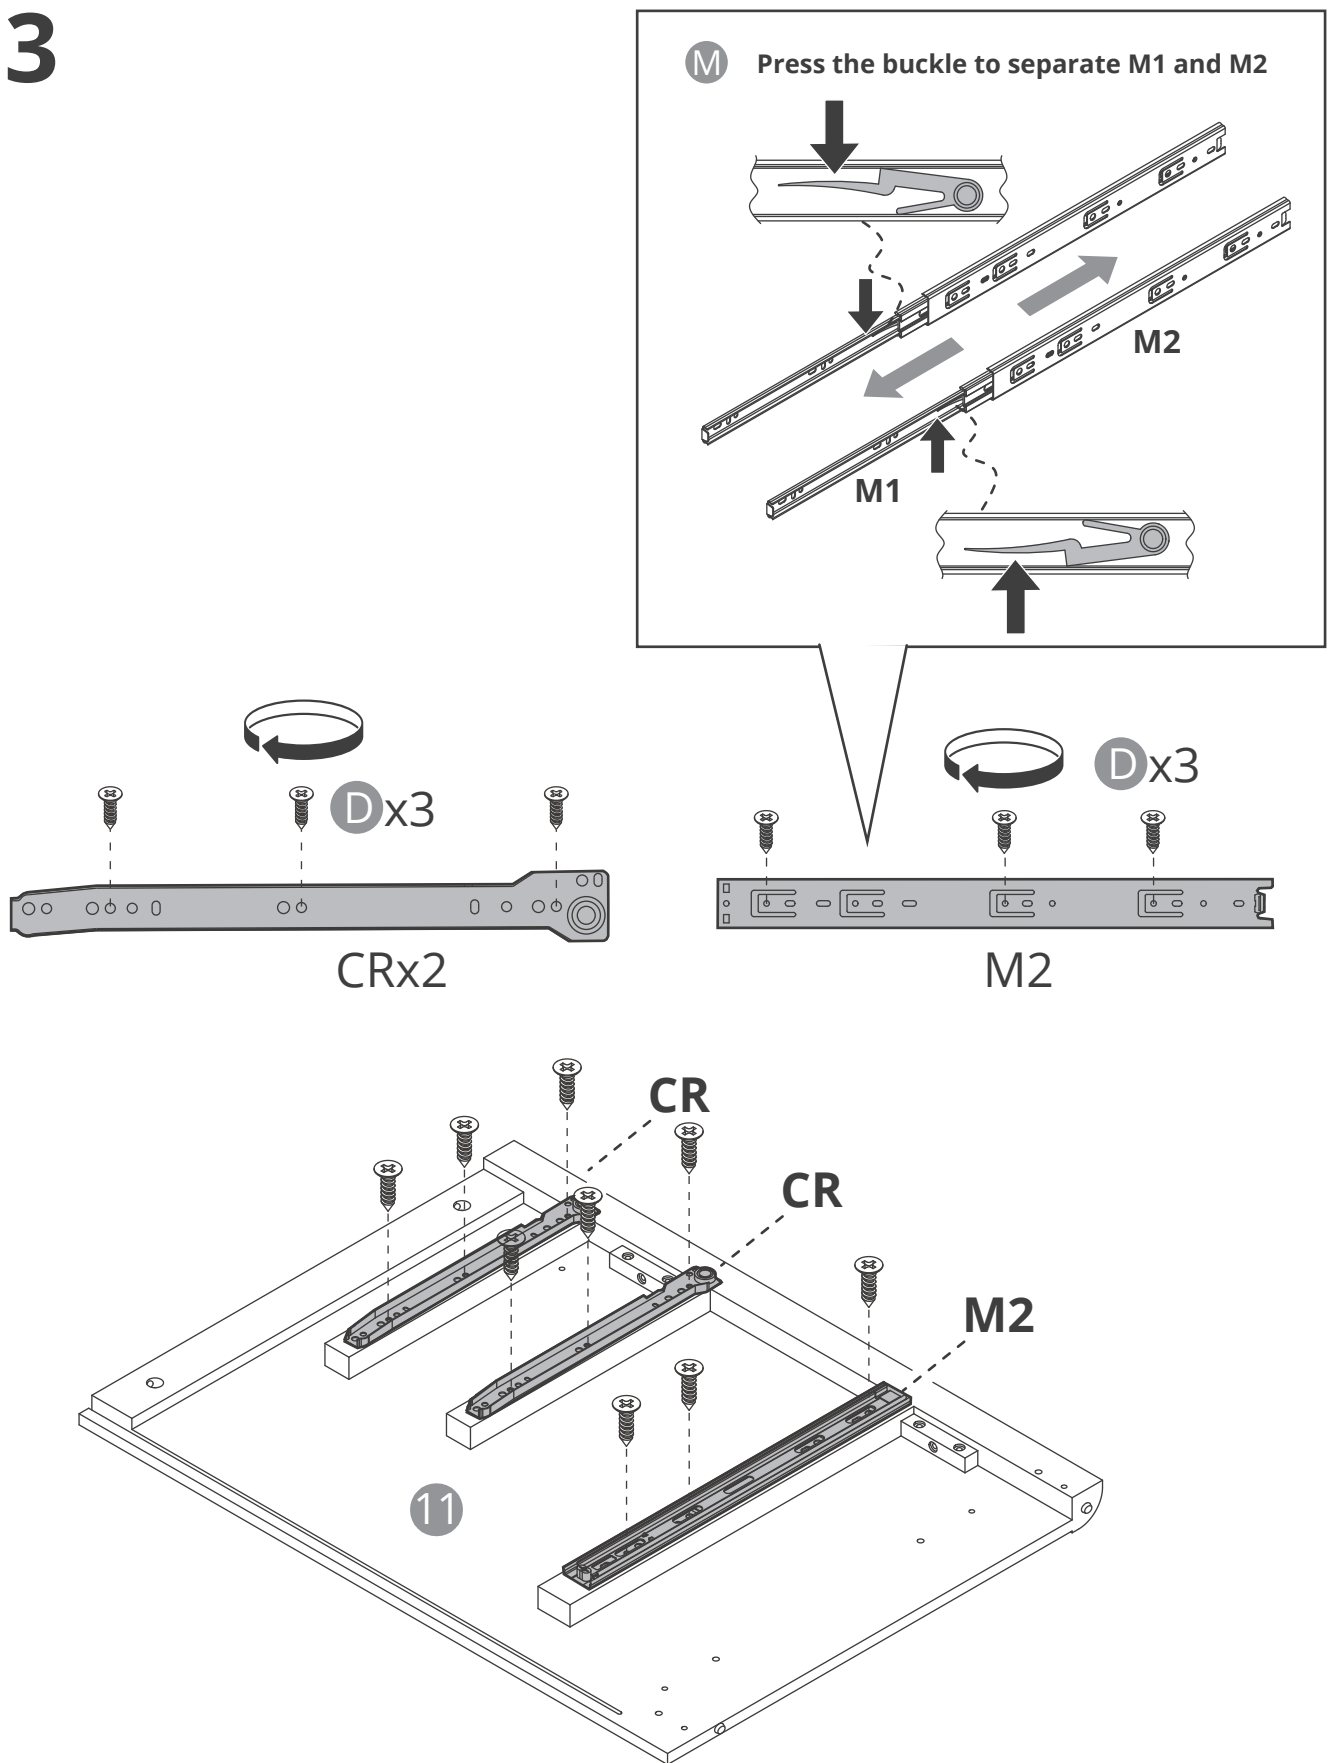 


# 4

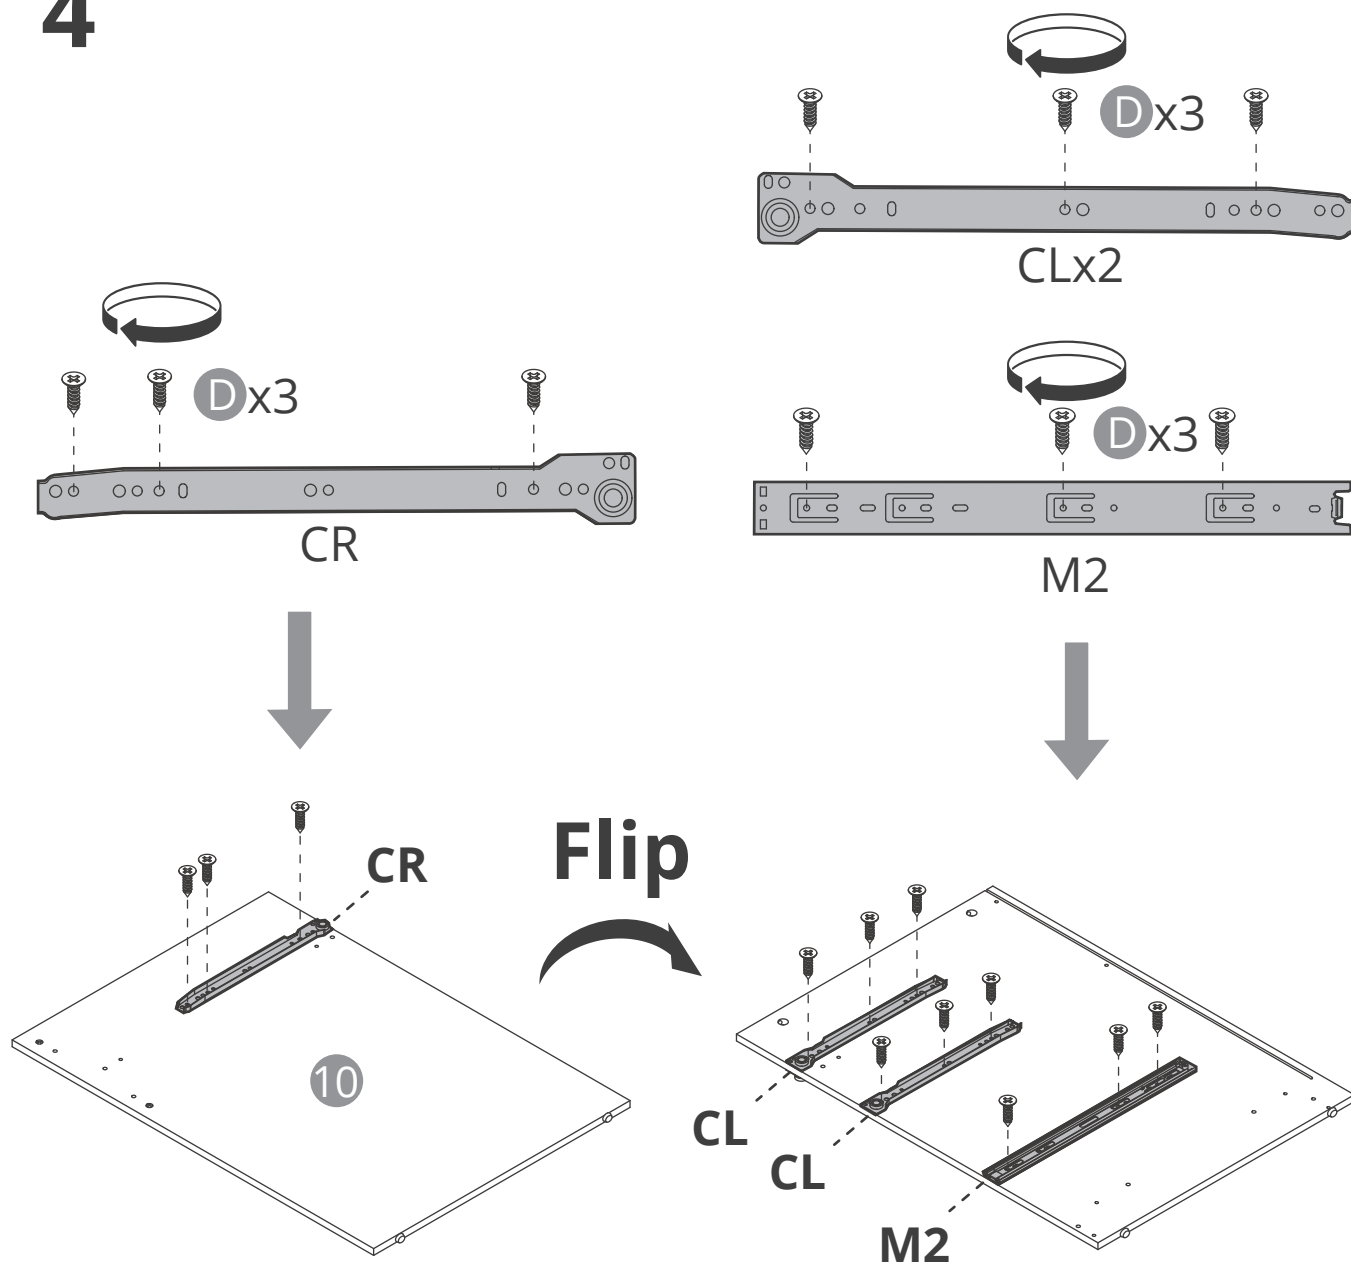 


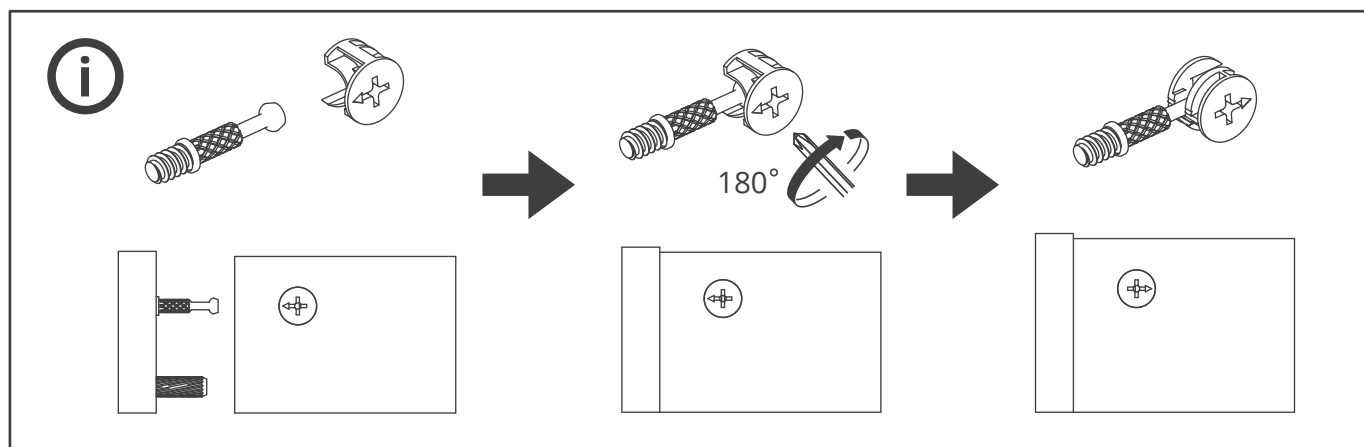 


5

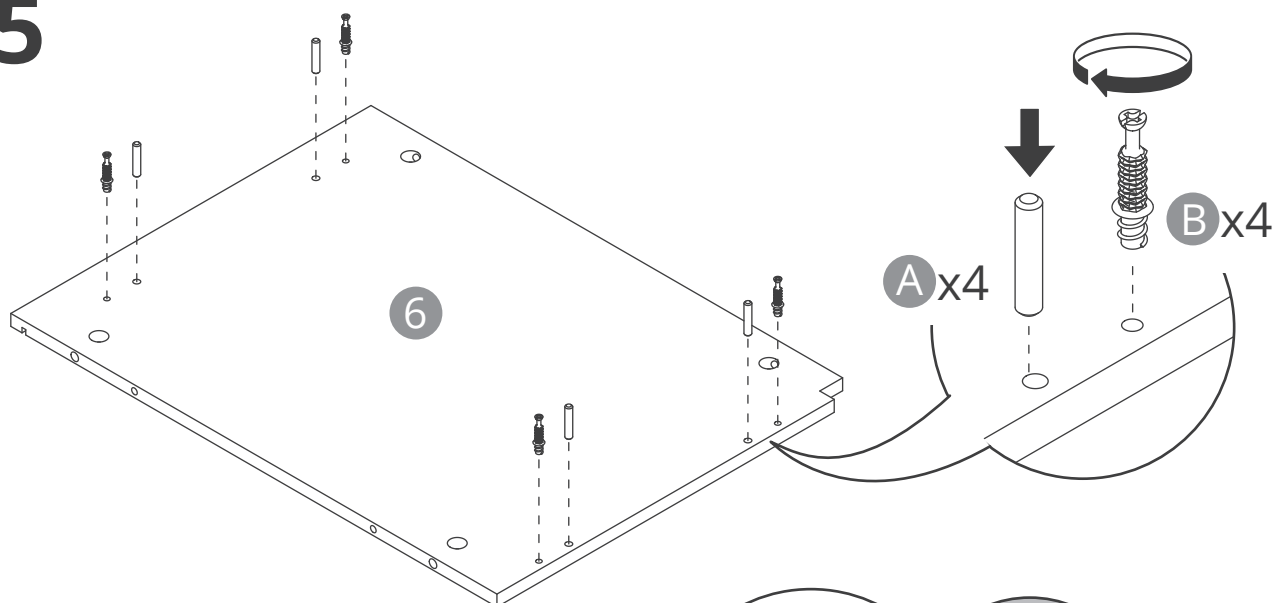 


6

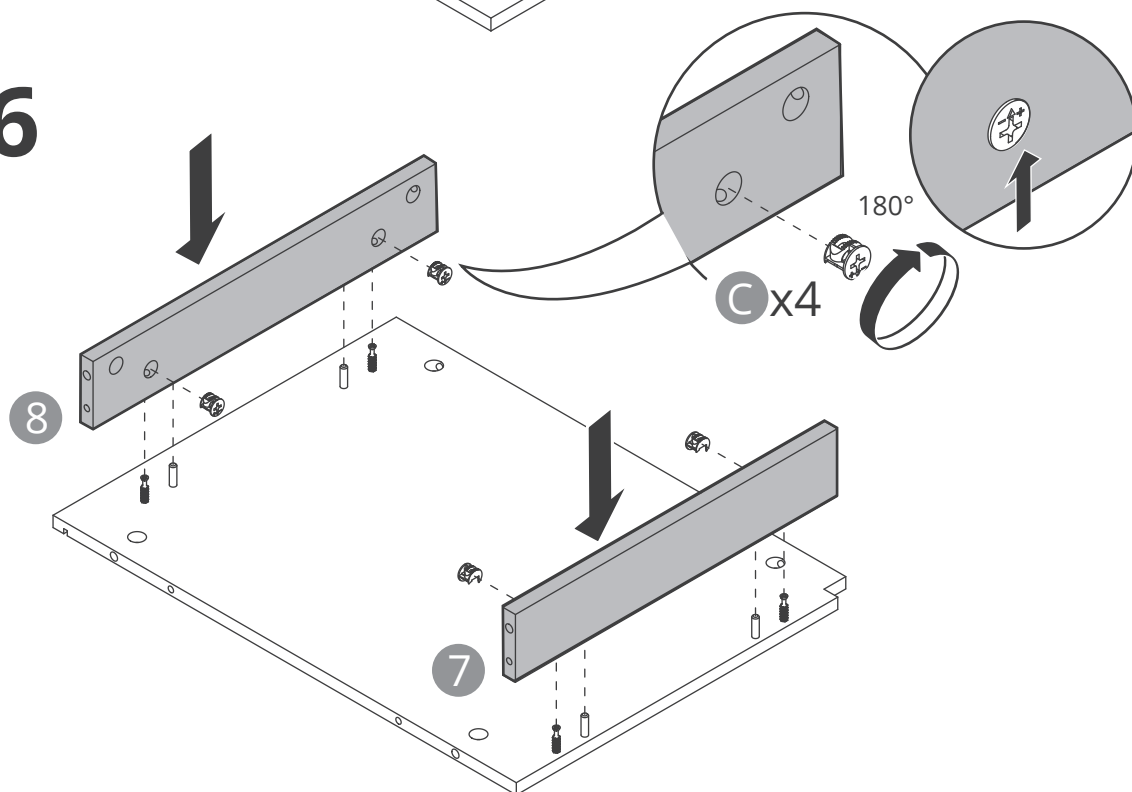 


# 7

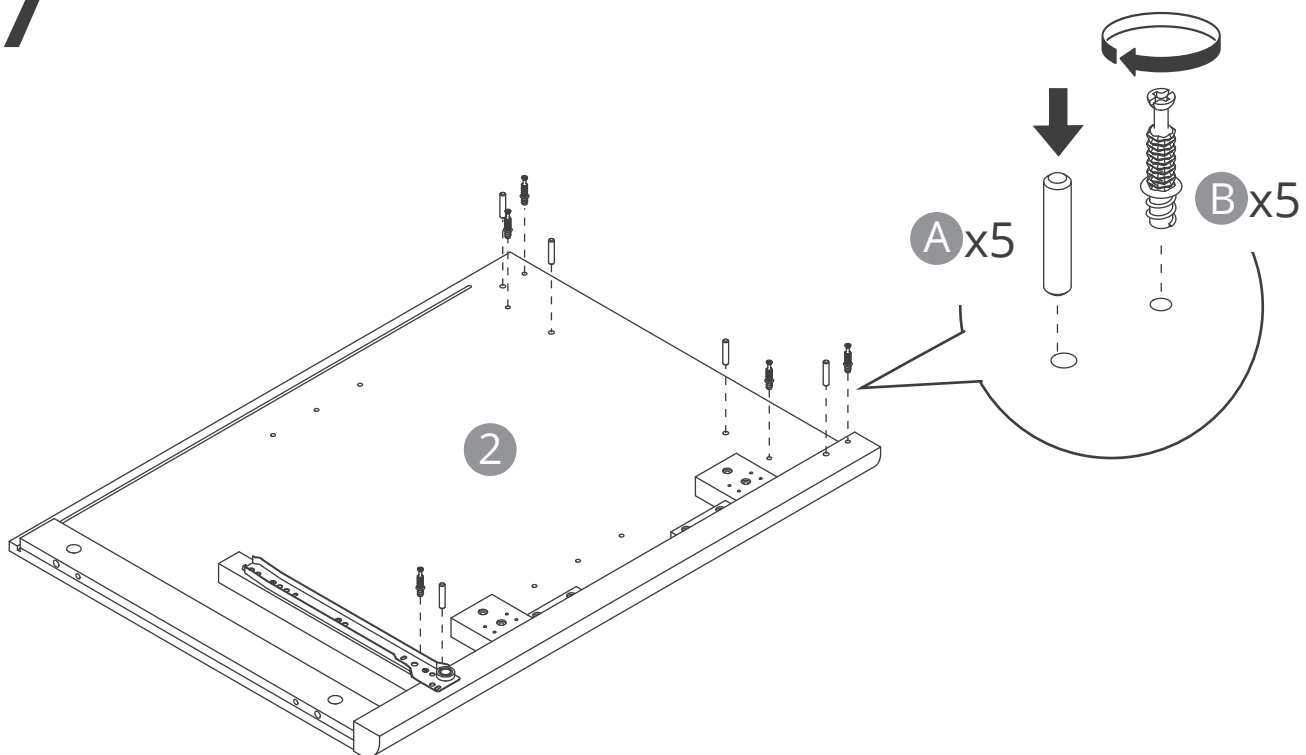 


# 8

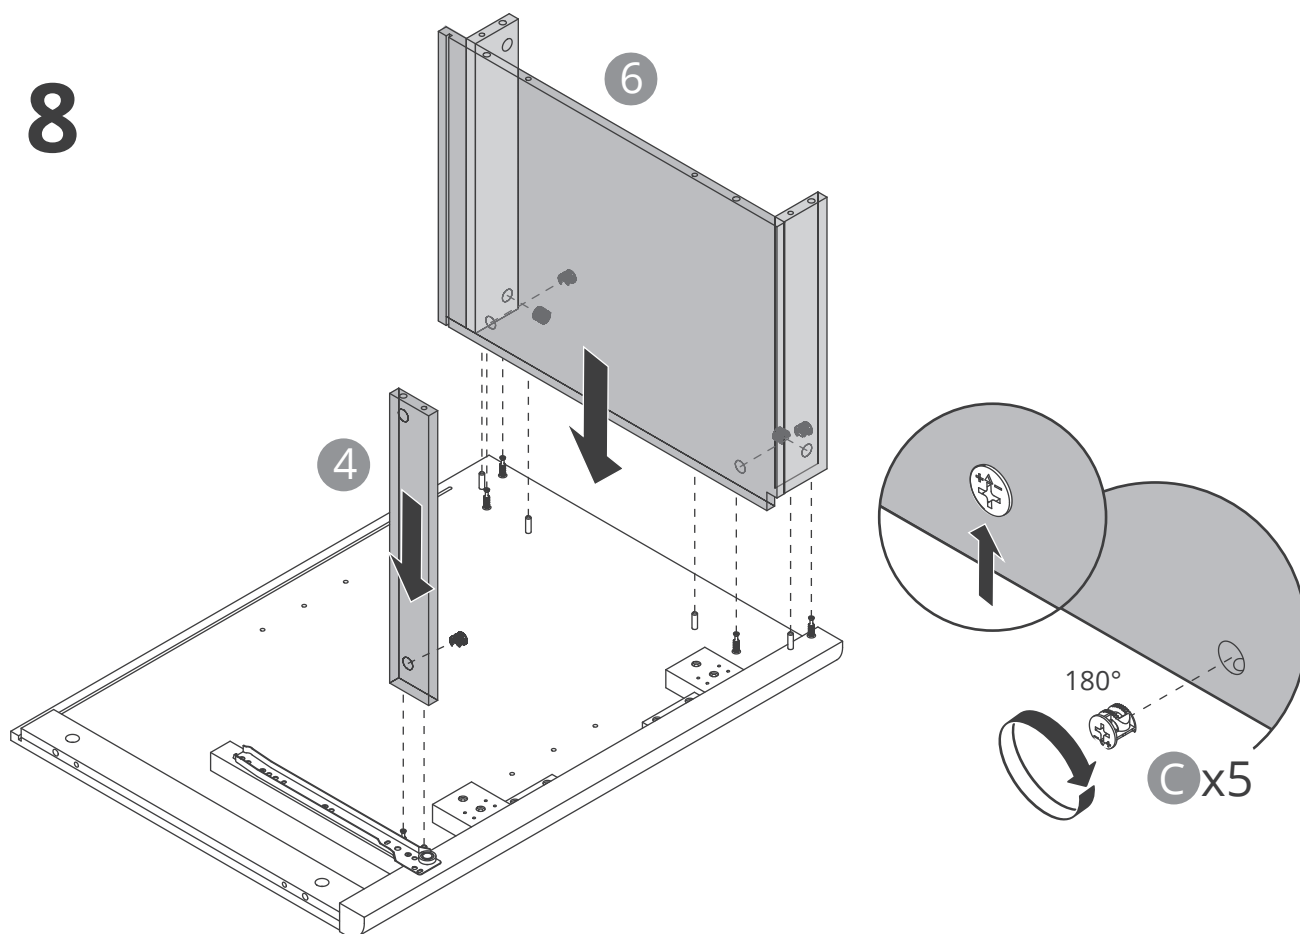 




# 9

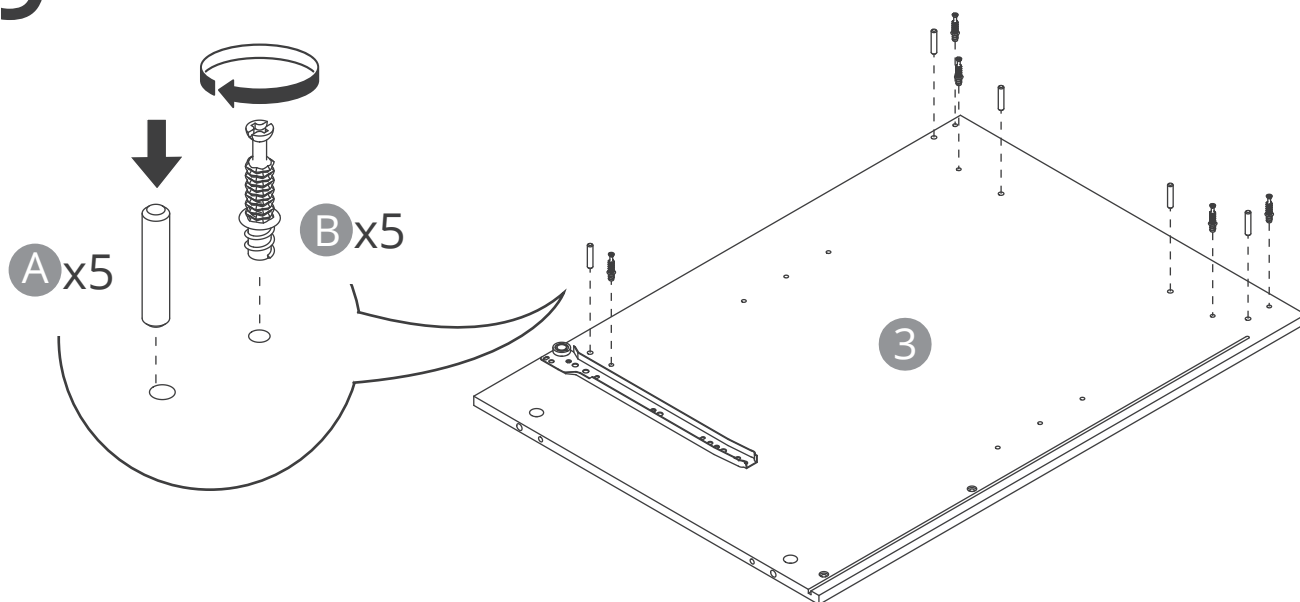 

# 10


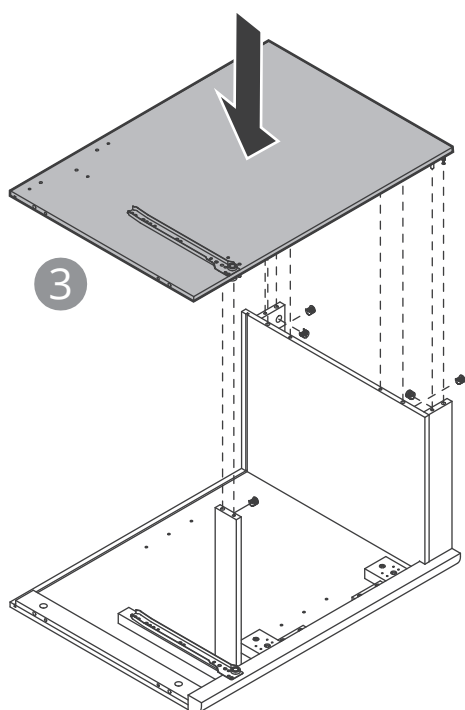 


# 11

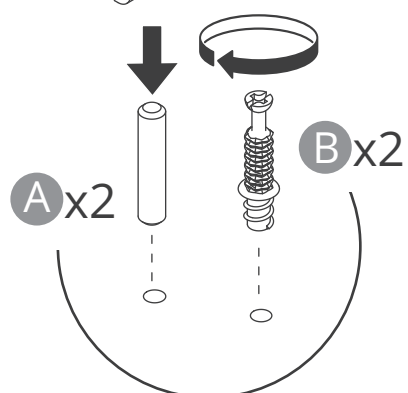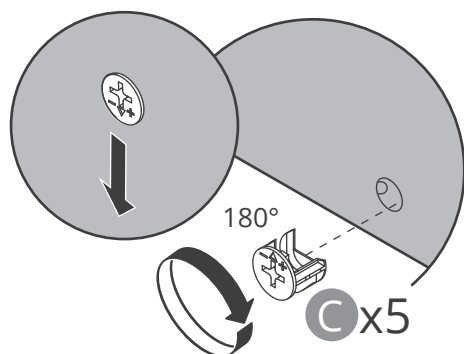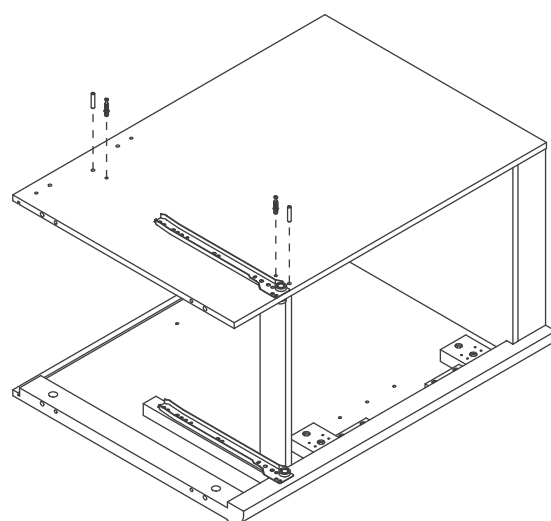   





# 12

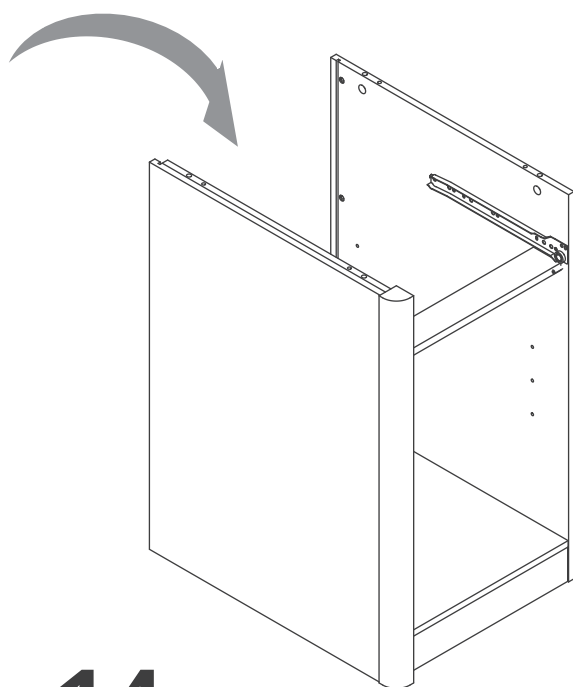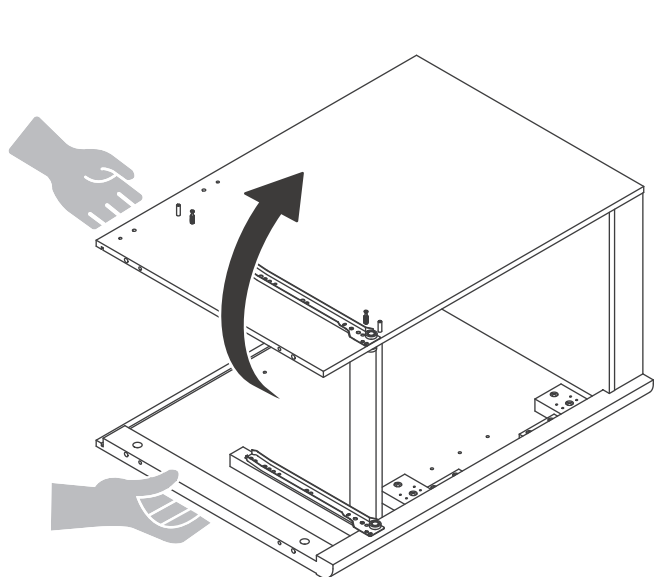  


# 13

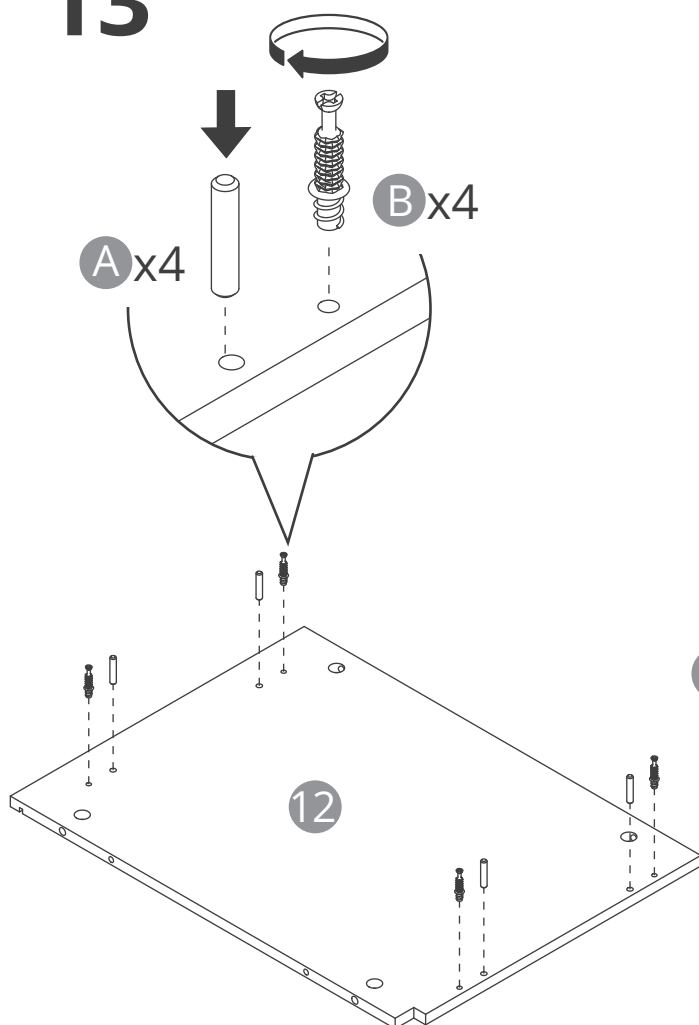 


# 14

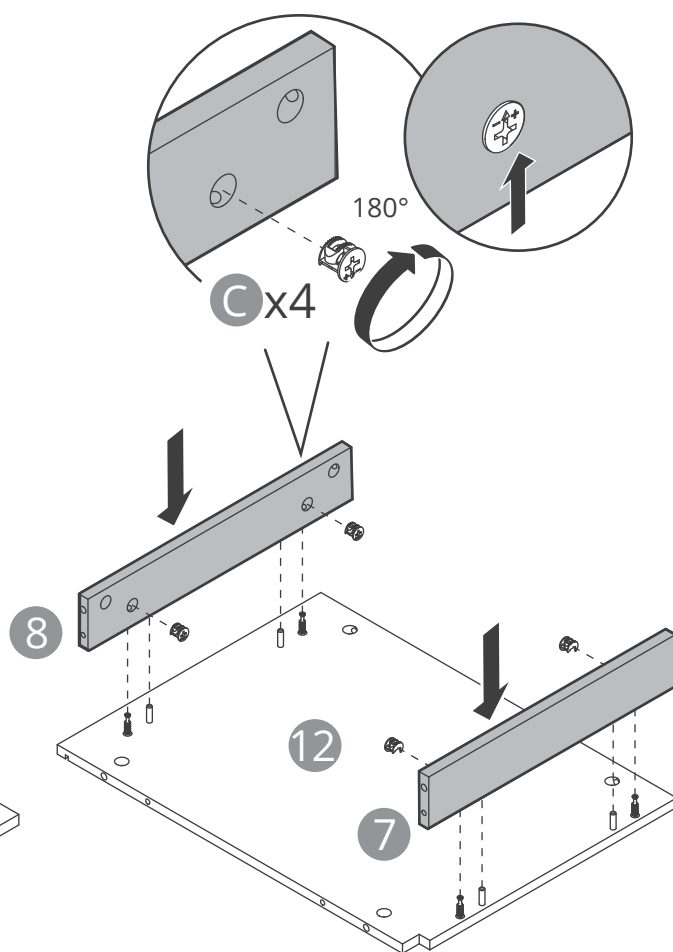 


# 15

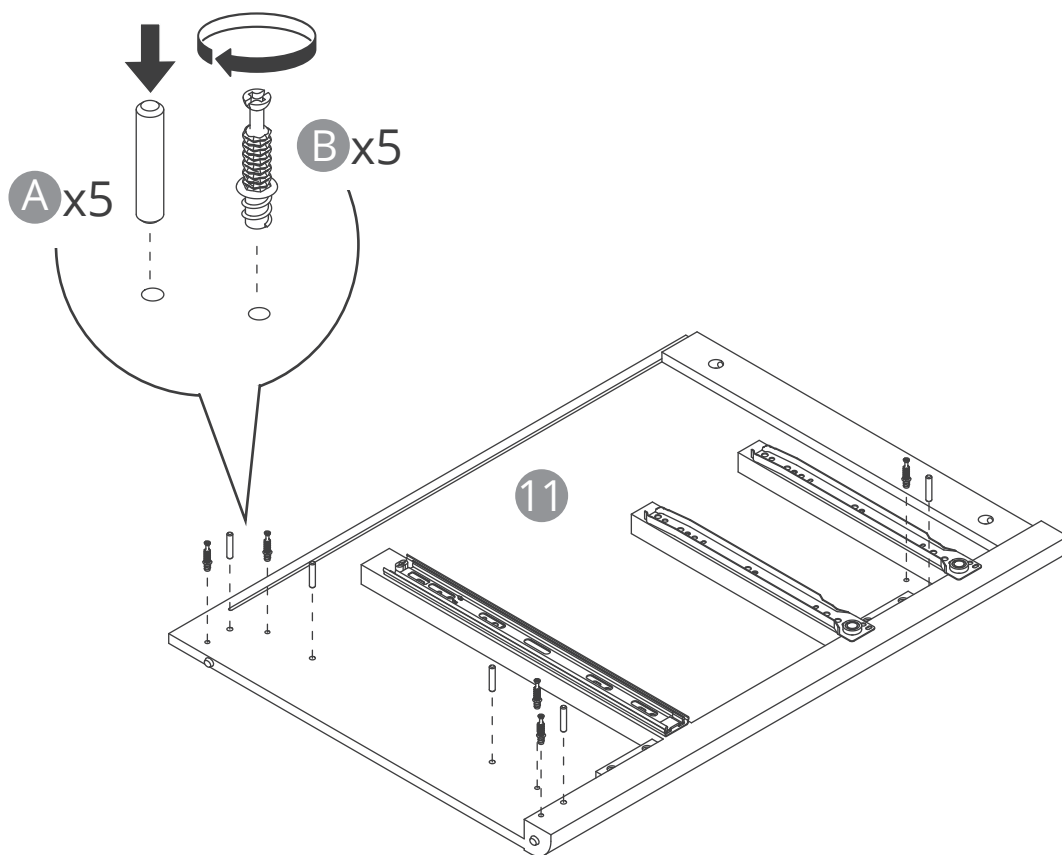 


# 16

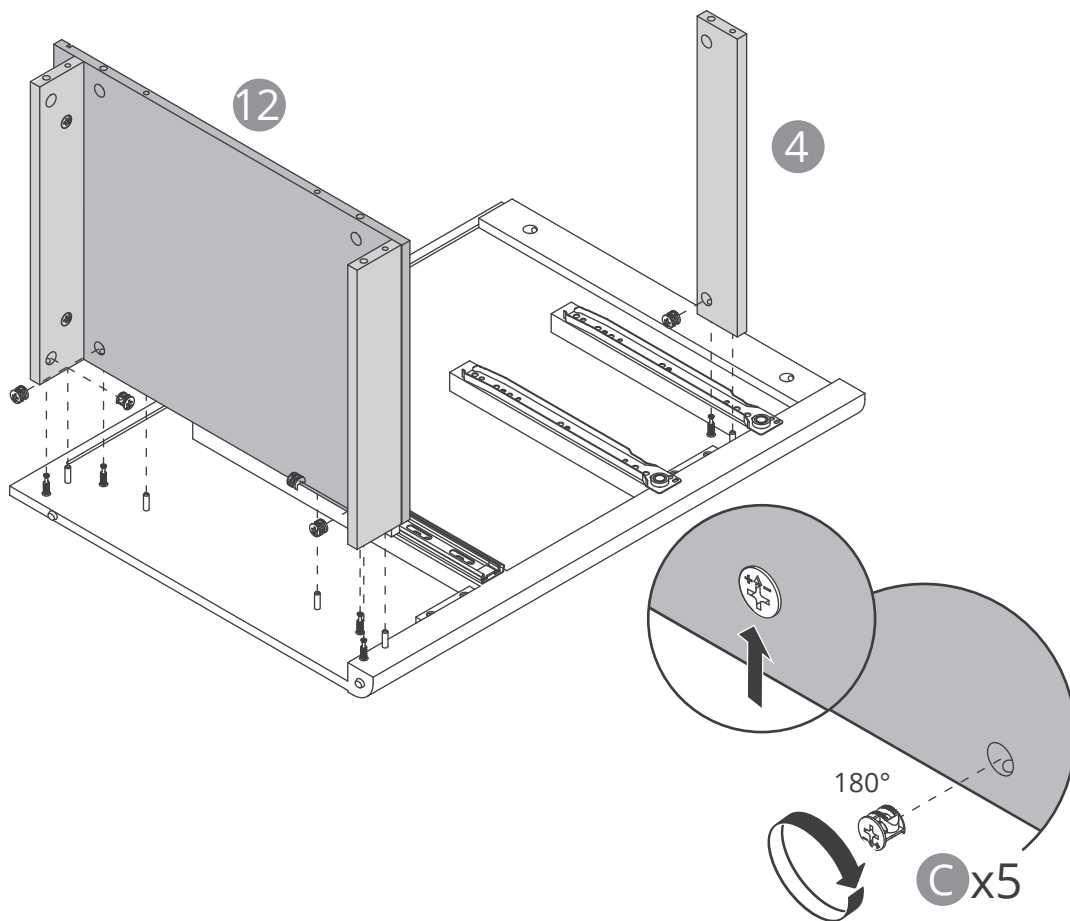 


# 17

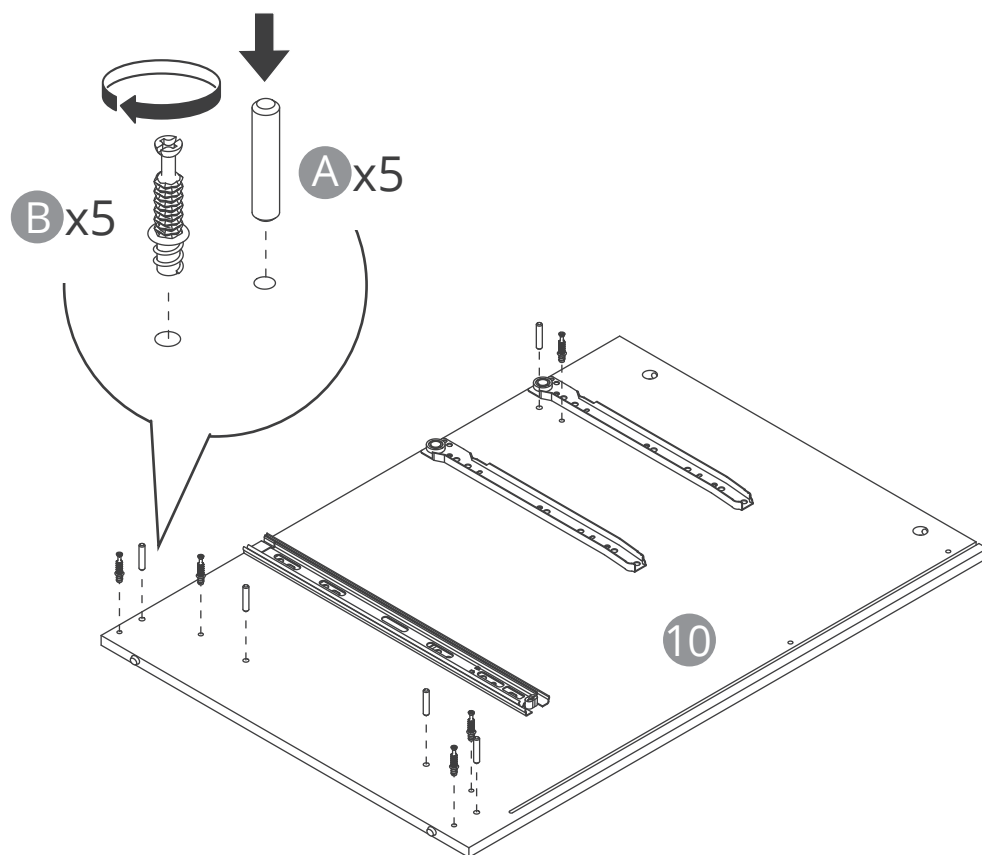 


# 18

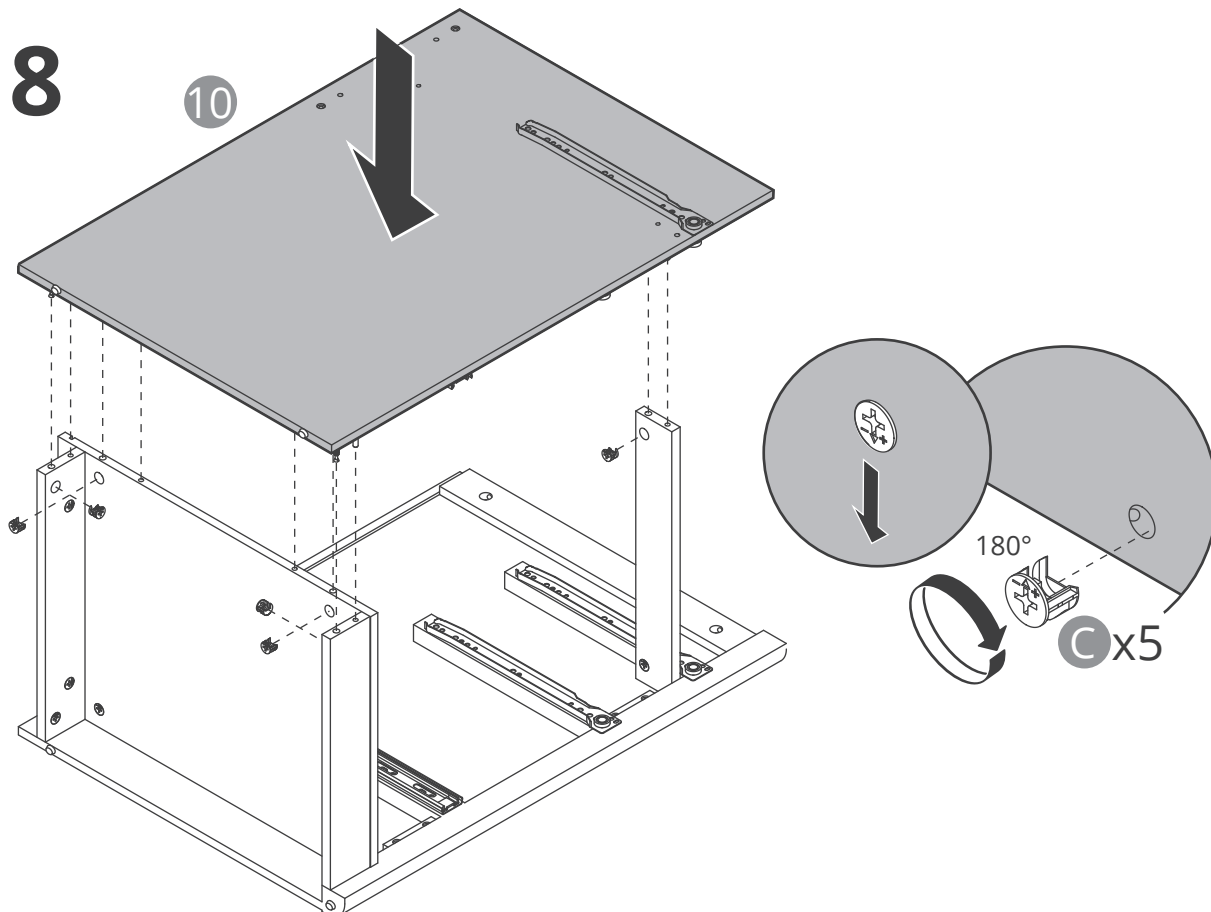 


# 19

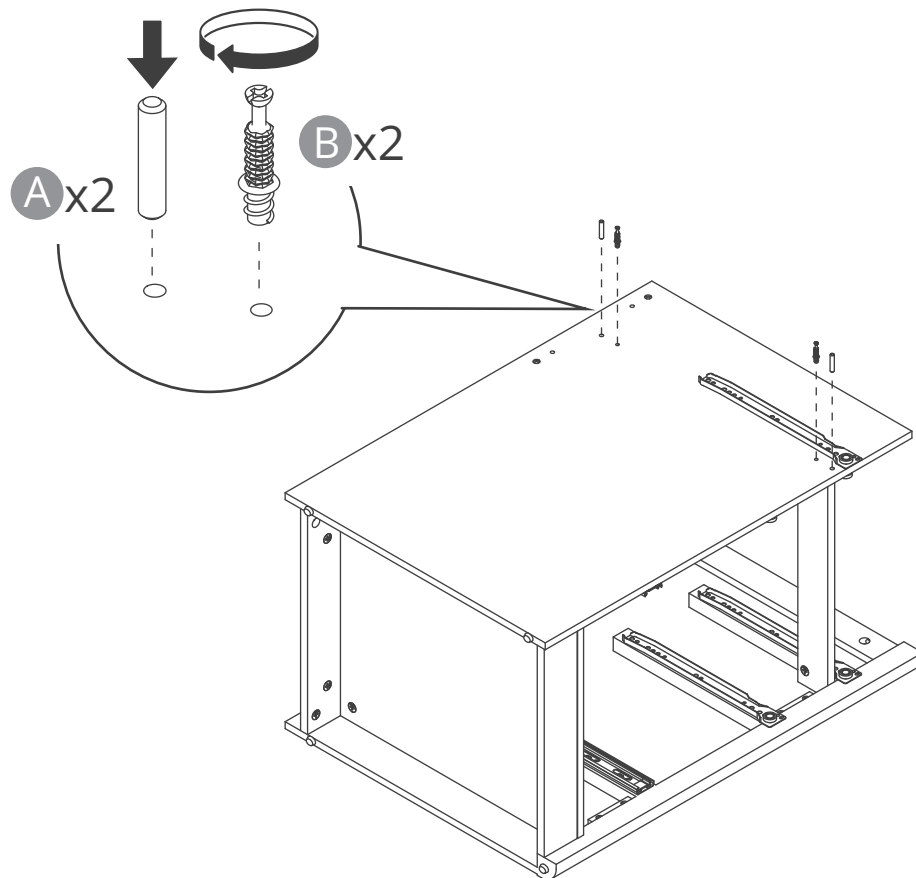 


# 20

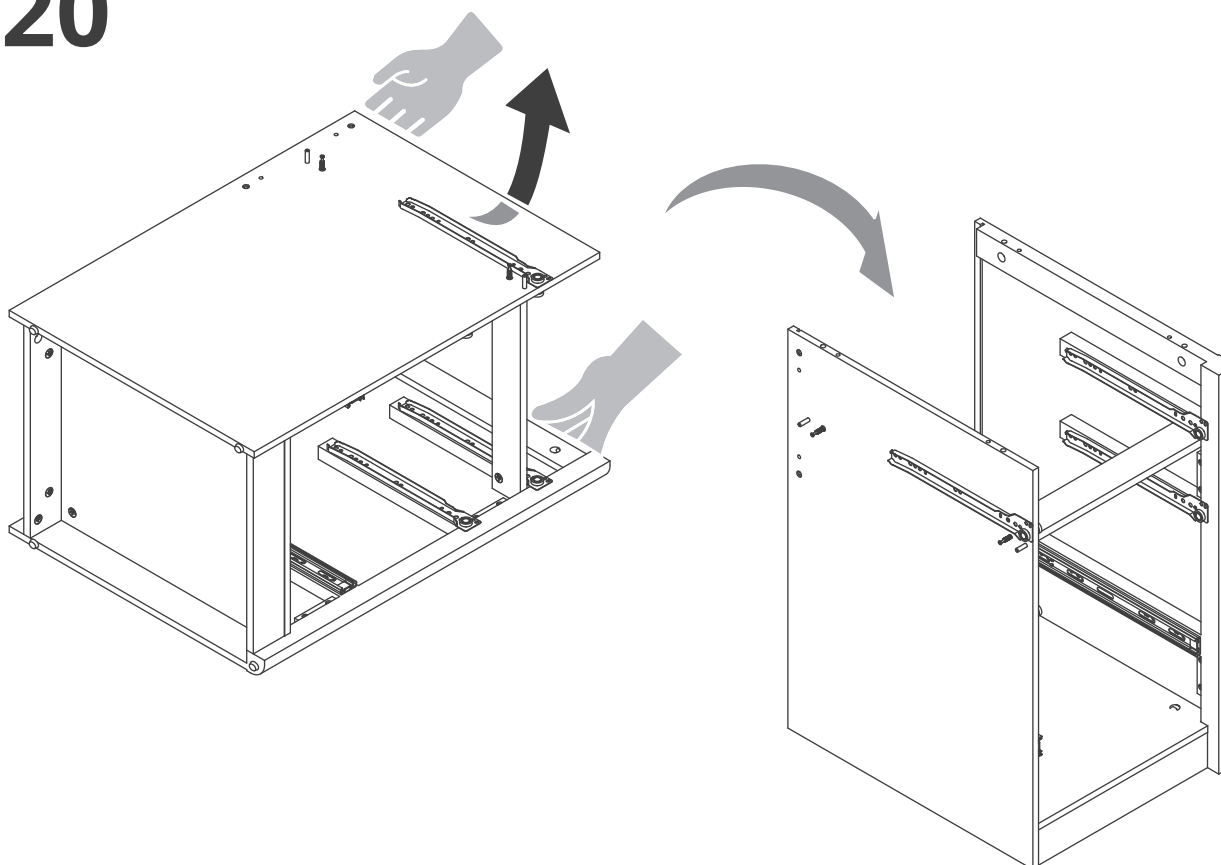 


# 21

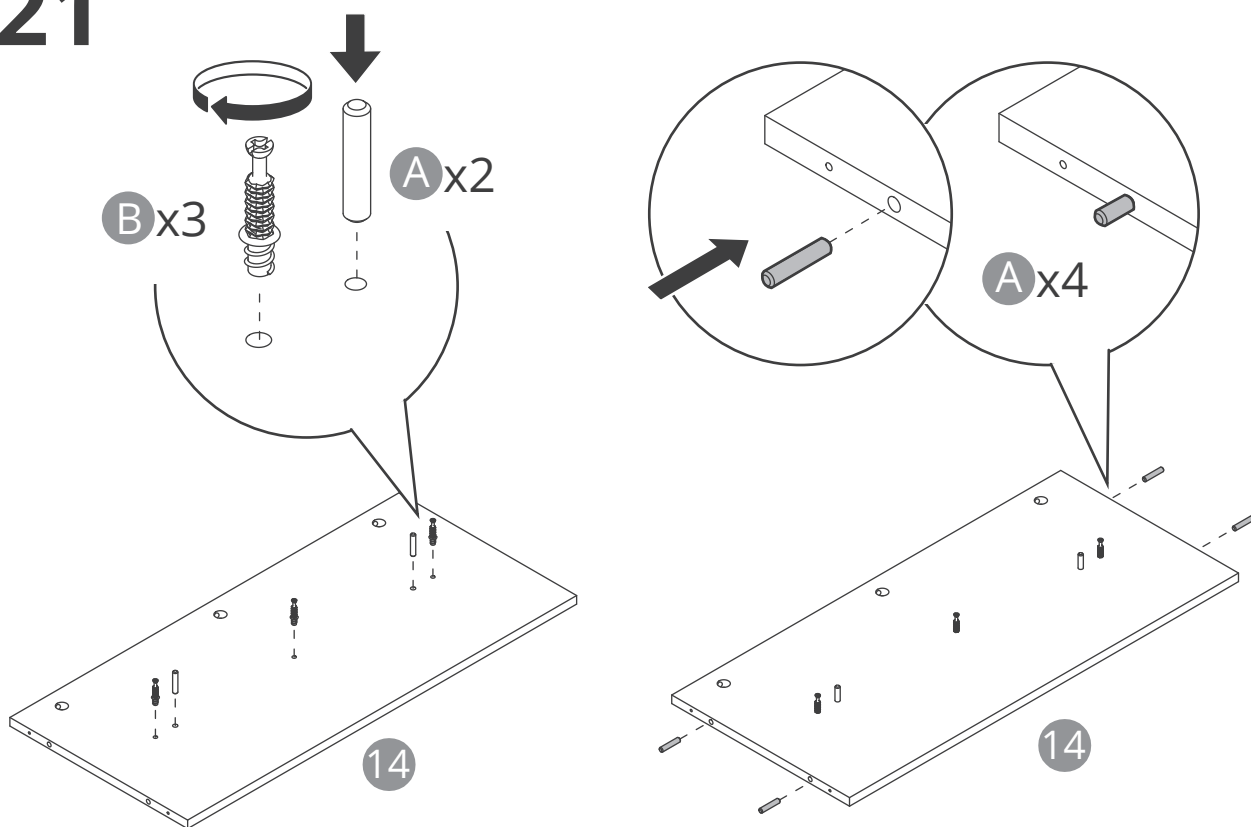 


# 22

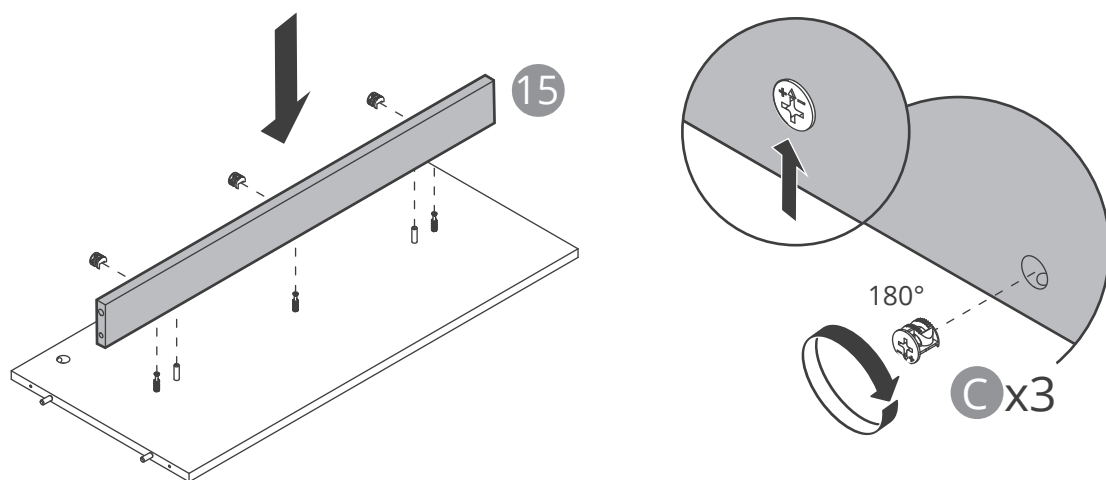 


# 23

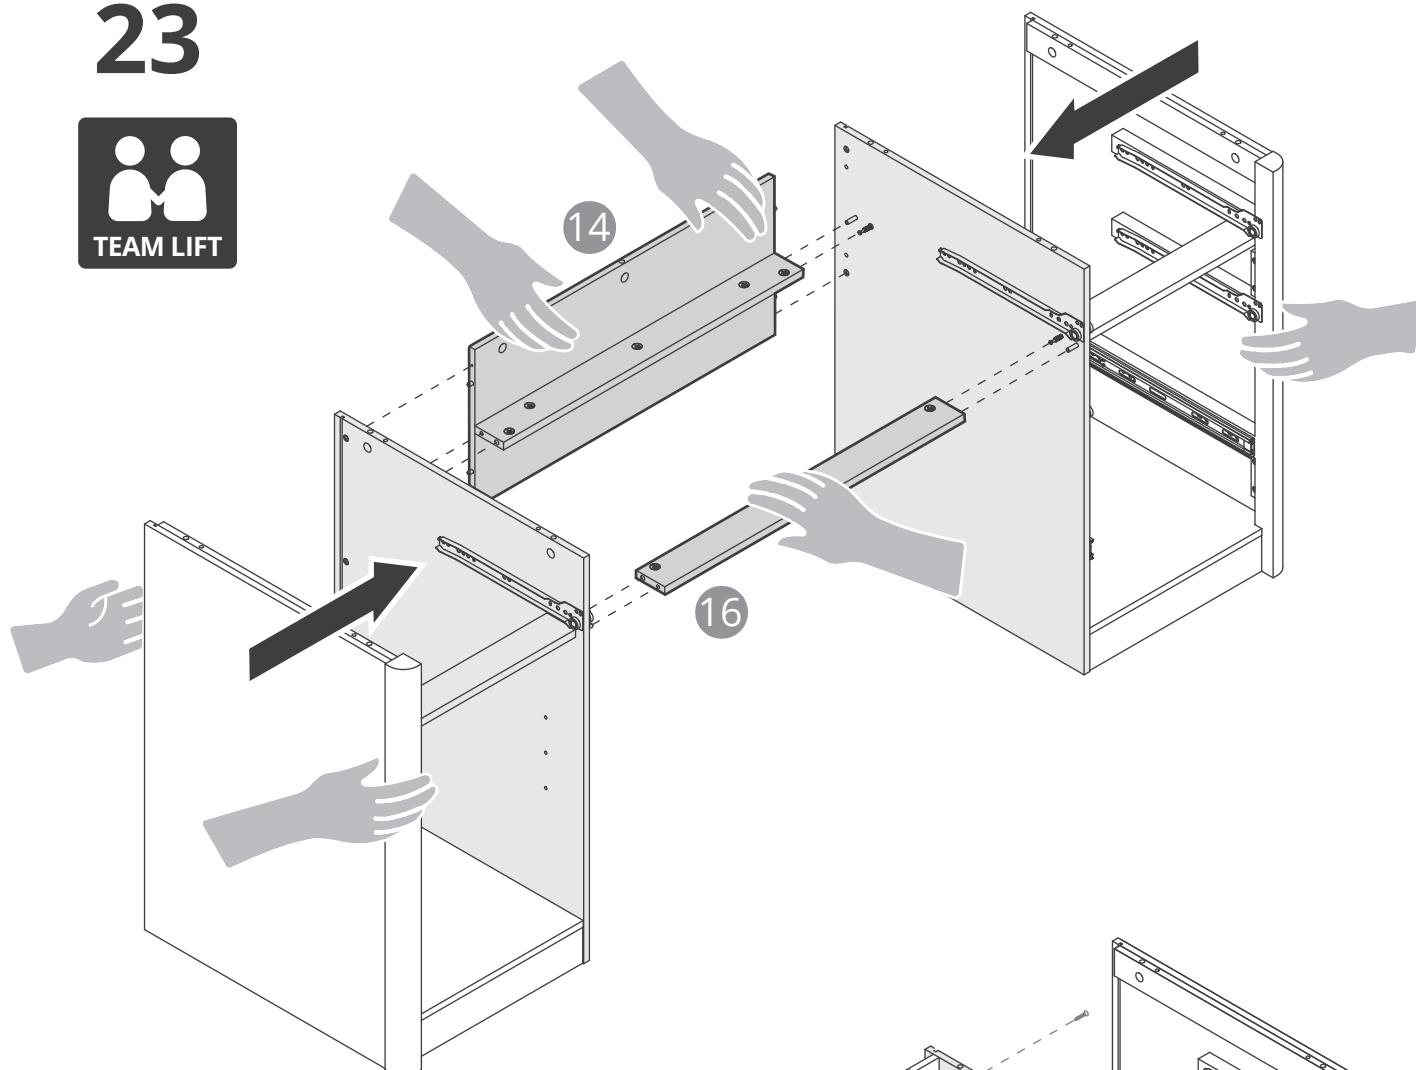 


# 24

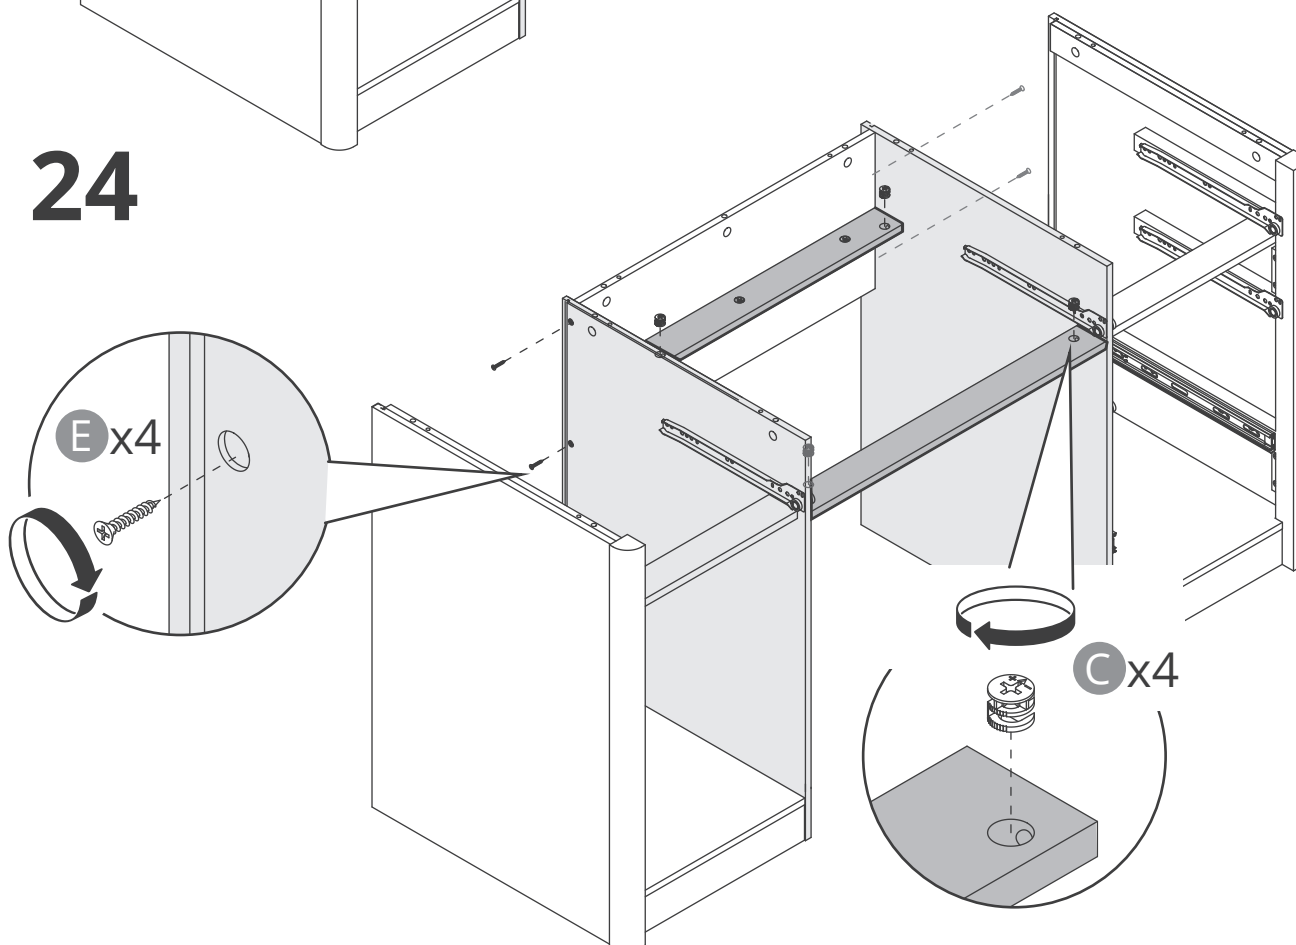 


# 25

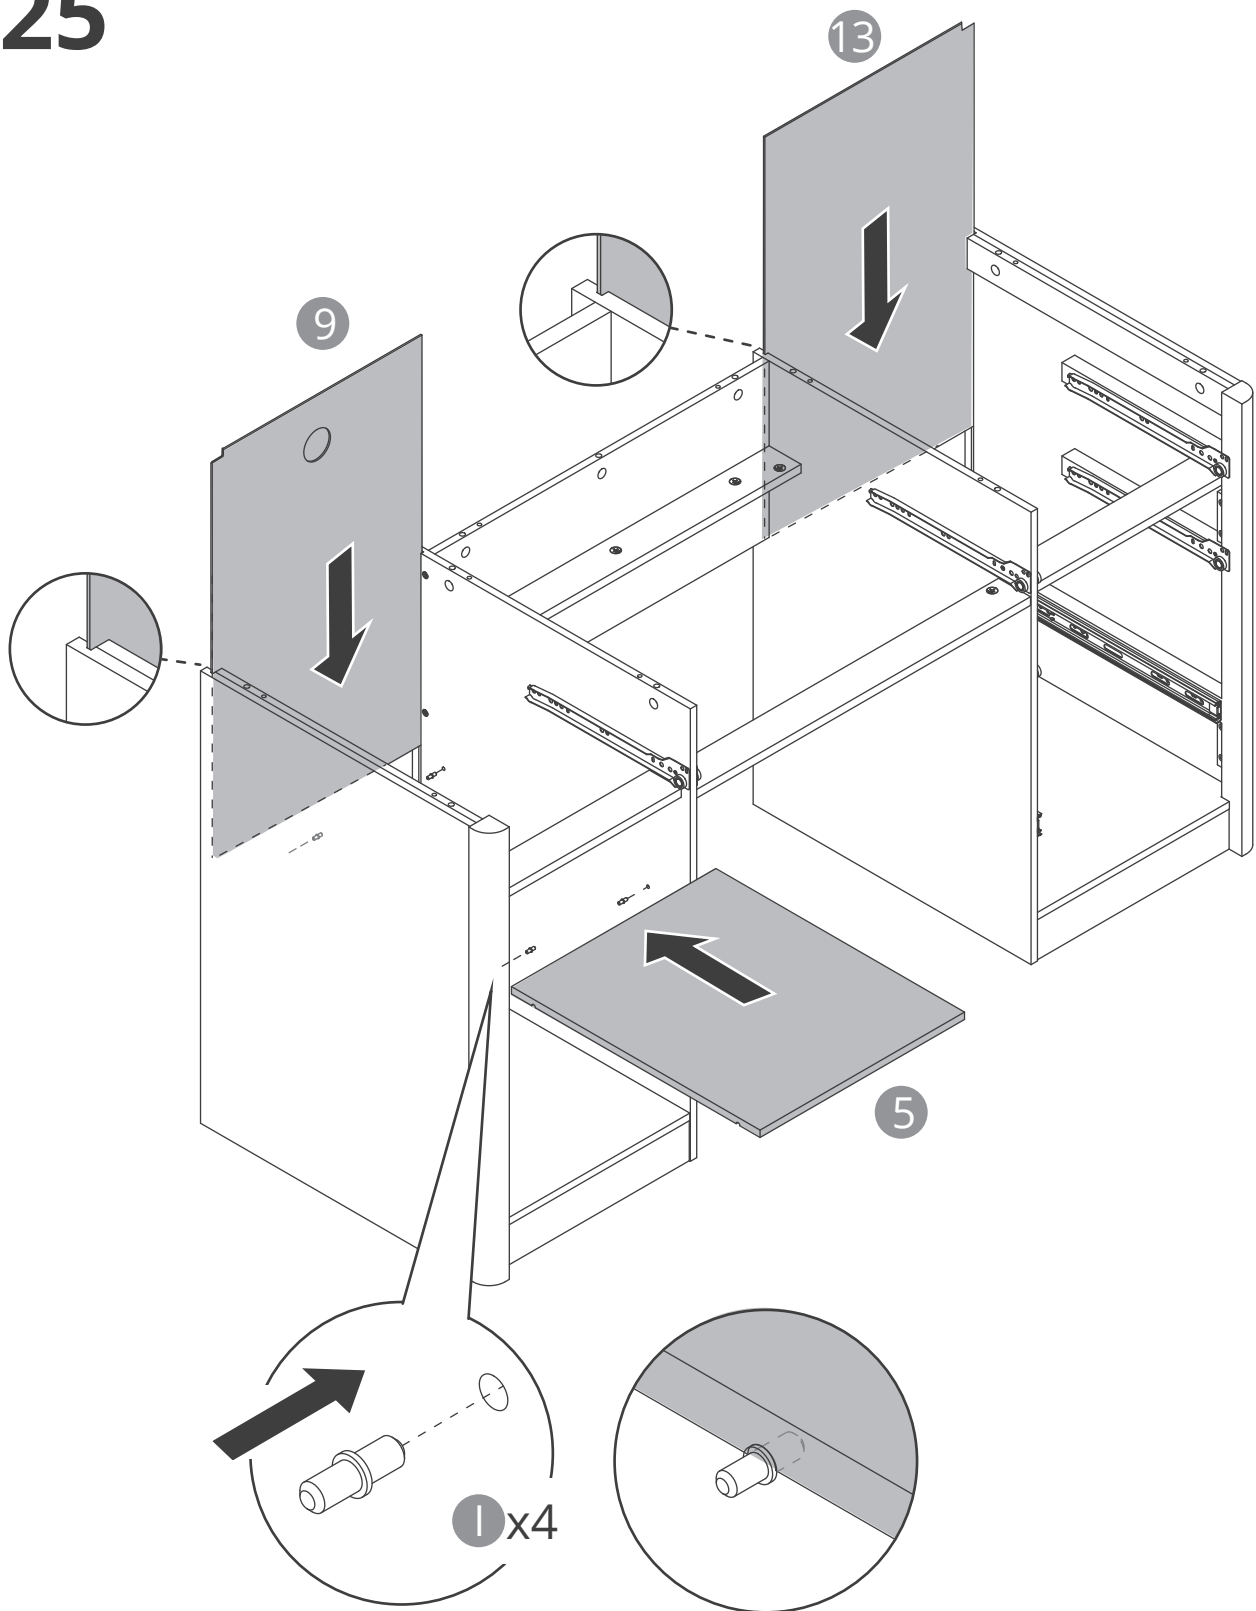 

# 26

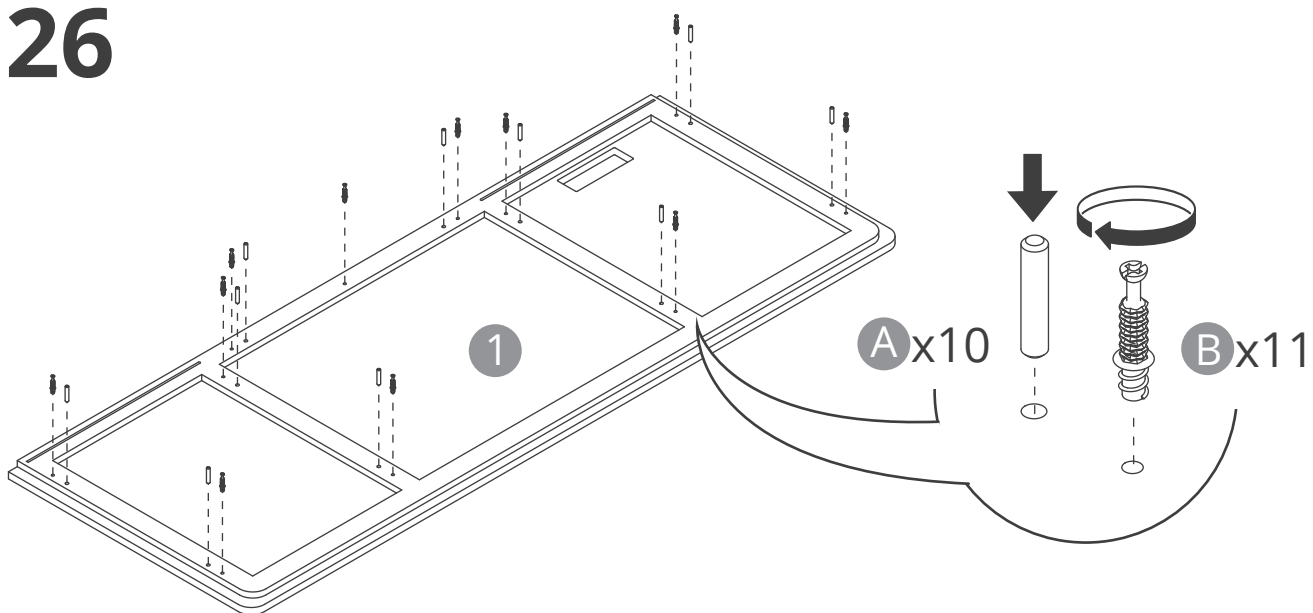 


# 27

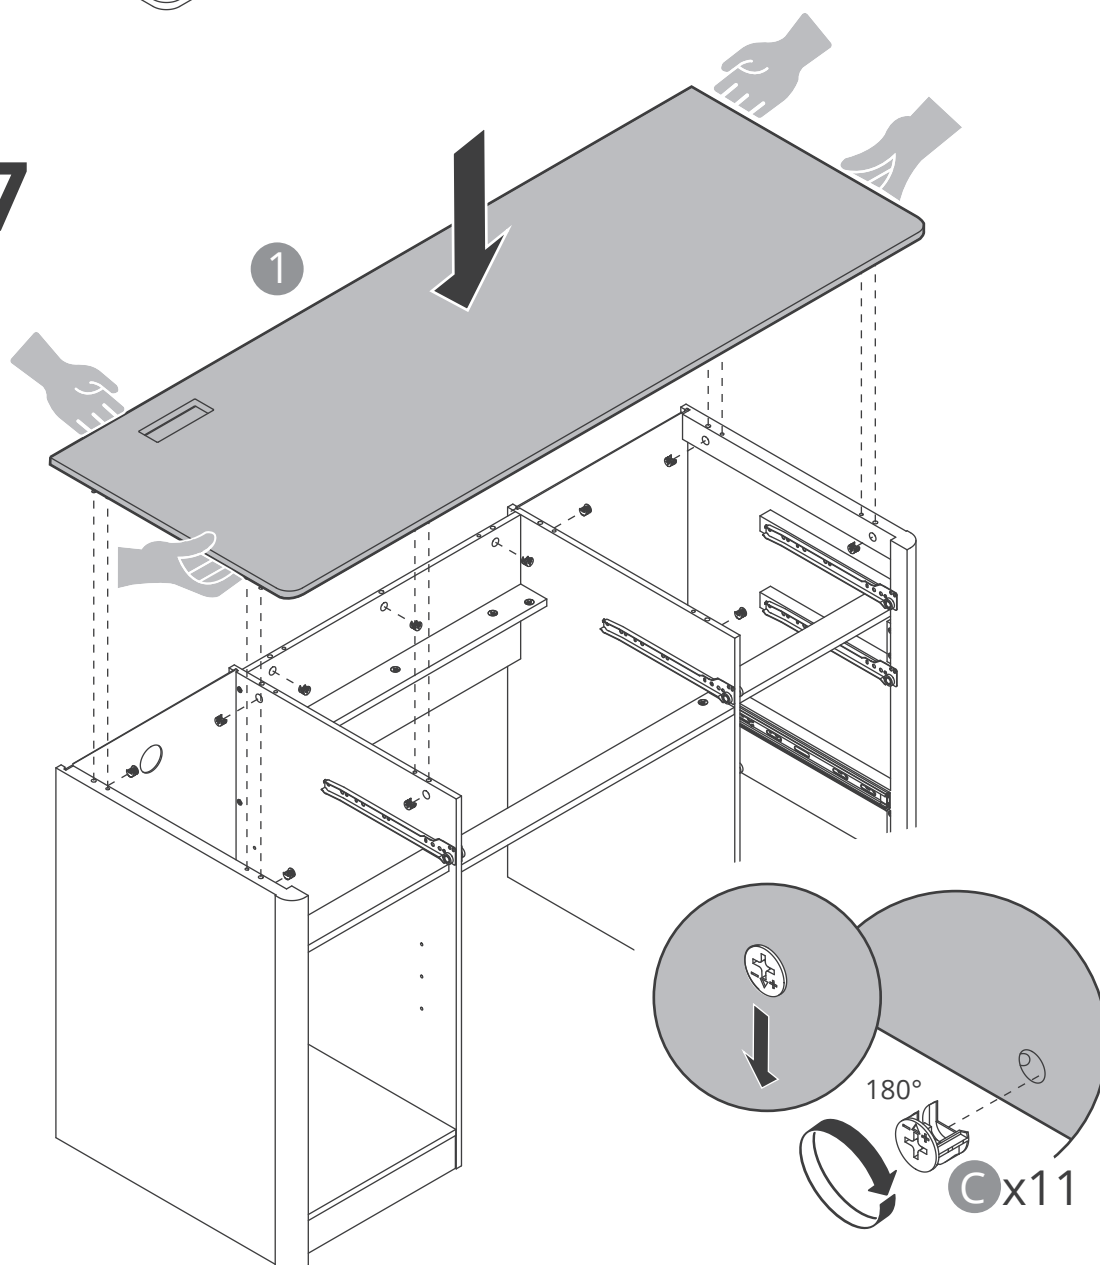 





# 28

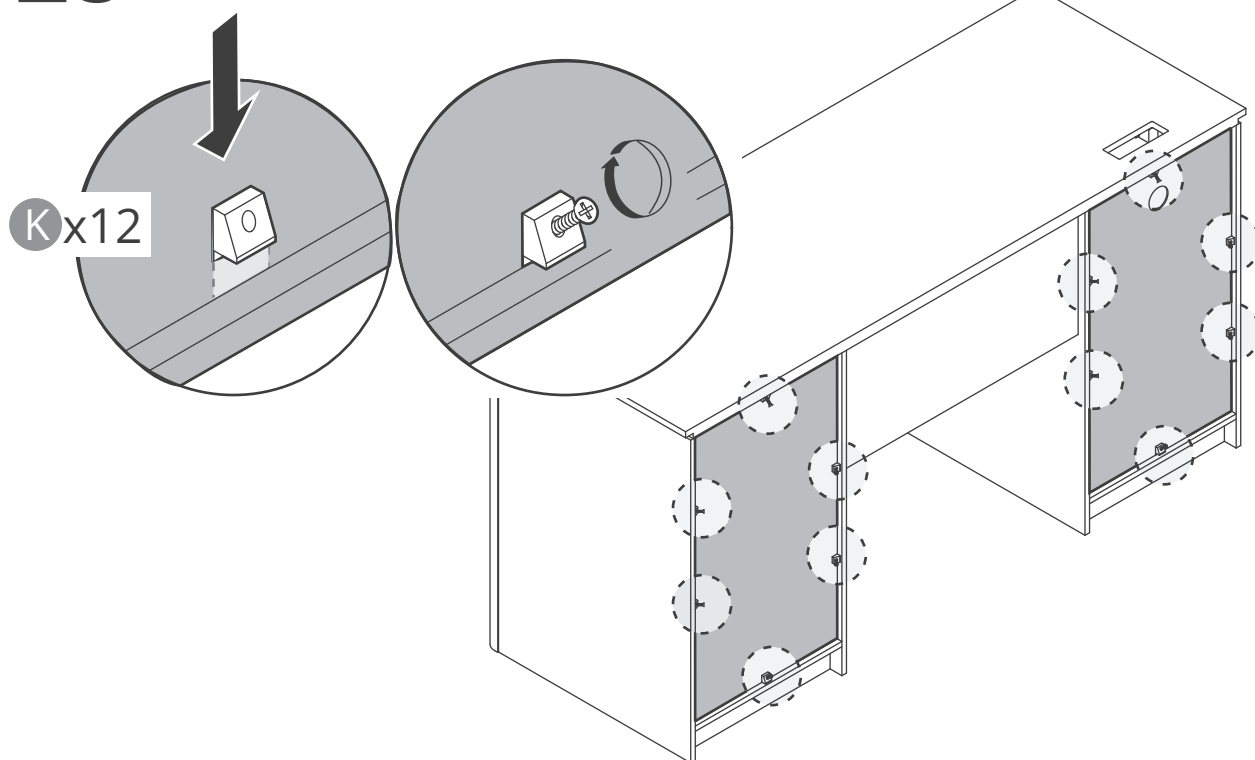 


# 29

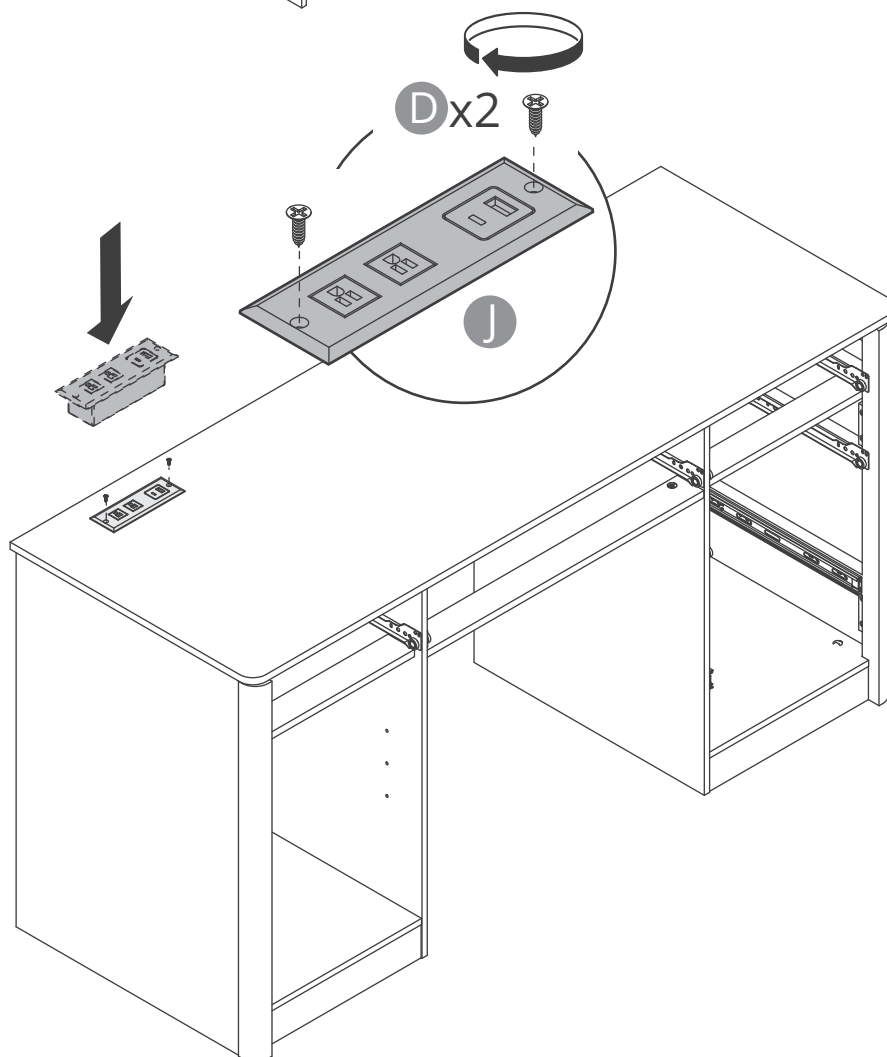 

# 30


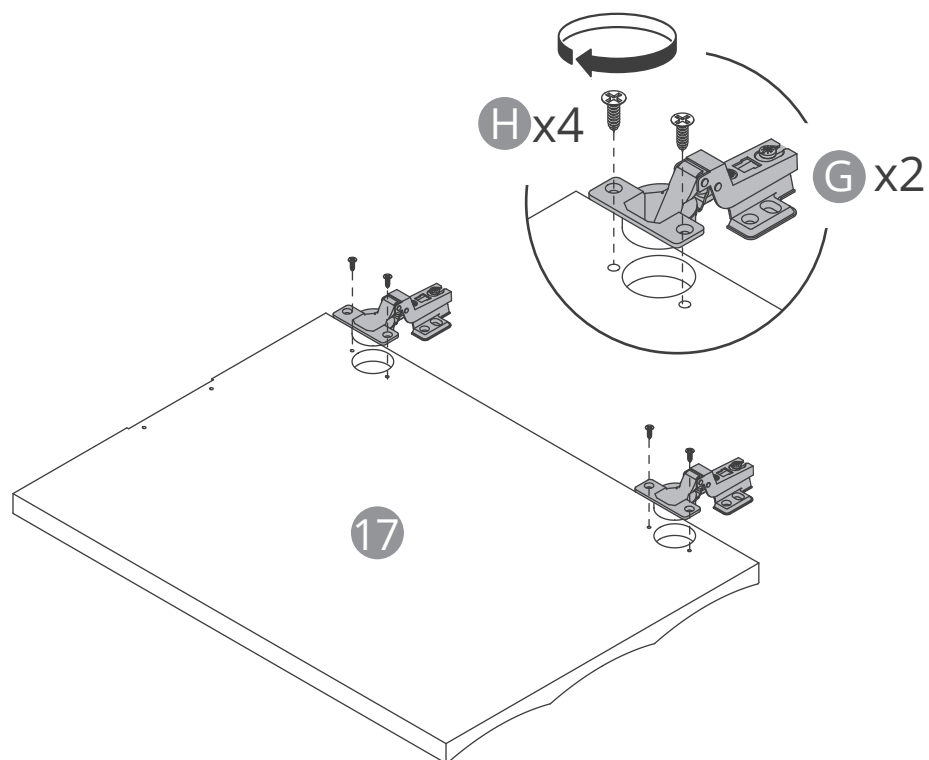 


# 31

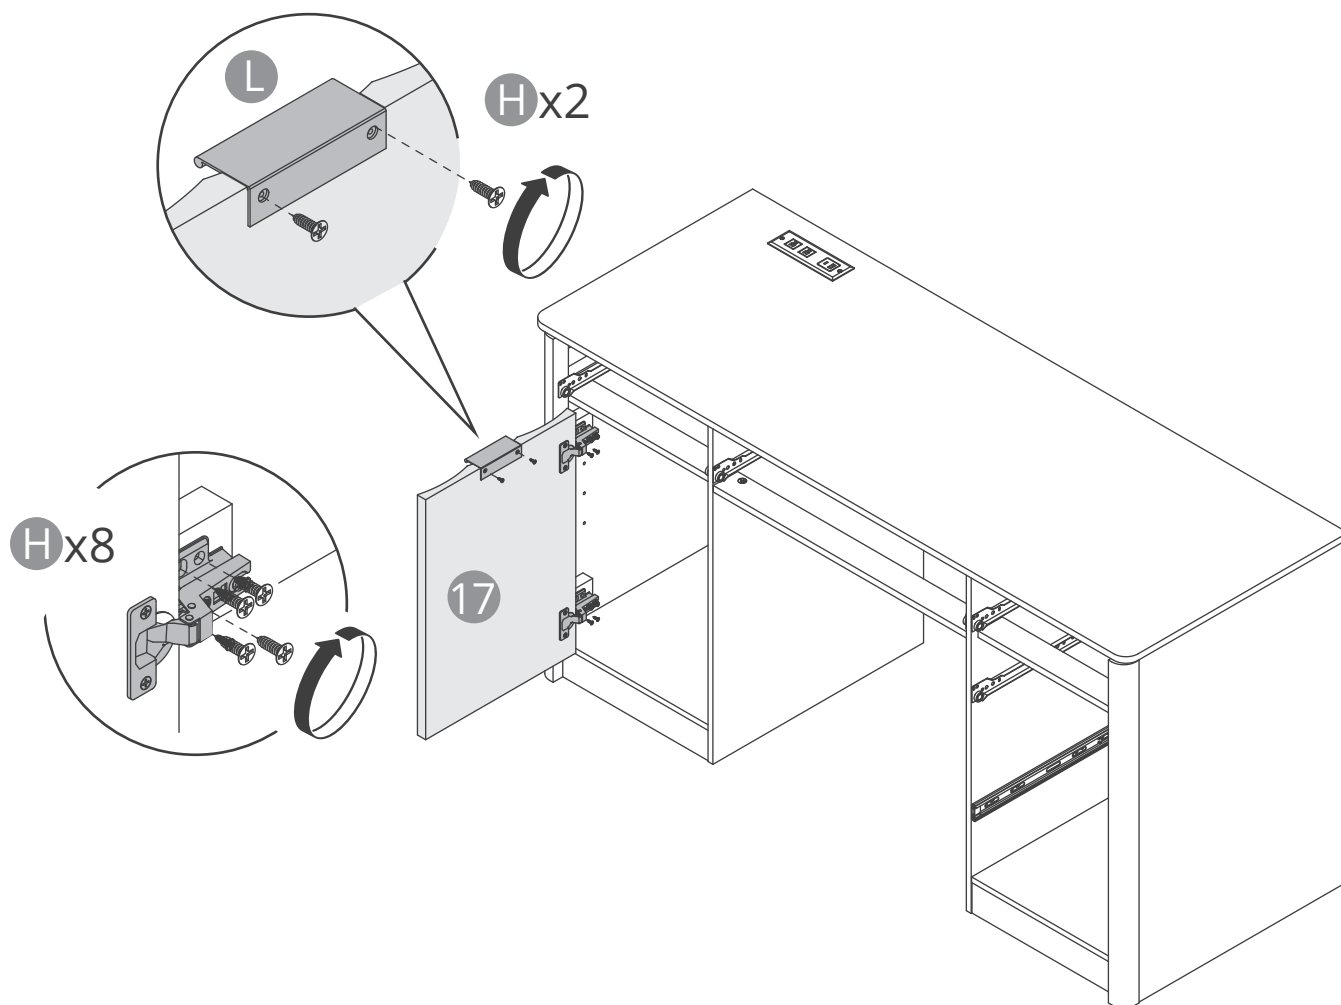 





  To adjust the door left or right, **LOOSEN** the corresponding **SCREW** on the **HINGE**.

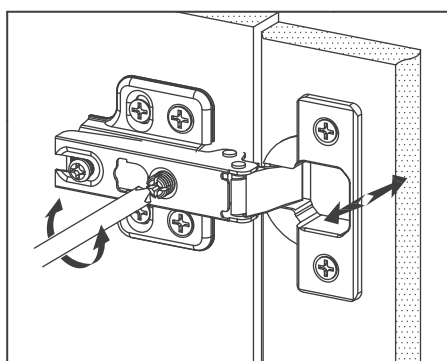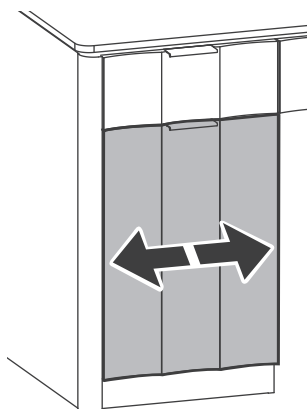



---


 
 
To adjust the door up or down, **LOOSEN** the corresponding **SCREW** on the **HINGE**.

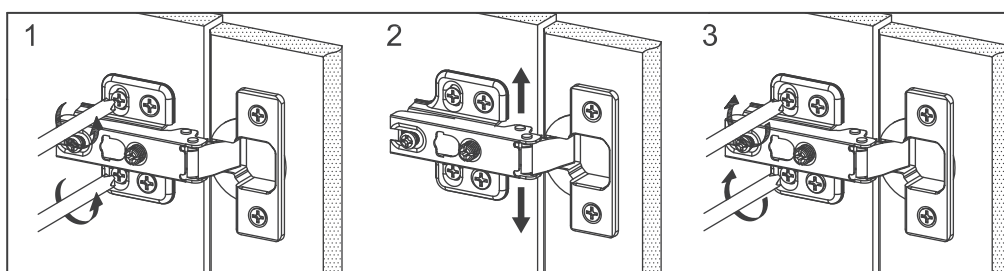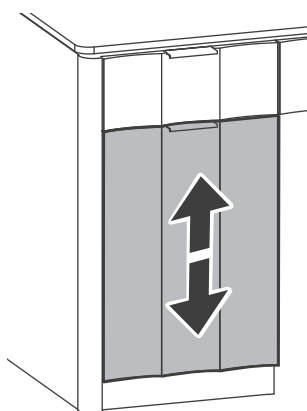

---

     To adjust the door forward or backward, **LOOSEN** the corresponding **SCREW** on the **HINGE**.

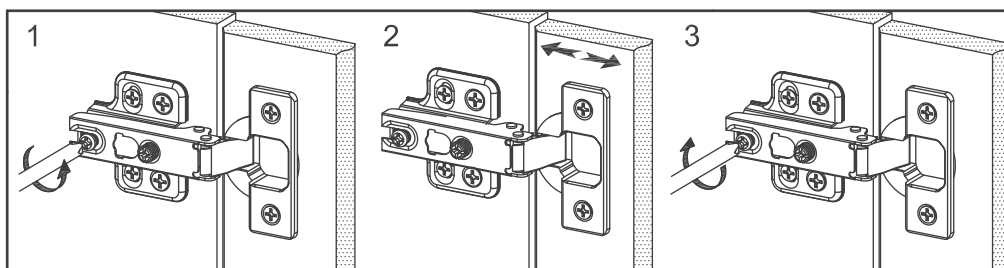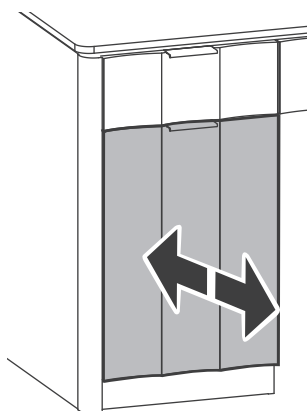


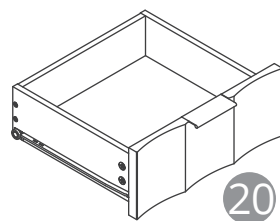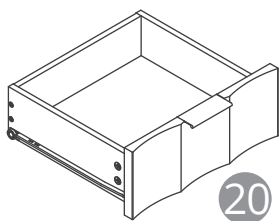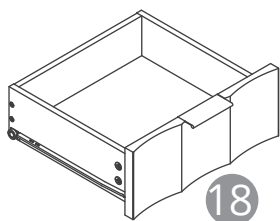


*Repeat steps 32-34 for 3 drawers.*






**32**

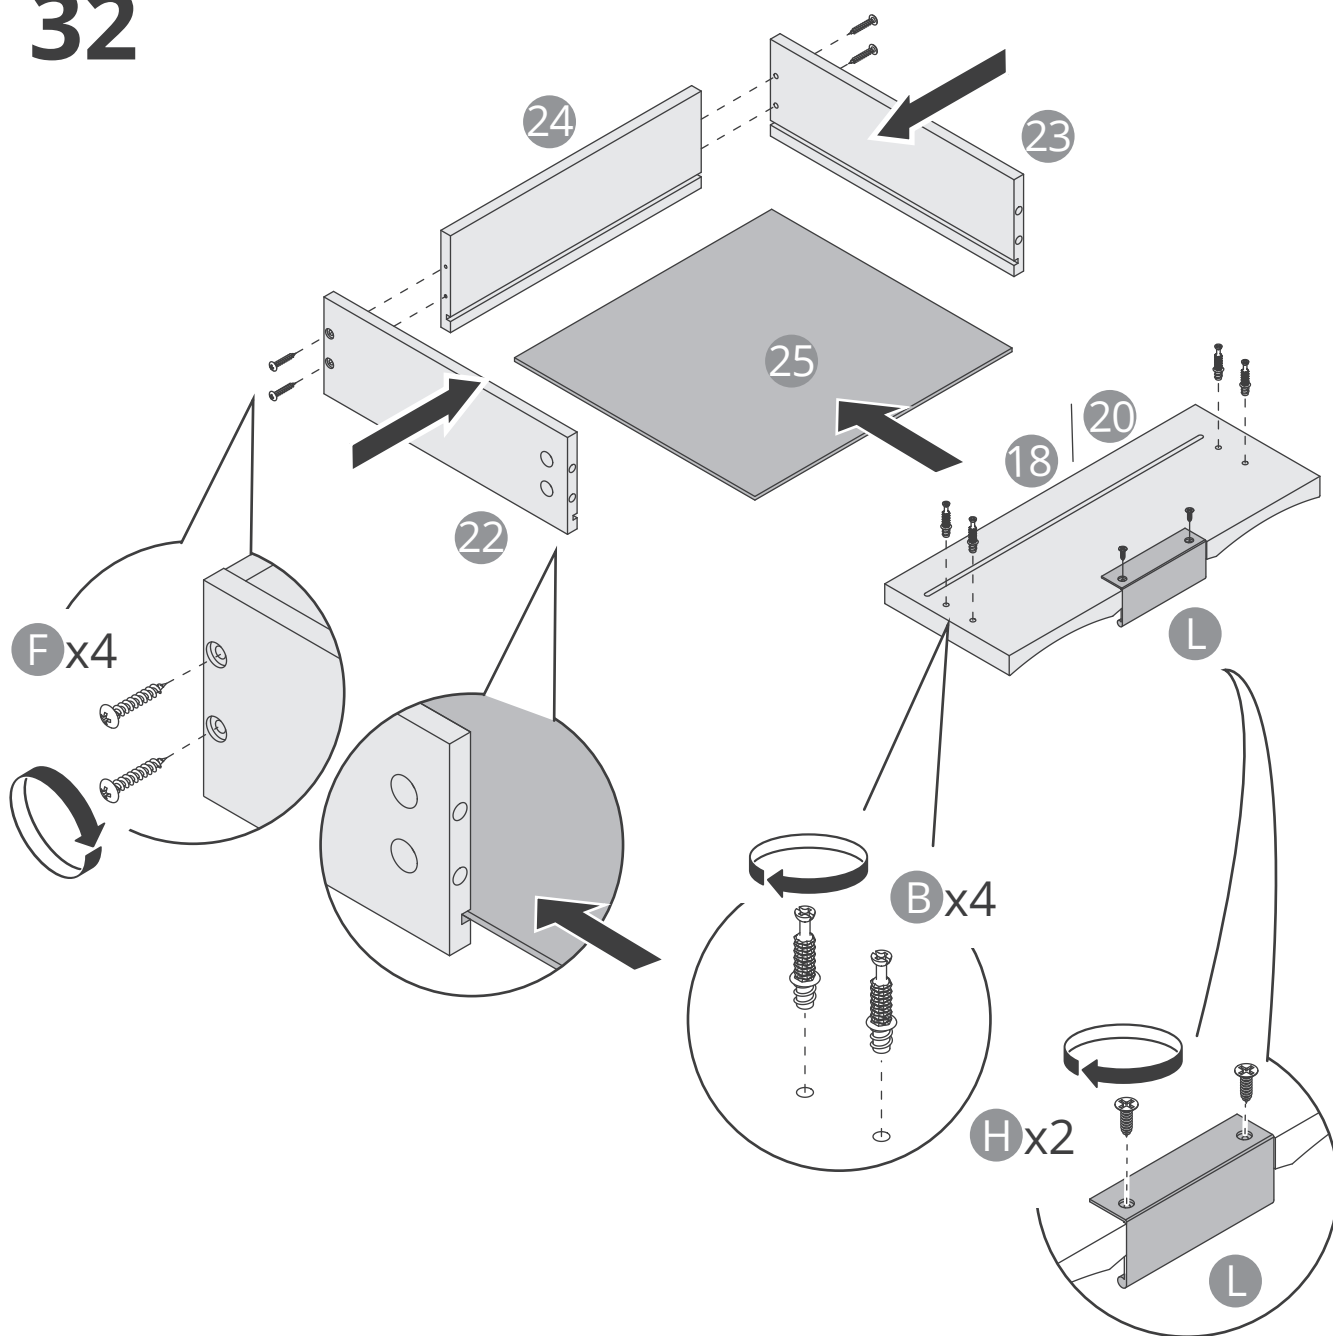 


# 33

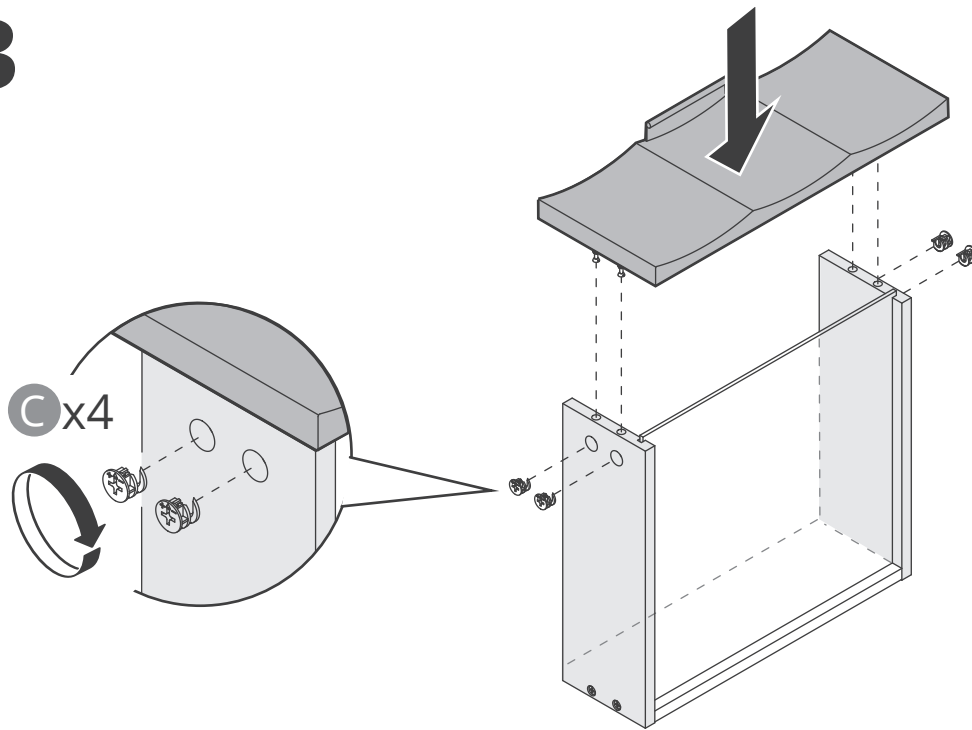 


# 34

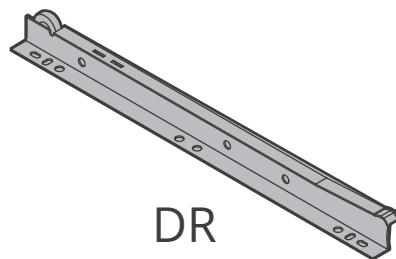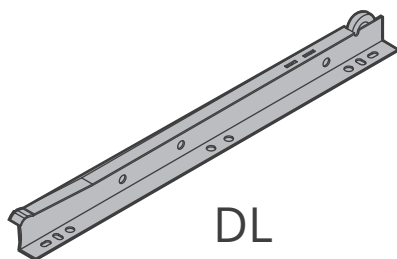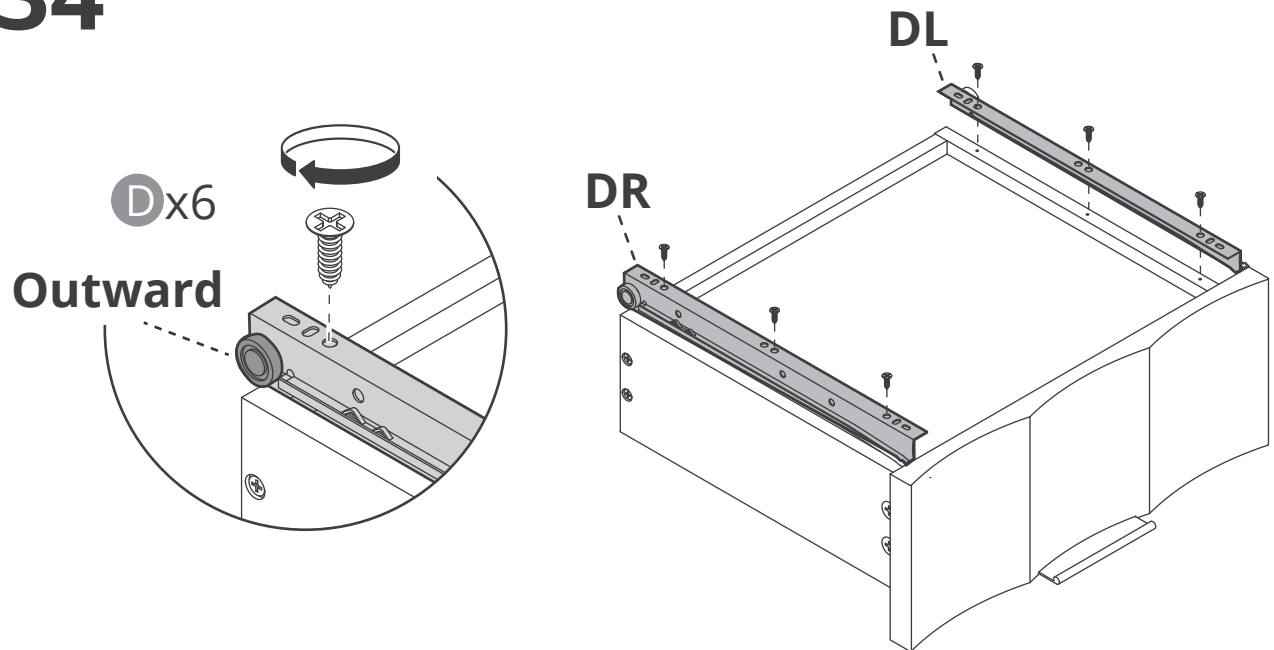   


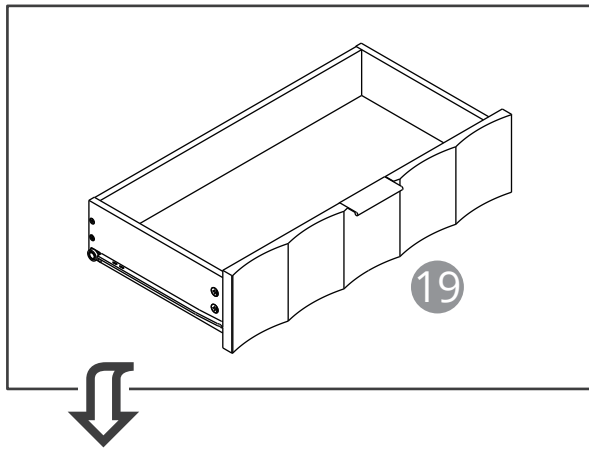 



35

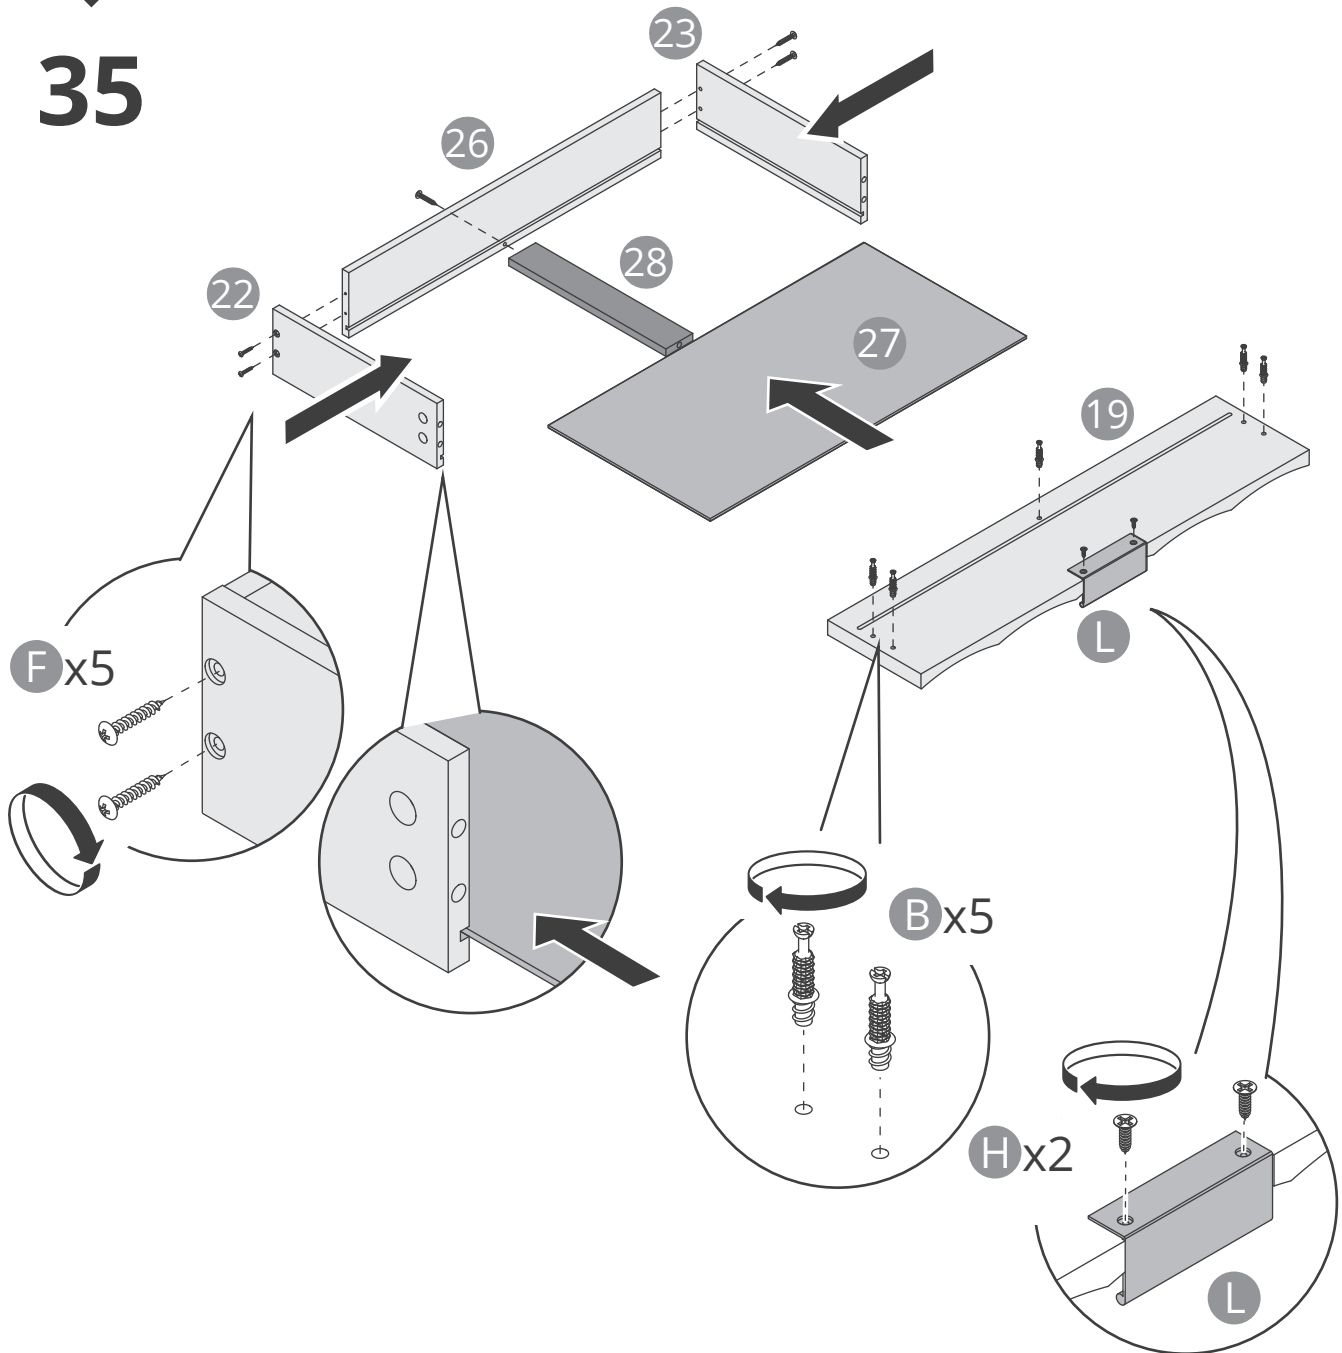 


# 36


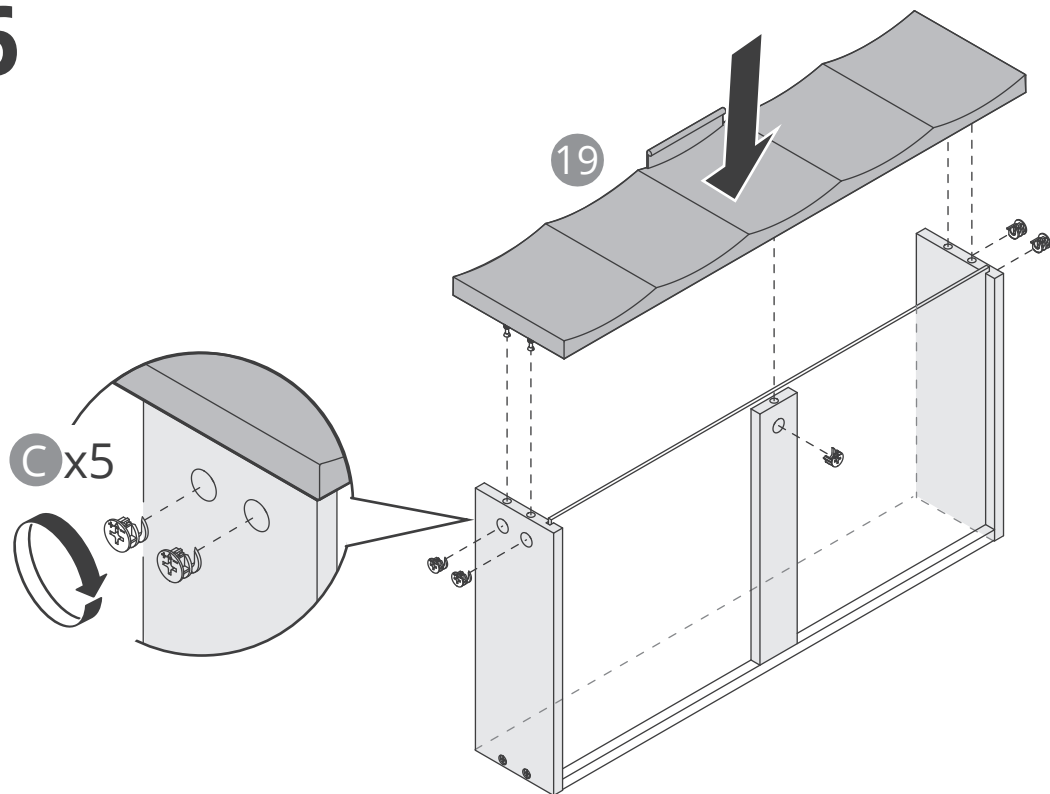 


# 37

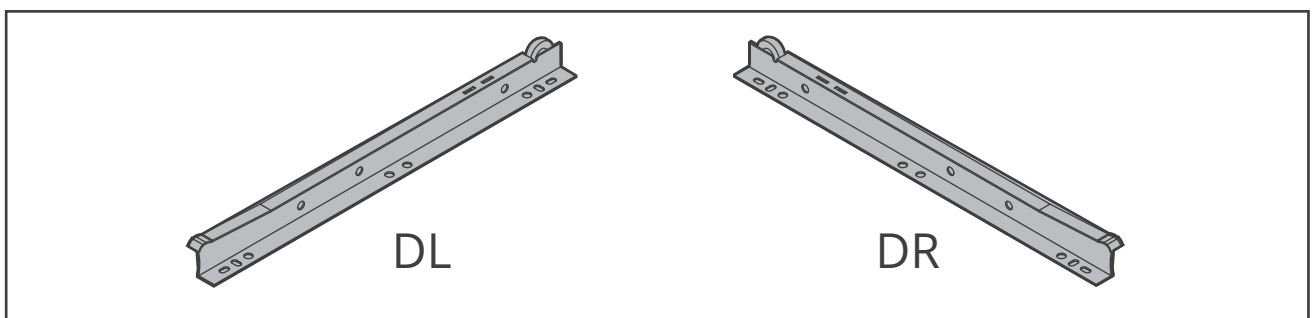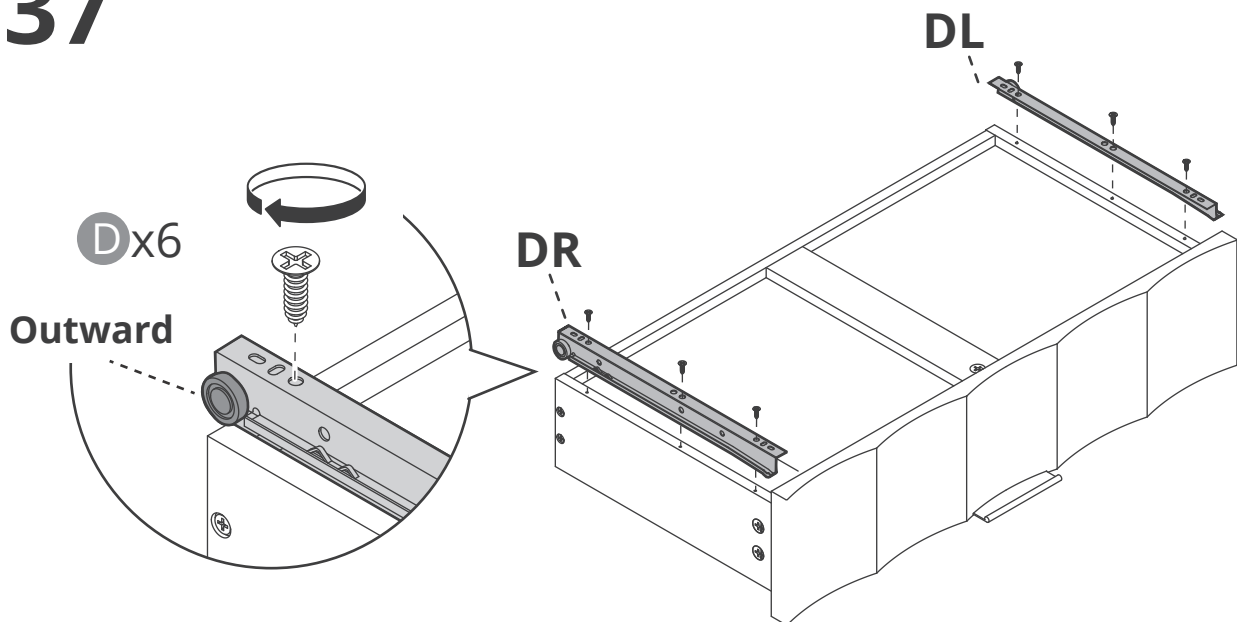  


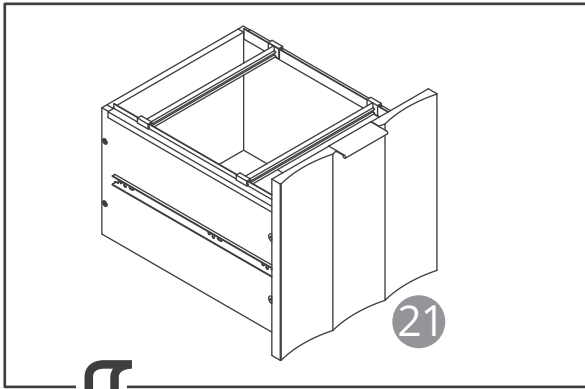 

38

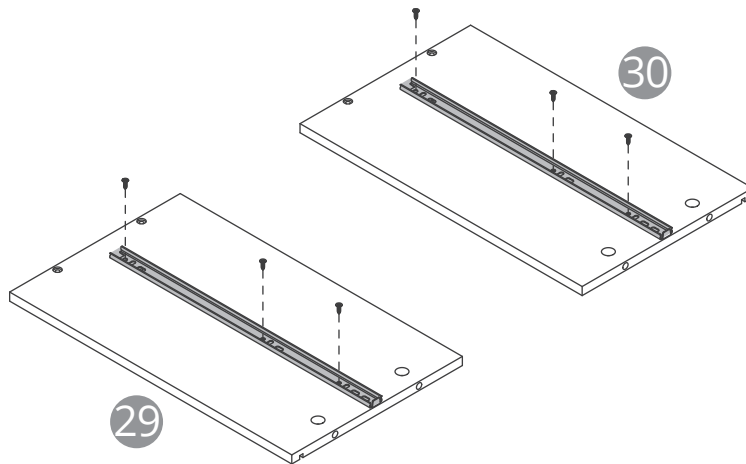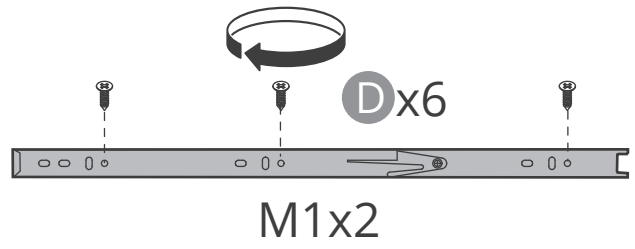  


39

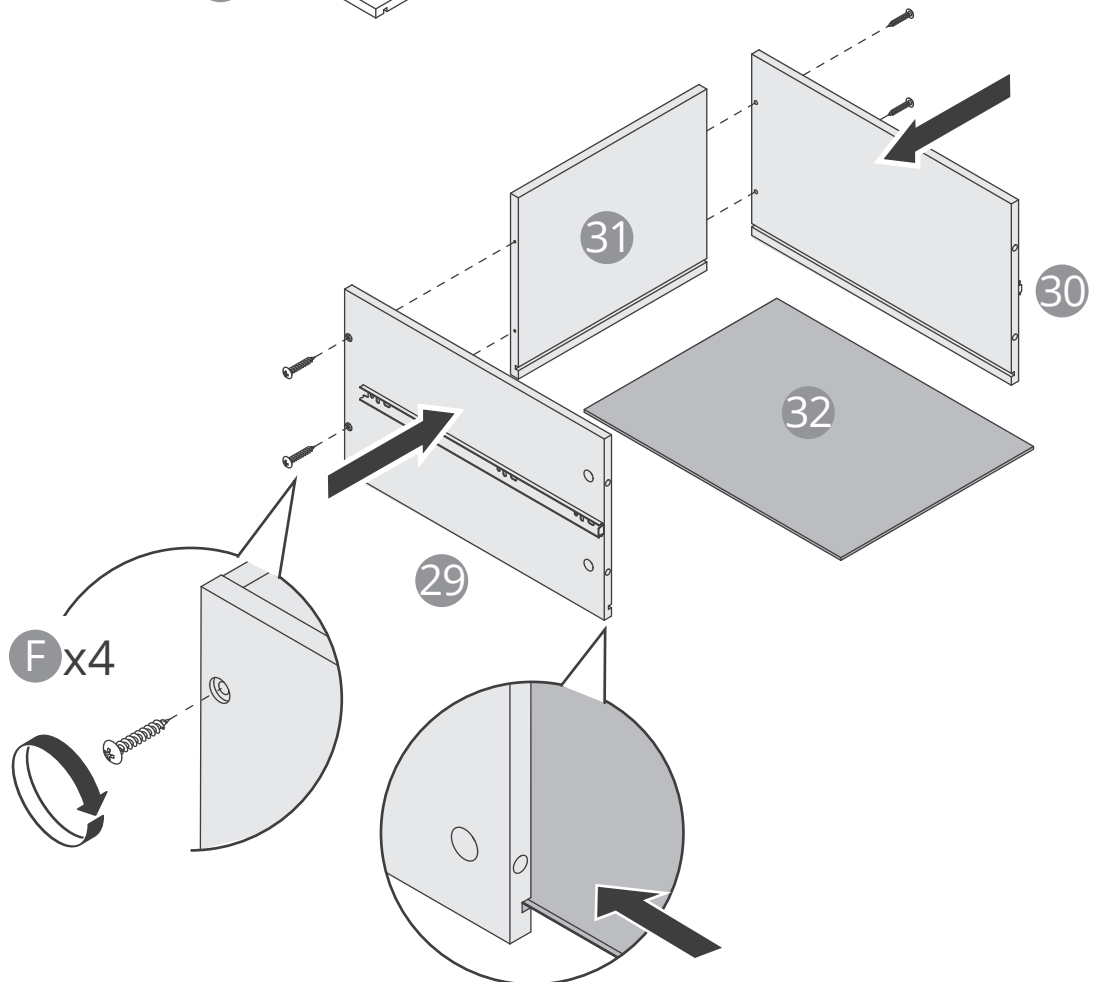 





# 40

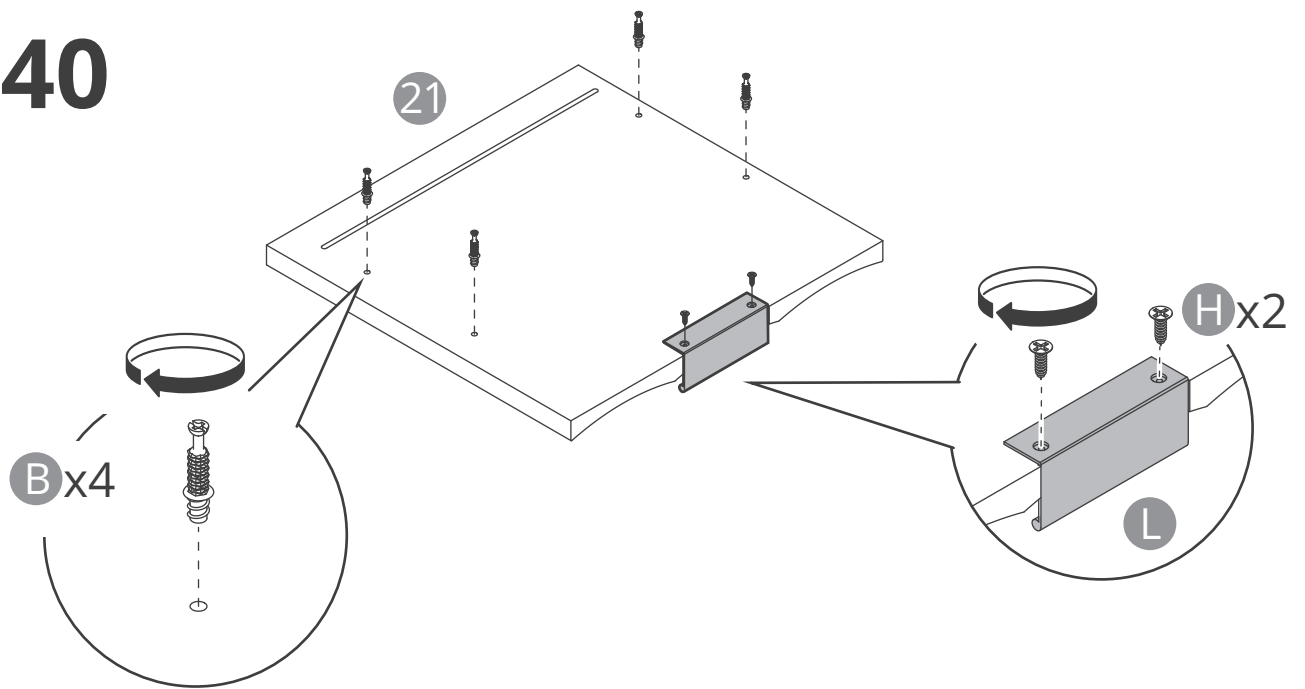 


# 41

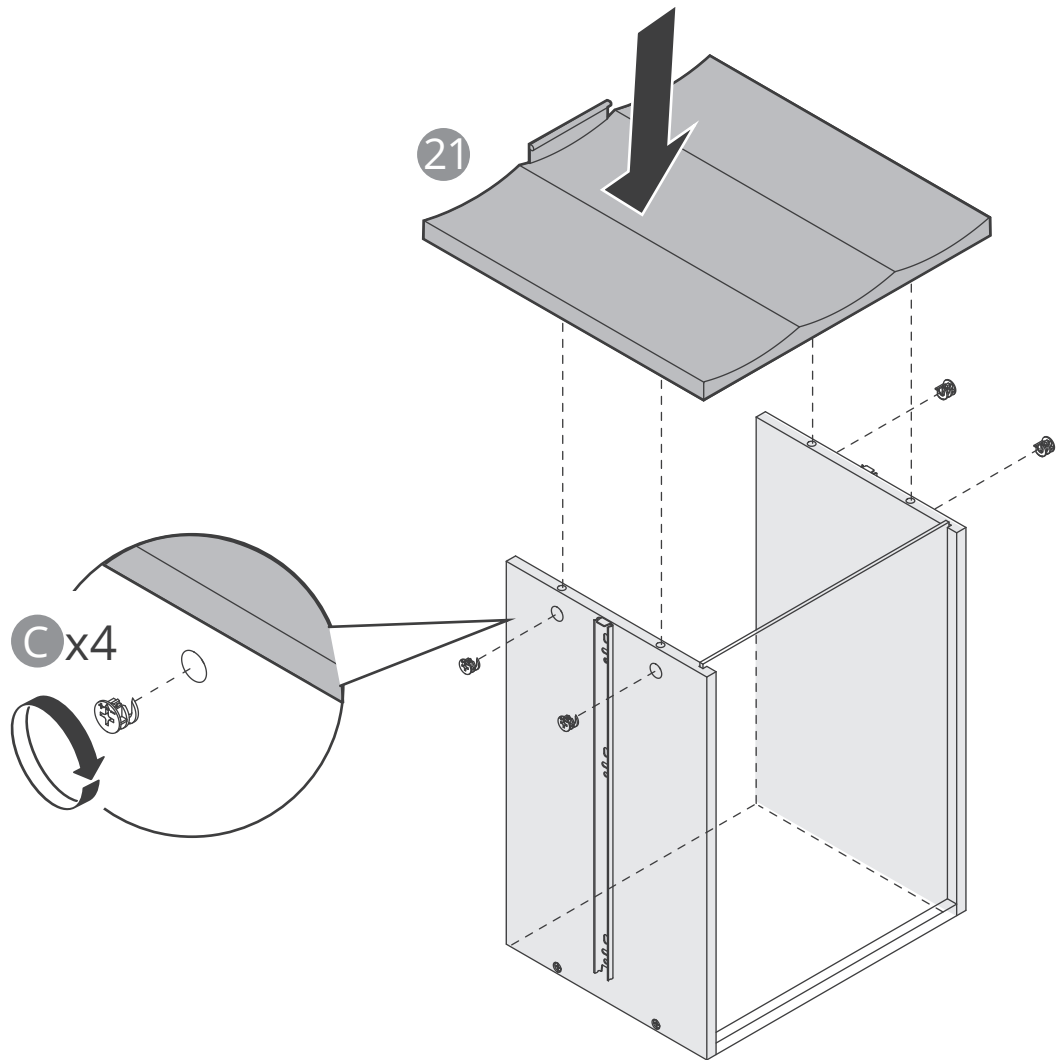 


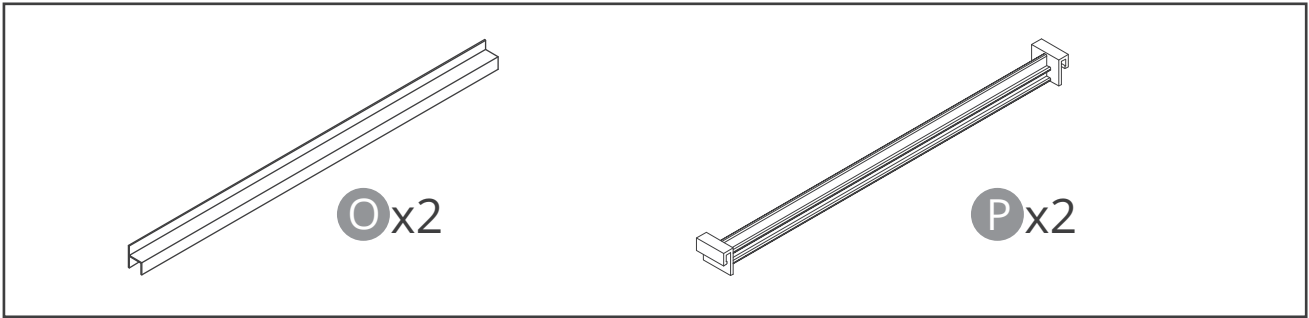 


**42**

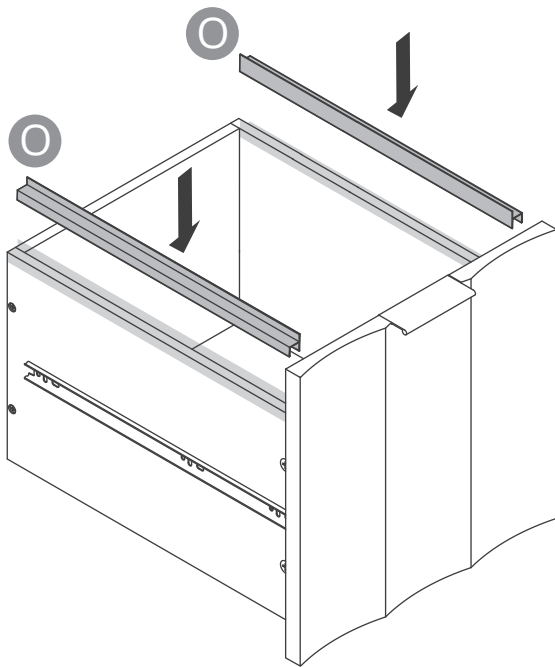 


**43**

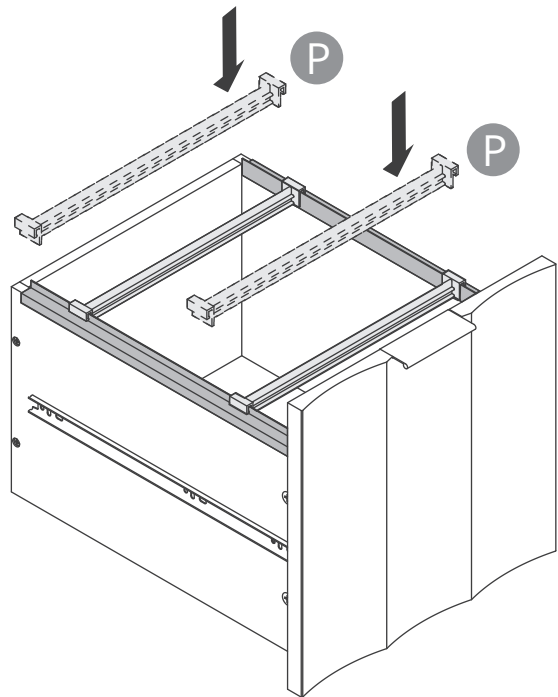 

**44**

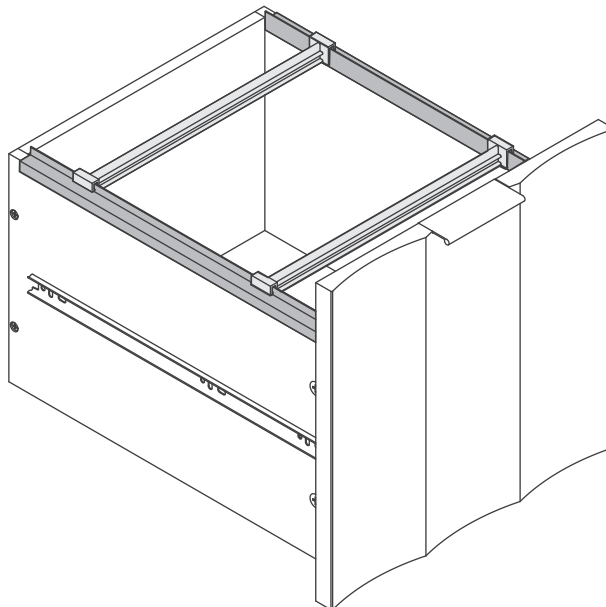 

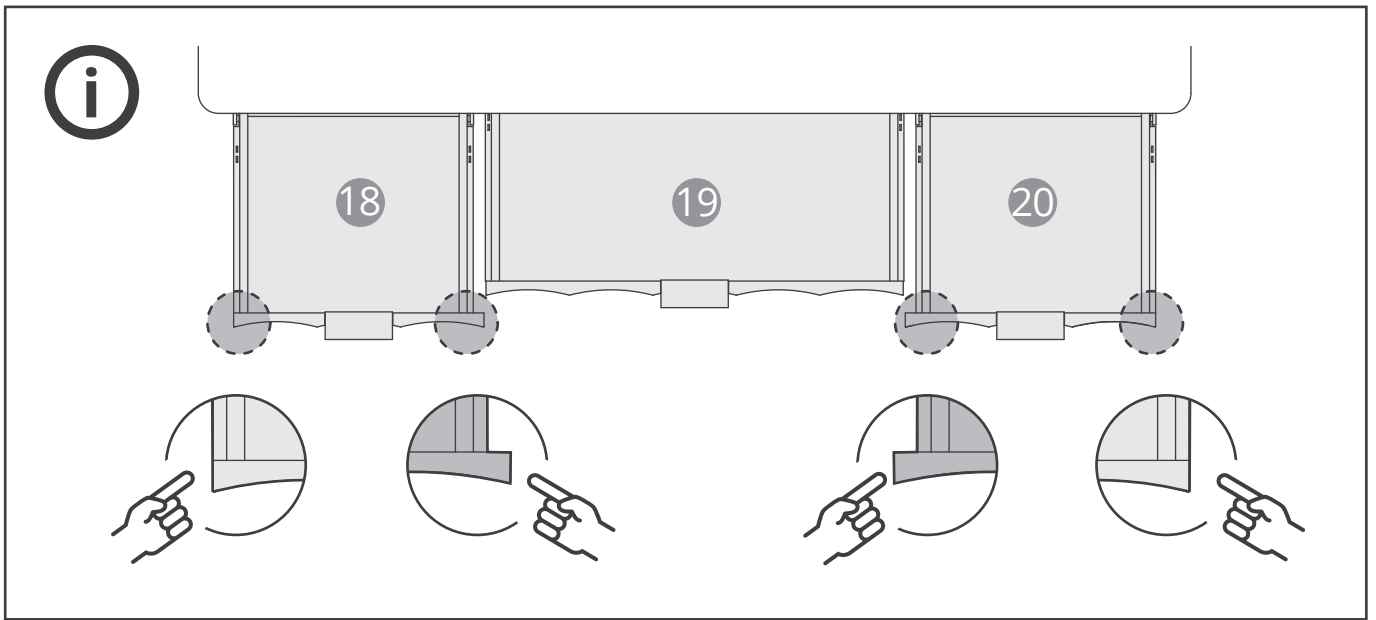 

45

