



# ASSEMBLY INSTRUCTIONS

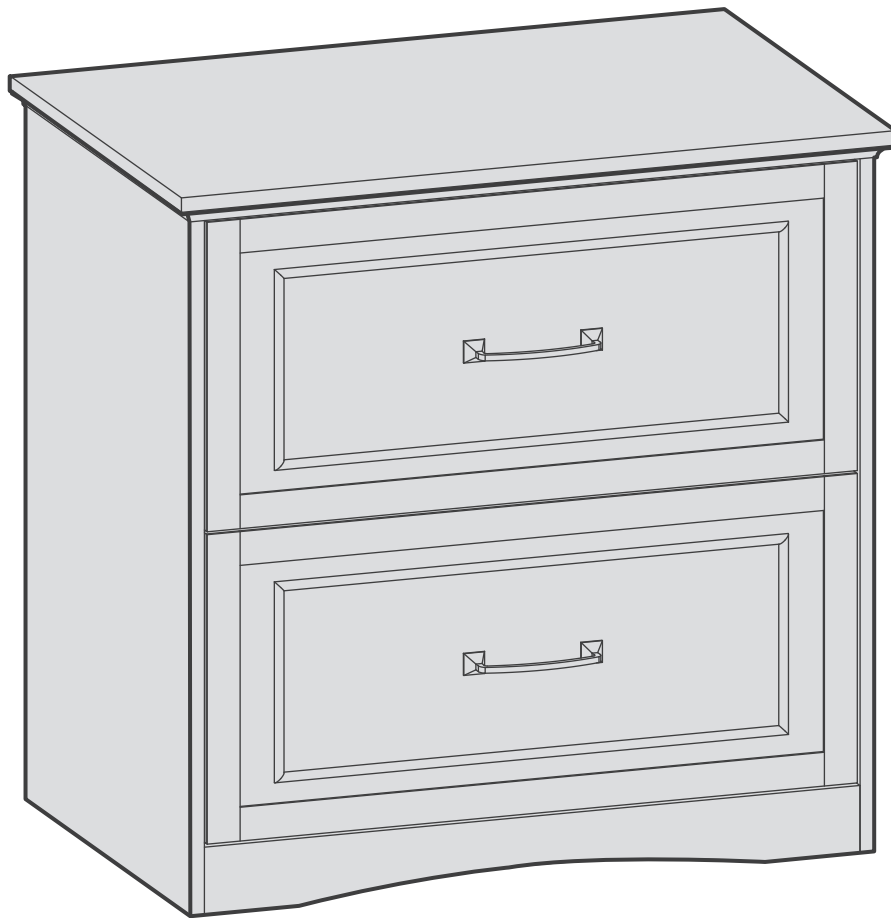

▶ Scan QR code for  
installation video



For assembly assistance,  
✉ [support@yfs.life](mailto:support@yfs.life)    🌐 [yfs.life/WCB0008-J1](https://yfs.life/WCB0008-J1)

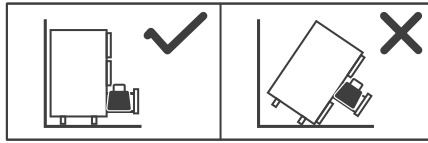

## WARNING

Keep away from fire.

This product is only for indoor use.

Serious or fatal crushing injuries can occur from furniture tip-over.


ALWAYS secure this furniture to the wall using tip-over restraints.


To further reduce the risk of serious injury and death from tip-overs:


- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, desks, or shelves.

## IMPORTANT


- Before you begin: Lay out all parts on a clean surface to check if the tags and numbers are correct.
- Don't screw tightly before all the screws are put into the corresponding holes.
- Please use the screws correctly. Otherwise, you might damage the tabletop.

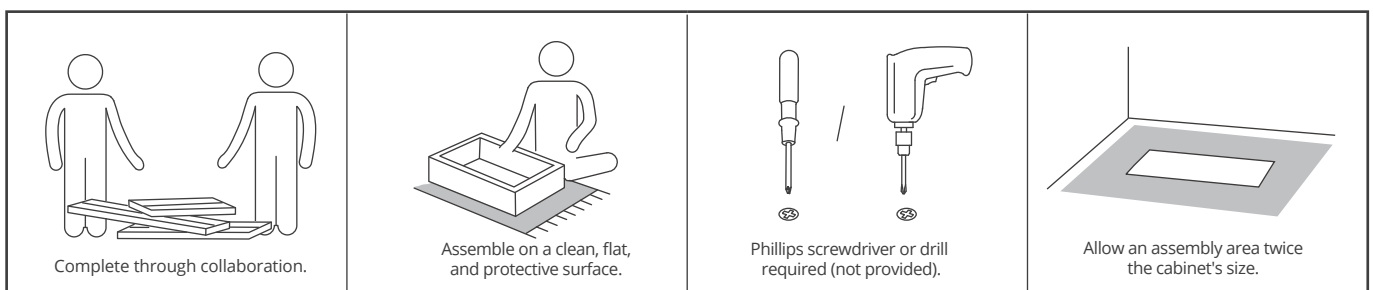

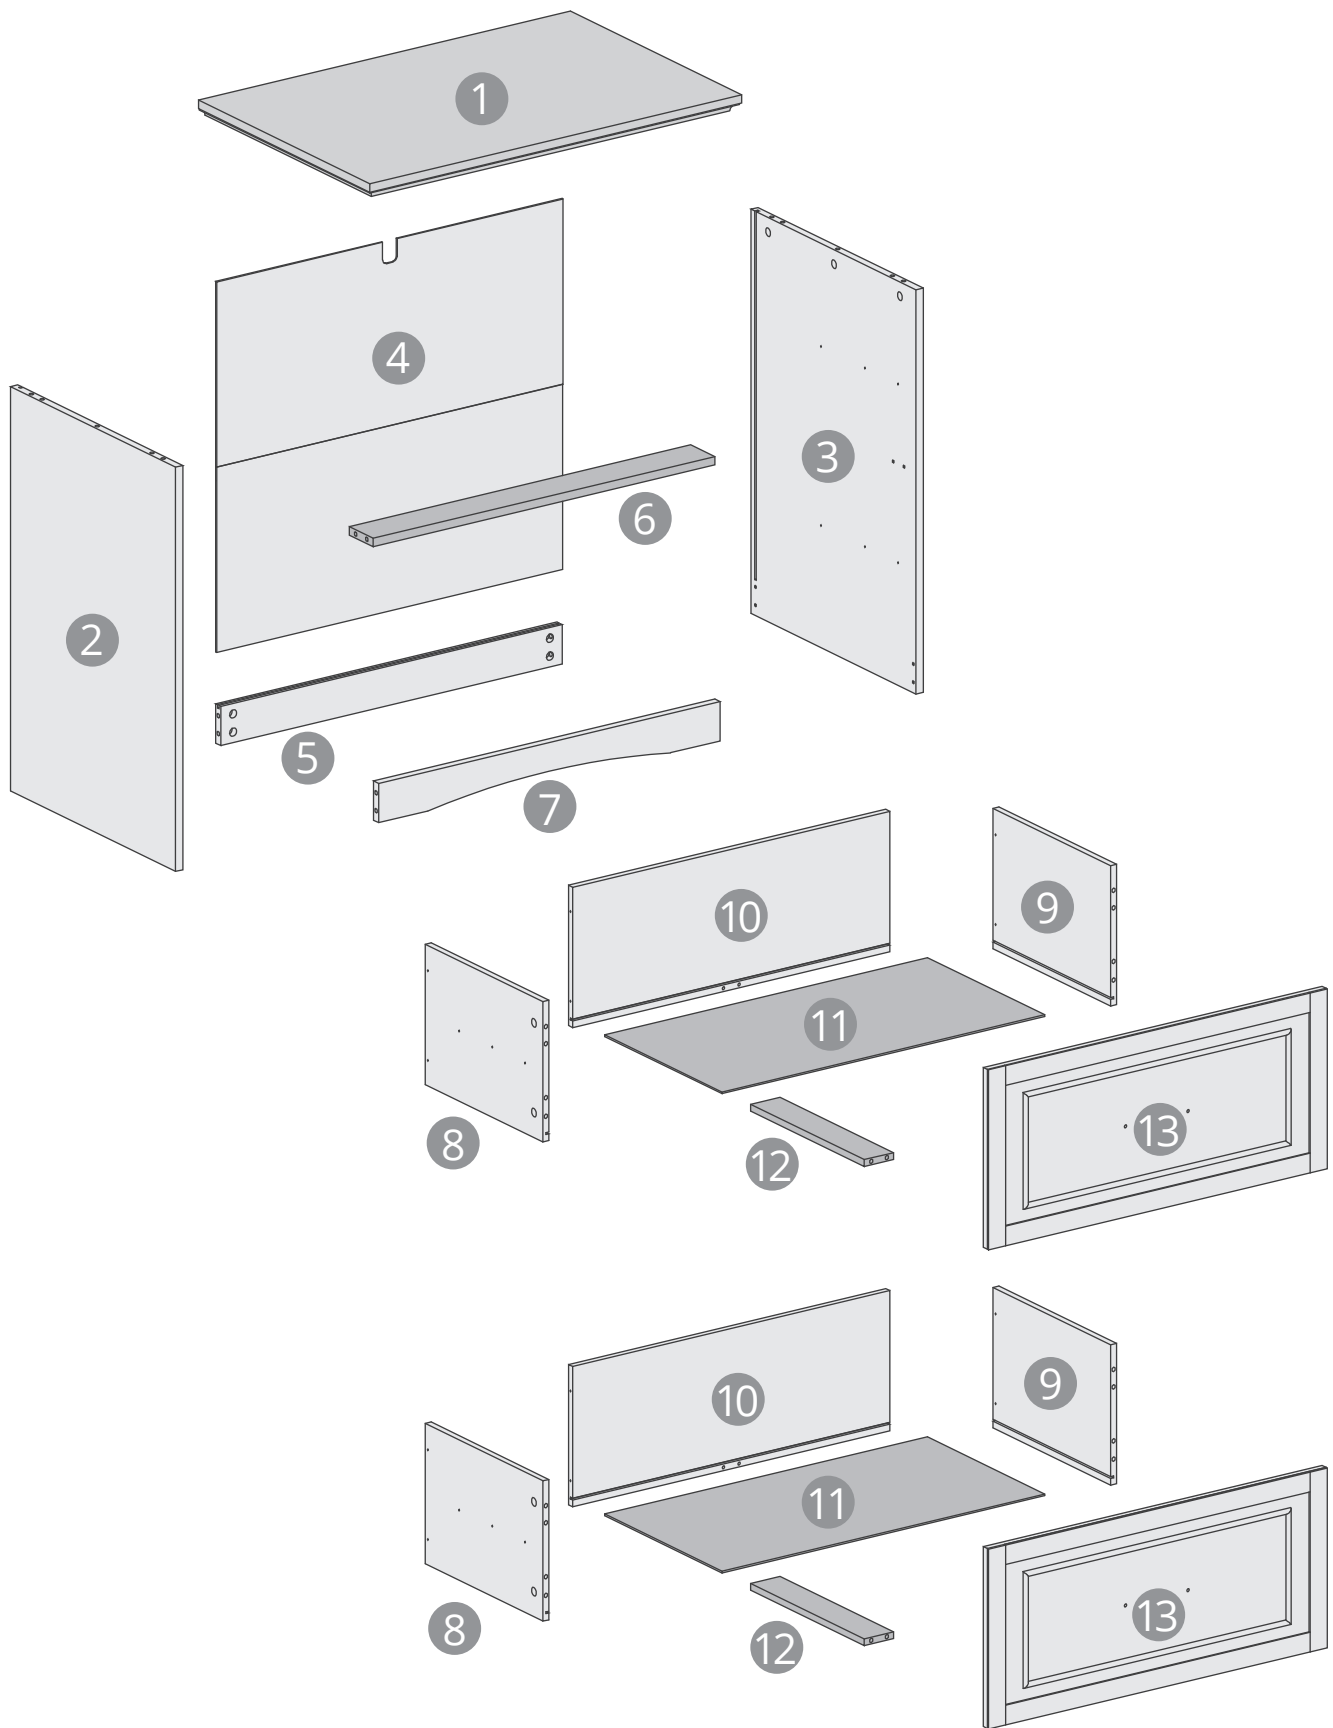


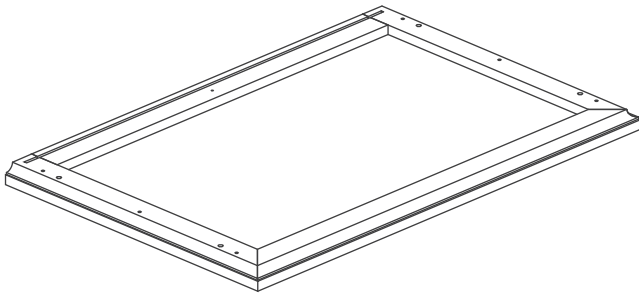


**1x1**  
Top Panel

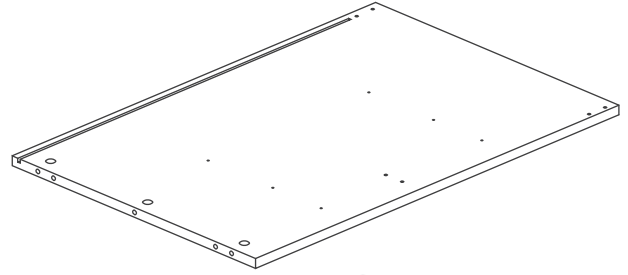

**2x1**  
Left Side Panel

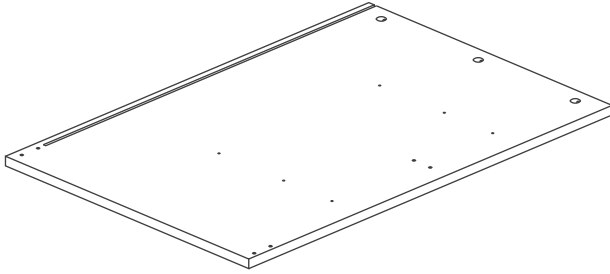


**3x1**  
Right Side Panel

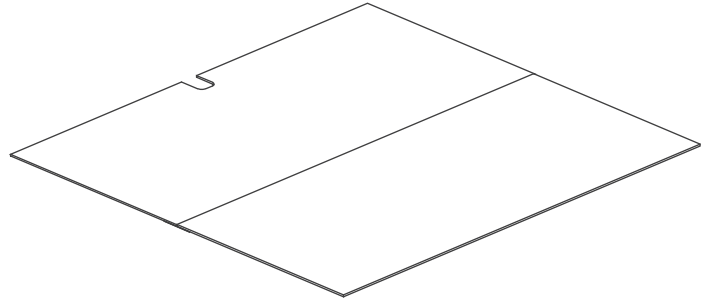


**4x1**  
Back Panel




**5x1**  
Rear Base Rail

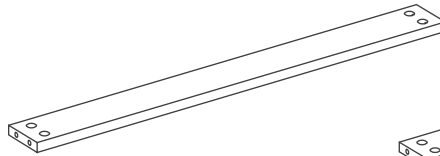


**6x1**  
Middle Stretcher

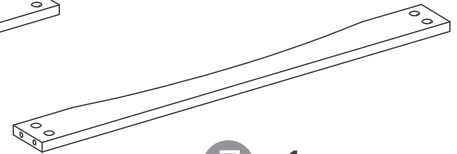


**7x1**  
Front Base Rail

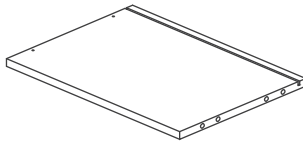


**8x2**  
Left Drawer Side Panel

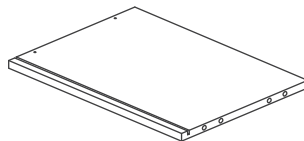


**9x2**  
Right Drawer Side Panel

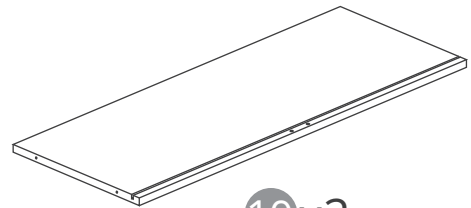


**10x2**  
Drawer Back Panel

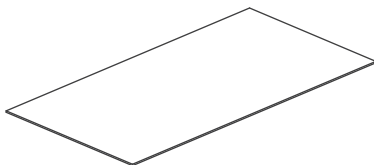

**11x2**  
Drawer Bottom Panel



**12x2**  
Drawer Bottom Stretcher

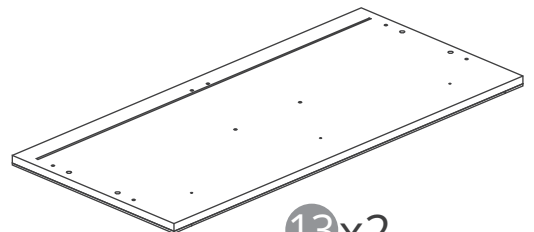

**13x2**  
Drawer Front Panel



**A**x34

Cam Lock Screw  
M6x34 mm



**B**x34

Cam Lock Nut  
15x9 mm




**C**x12

Dowel  
Ø8x30 mm




**D**x8

Countersunk Phillips  
Screw  
Ø3.9x30 mm



**E**x24

Countersunk Phillips  
Screw  
Ø3.5x12 mm




**F**x2

Handle




**G**x4

Truss Head Screw  
Ø4x19 mm




**H**x8

Back Panel Clip

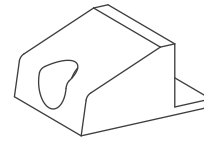


**I**x8

Countersunk Phillips  
Screw  
Ø2.9x18 mm




**J**x1

Anti-tip Bracket

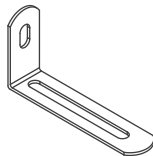

**K**x1

Washer Head  
Self-tapping Screw  
Ø3.5x16 mm




**L**x2

Washer




**M**x1

Expansion Bolt

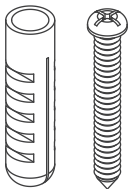


**N**x6

Pan Head Phillips Screw  
Ø3.5x12 mm




**O**x4

3-Section Drawer Slide

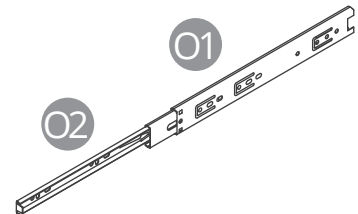


**P**x4

Hanging File Rail 1




**Q**x2

Hanging File Rail 2

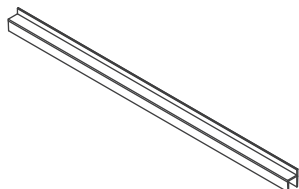


**R**x2


Hanging File Rail 3

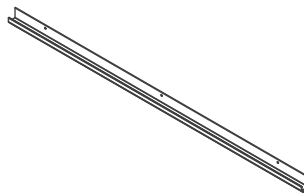

**S**x4


Hanging File Rod

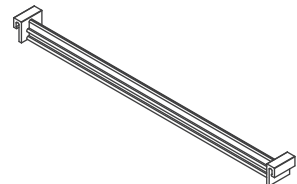

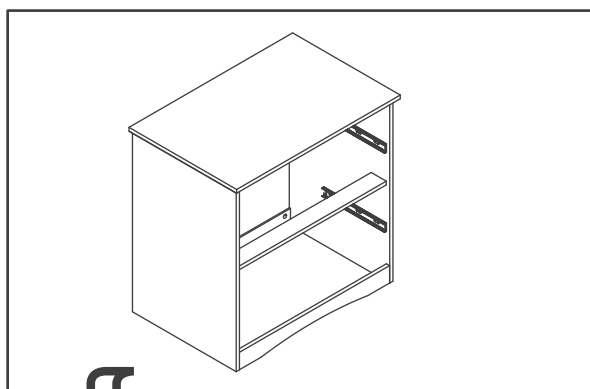


1


**i** Tighten cam lock screws completely.

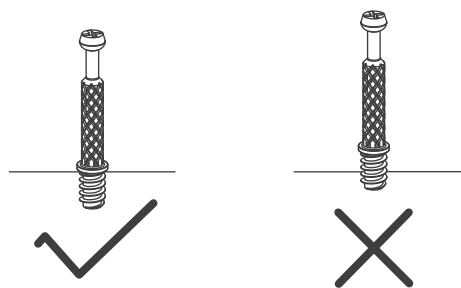


**i** Press the buckle to separate O1 and O2.

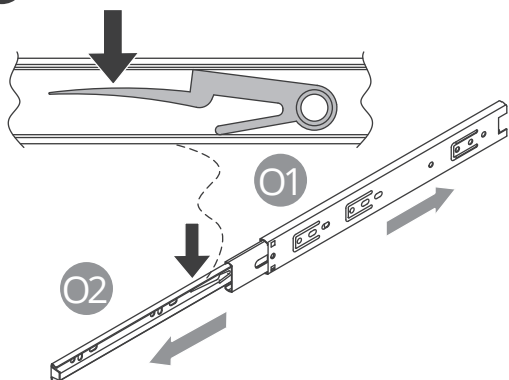


**E**x12

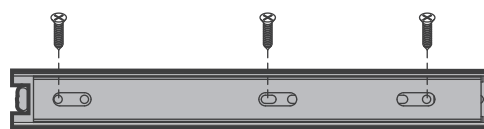


**O1**x4

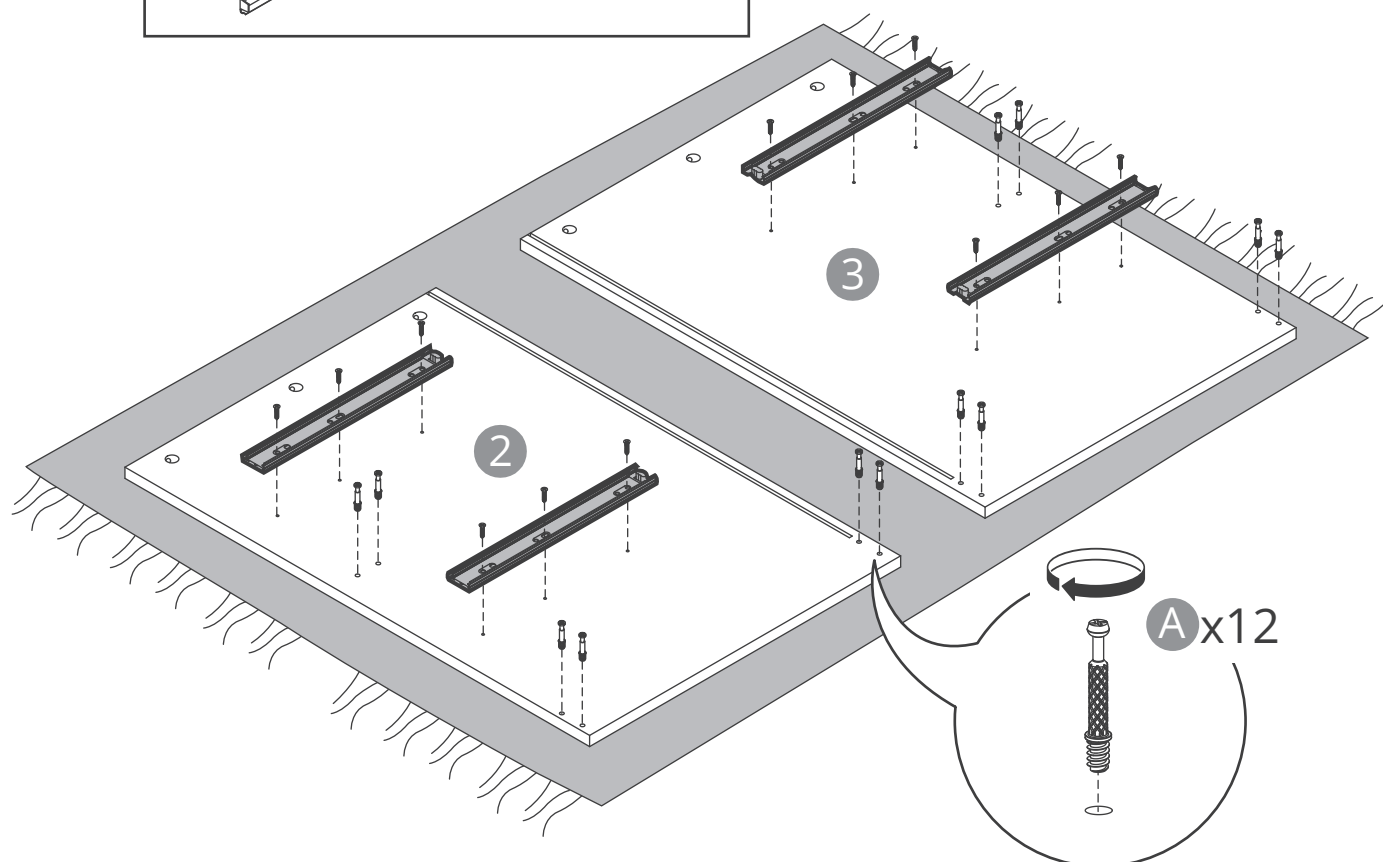


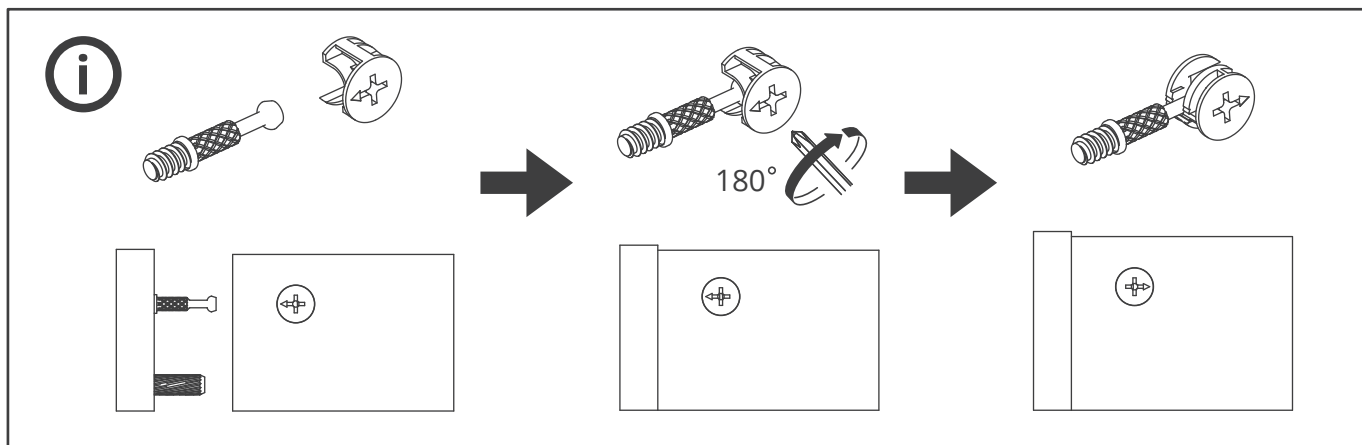

2



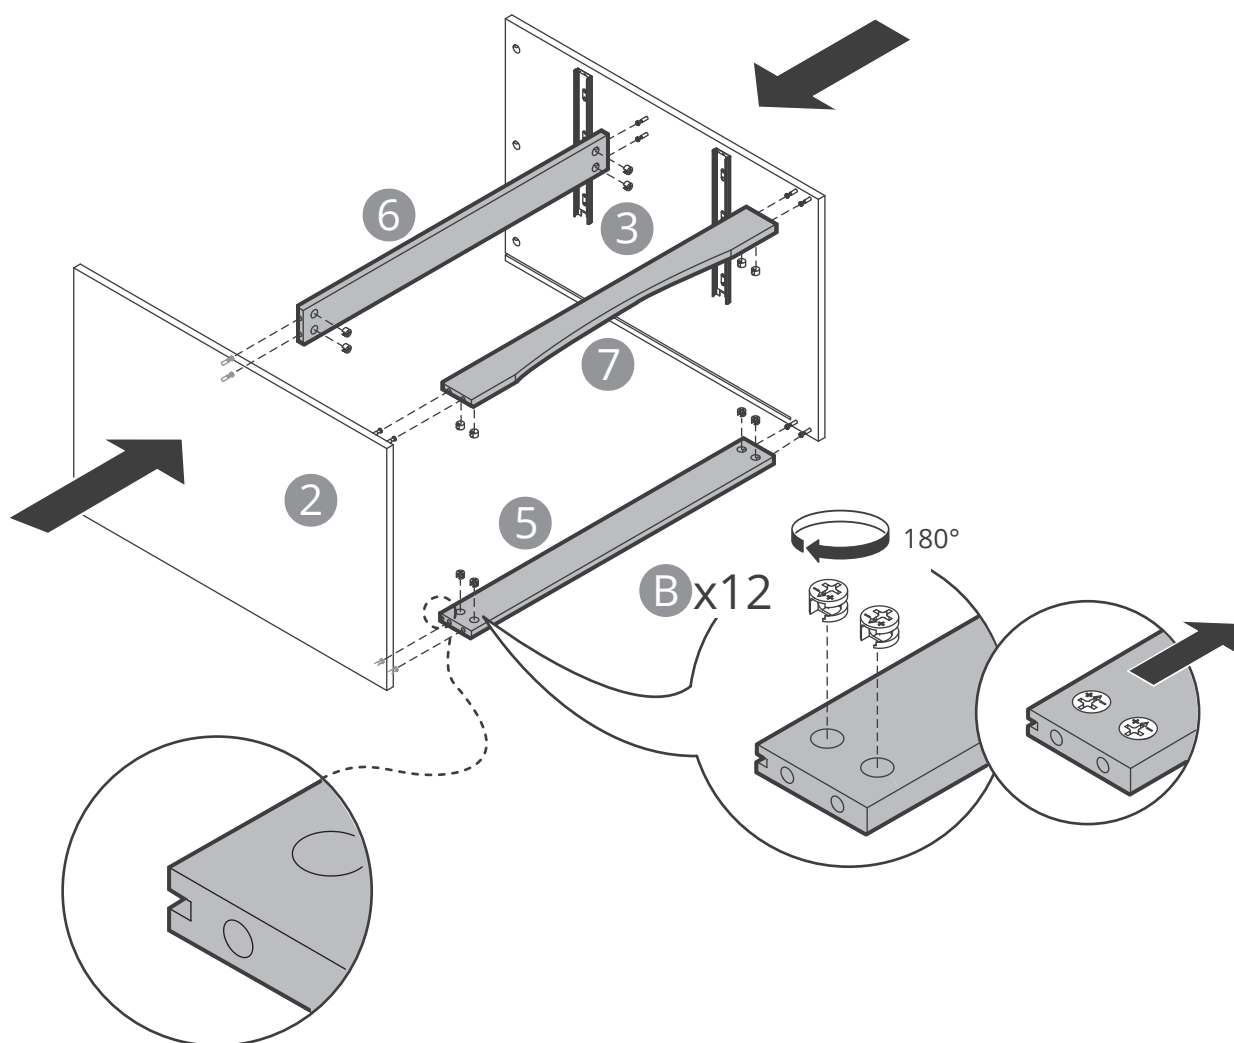


# 3

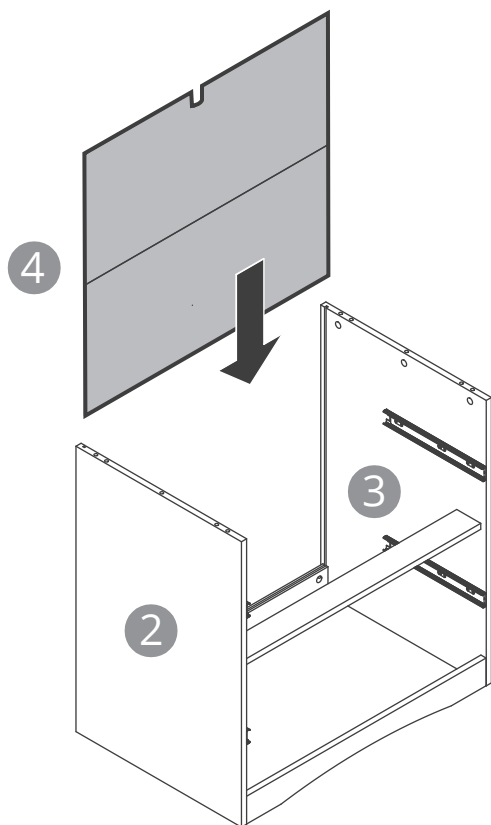


# 4


**i** Ensure the Anti-tip Bracket **J** is installed flush with Panel **1**.

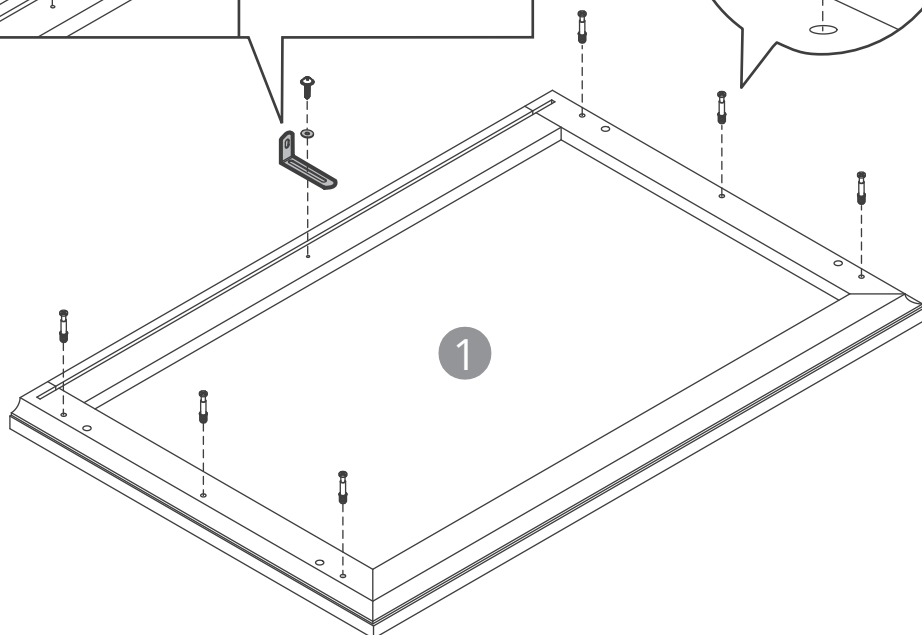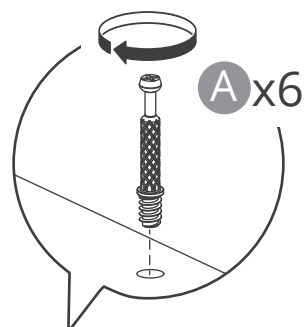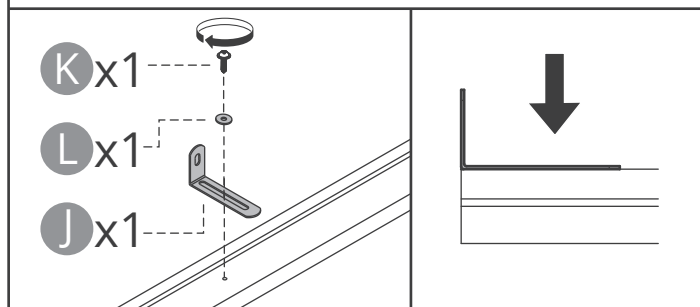

# 5

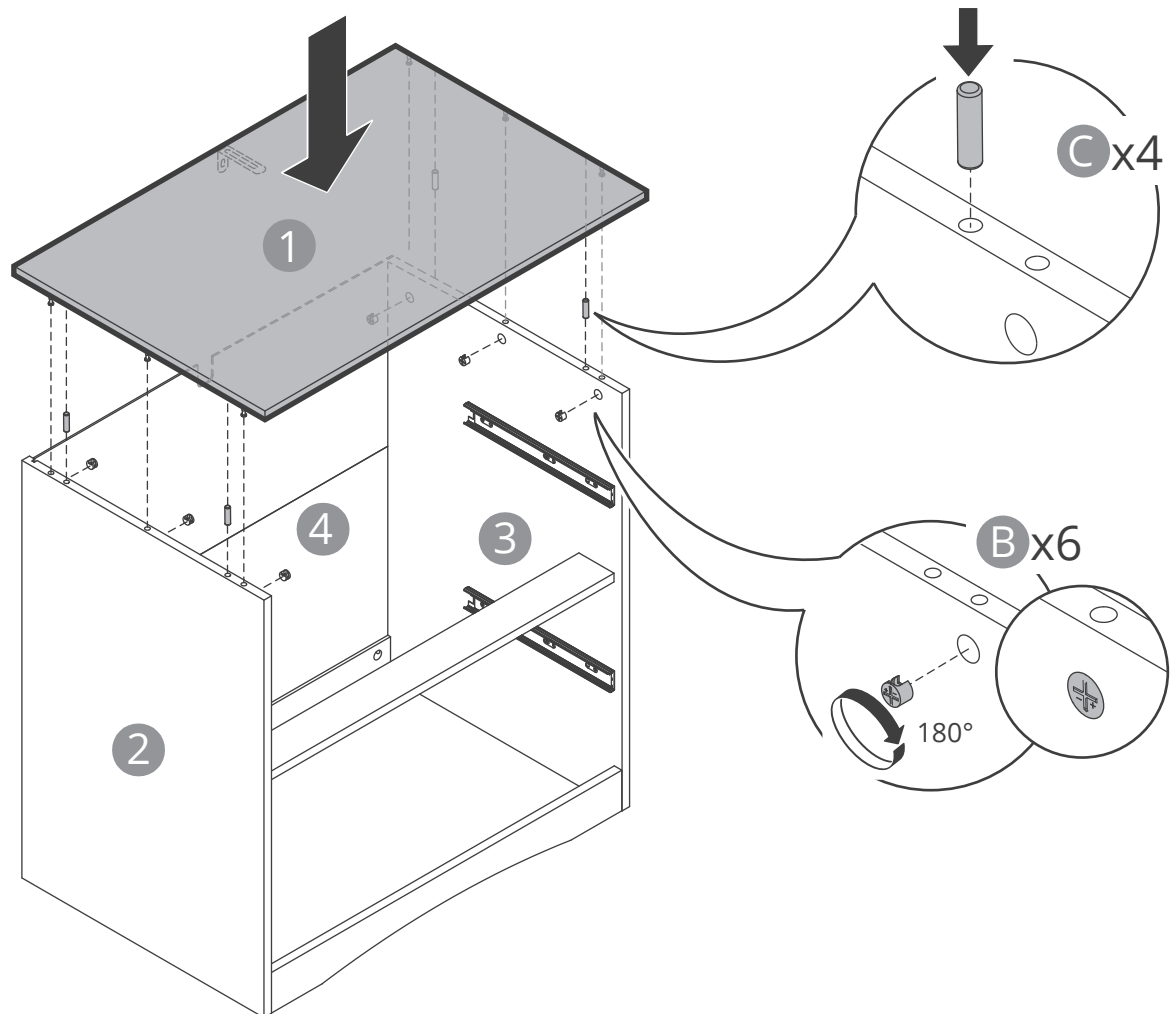

# 6

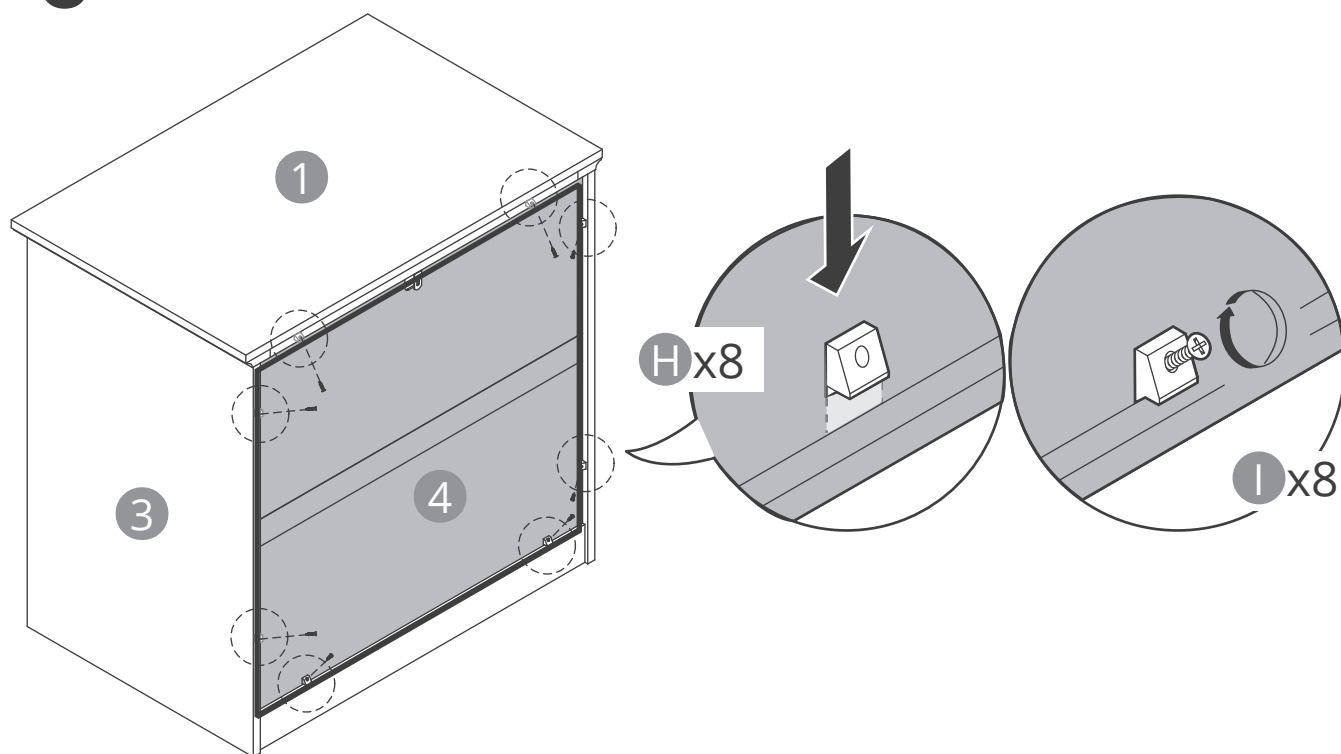


# 7




**WARNING:** Risk of serious injury or death from tip-over.  
You must secure this cabinet to the wall.


**1** Mark the mounting position on the wall.




**2** Drill a hole at the marked spot.

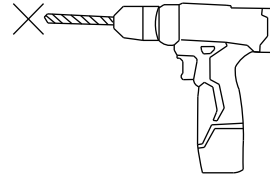


**3** Insert the wall anchor **(M)** into the hole. Gently tap it with a hammer until it is flush with the wall.

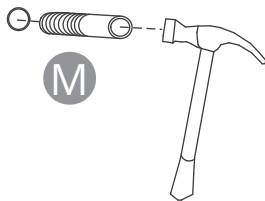

**4** Secure the cabinet by fastening the anti-tip bracket **(J)** to the wall with the screw **(M)** and washer **(L)**.

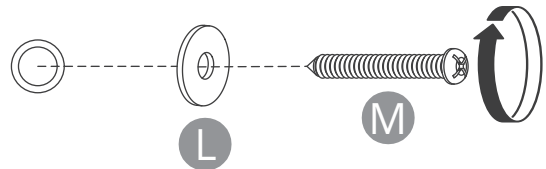


Wall

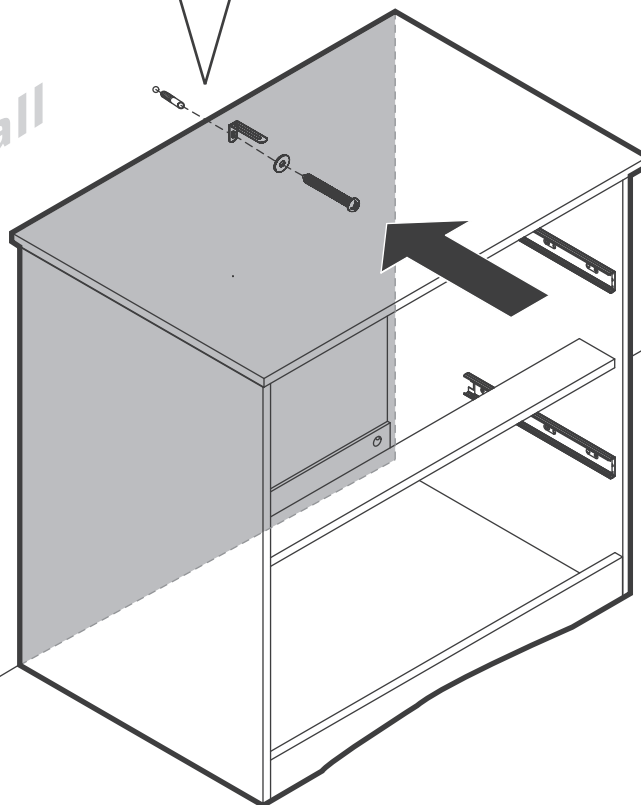




*Repeat steps 8-15 for 2 drawers.*

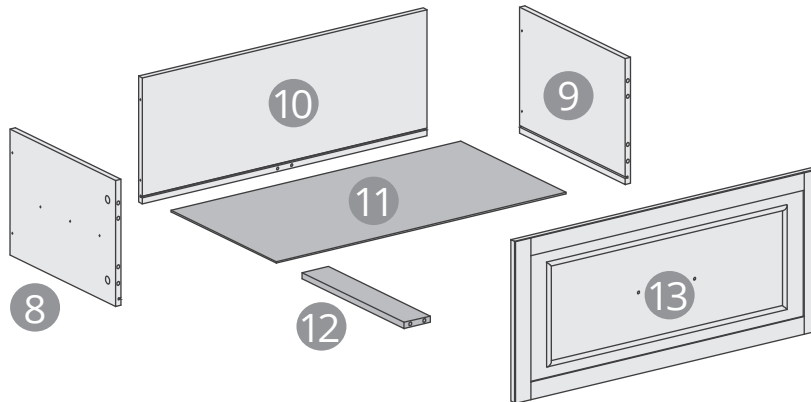


**8**

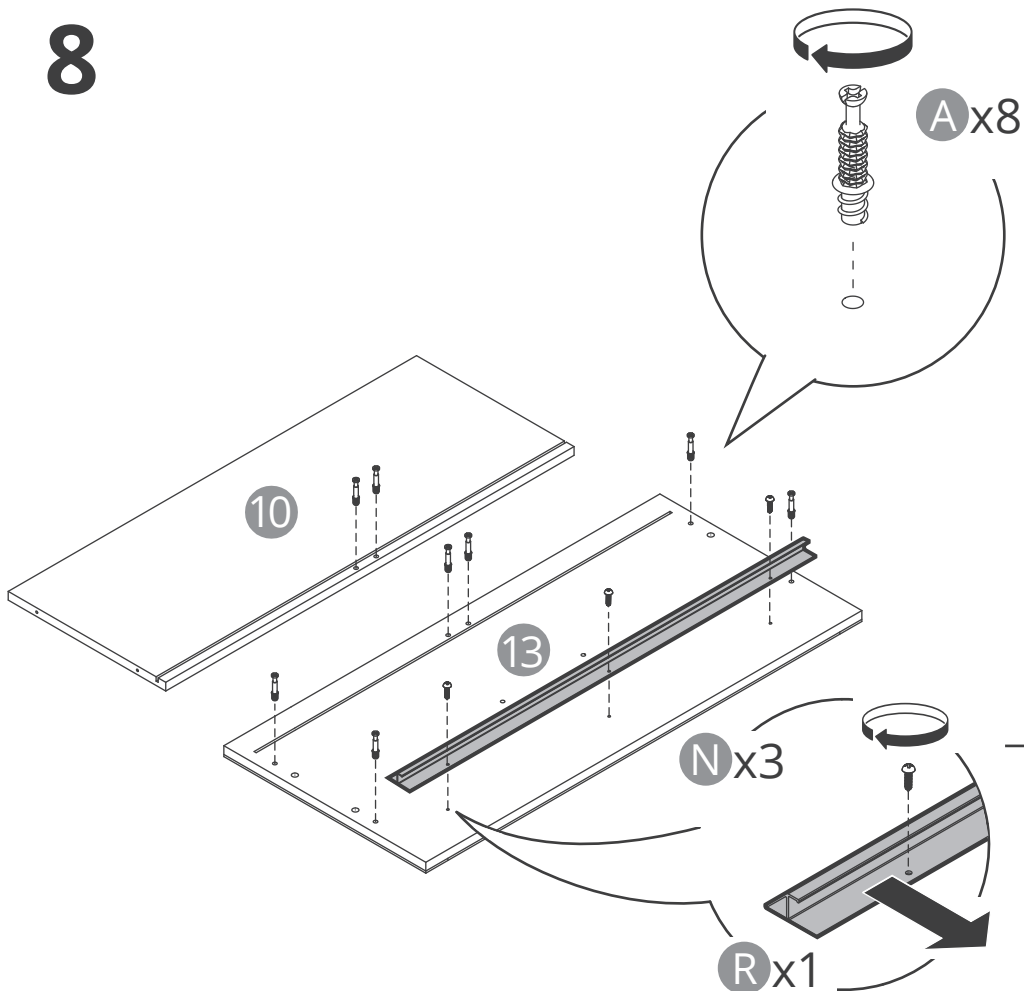


**Ensure the screw hole is in the bottom-right position.**

# 9

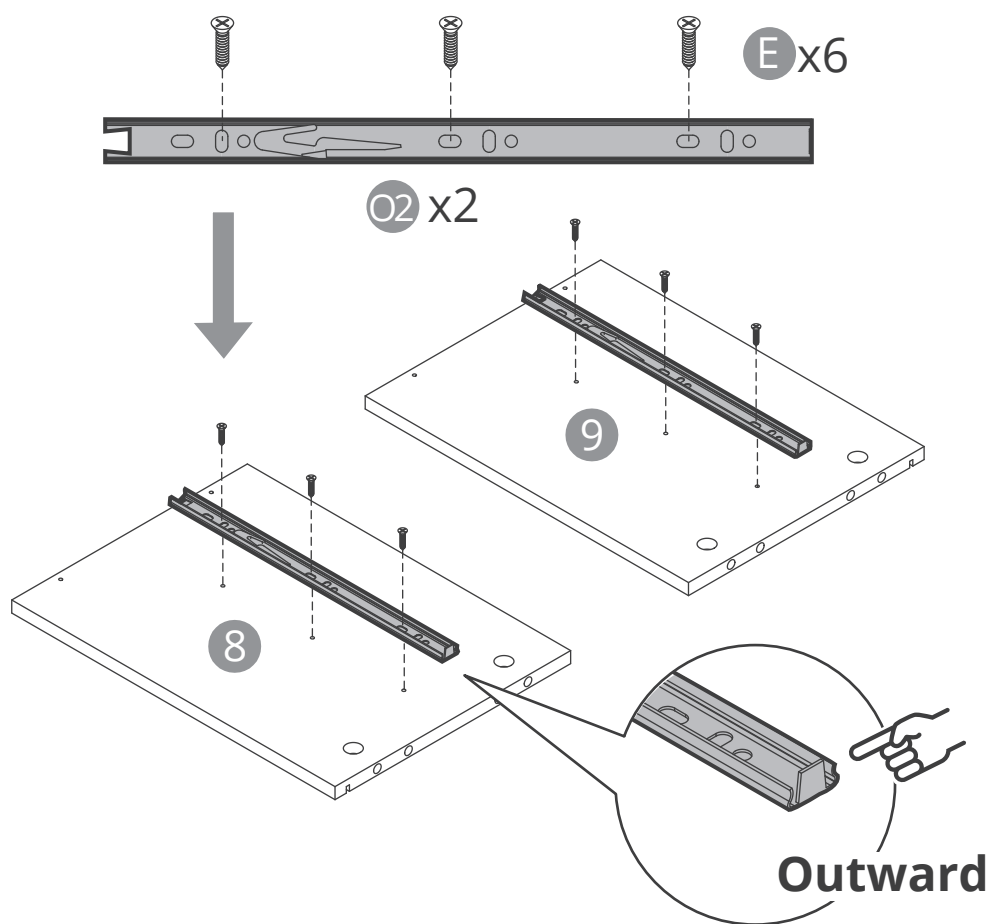


# 10

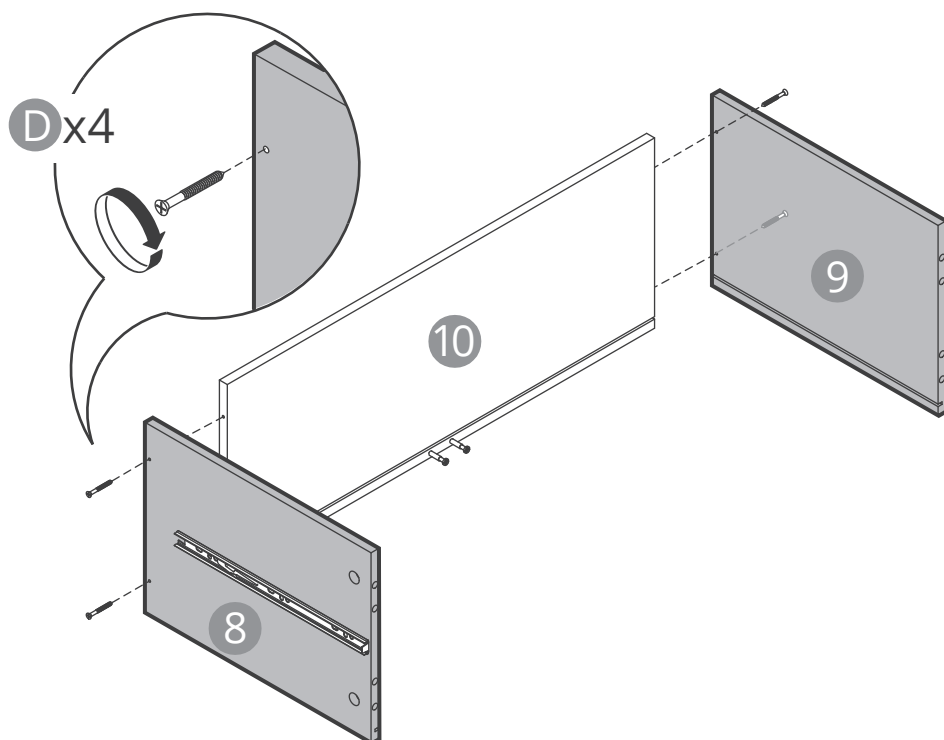





# 11

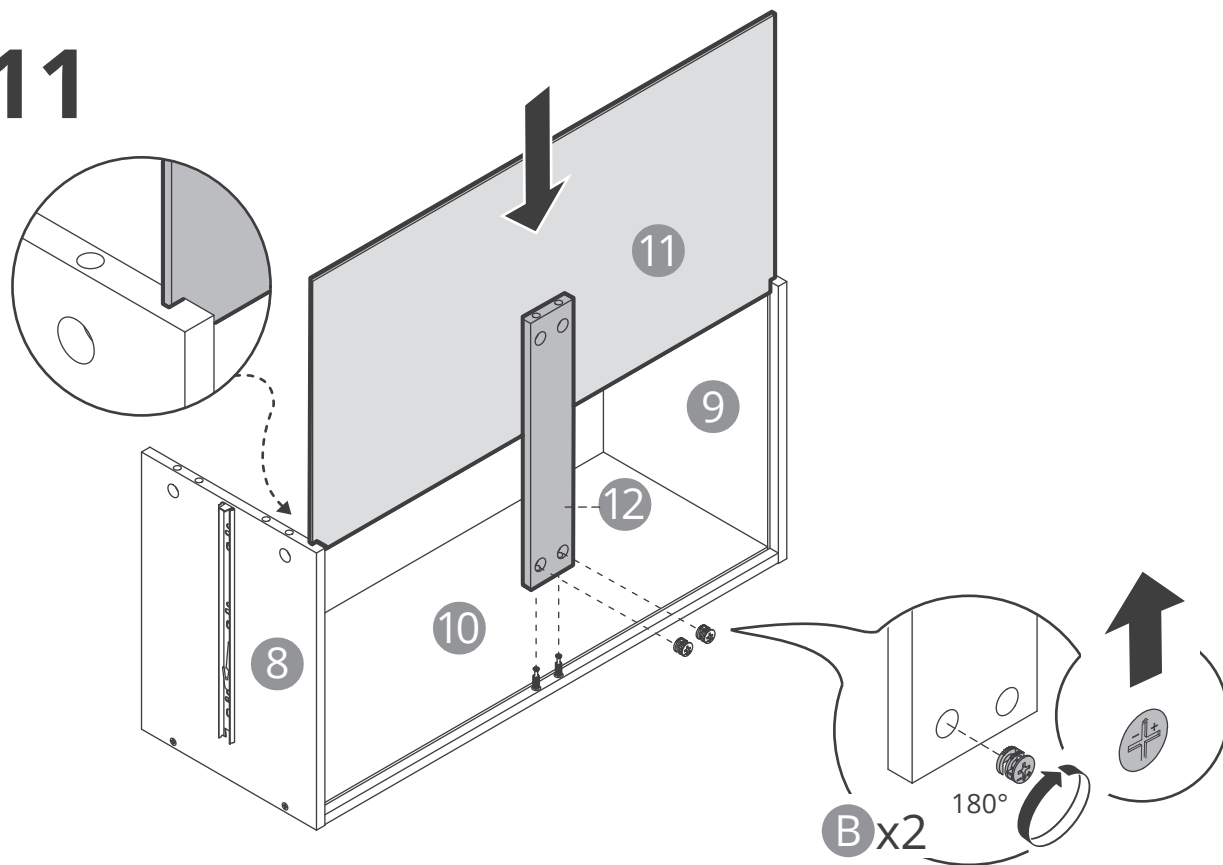


# 12

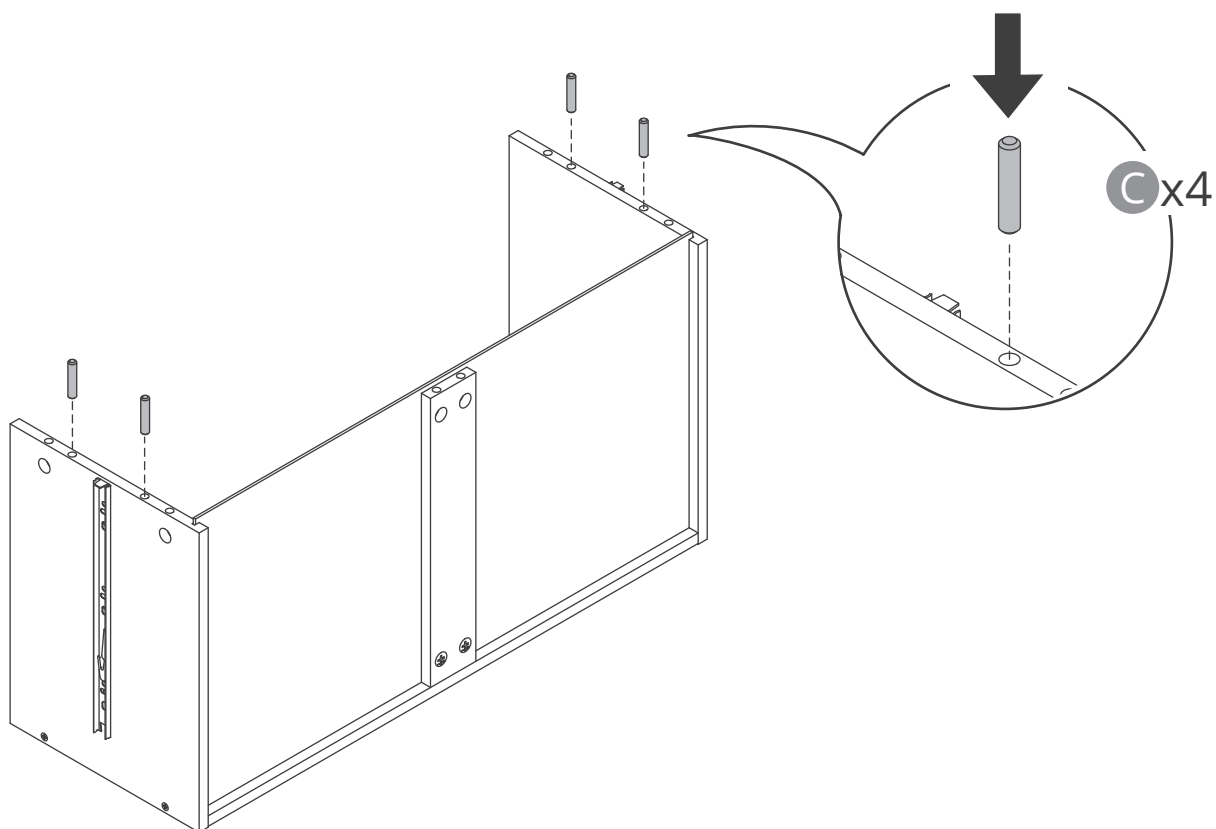



# 13

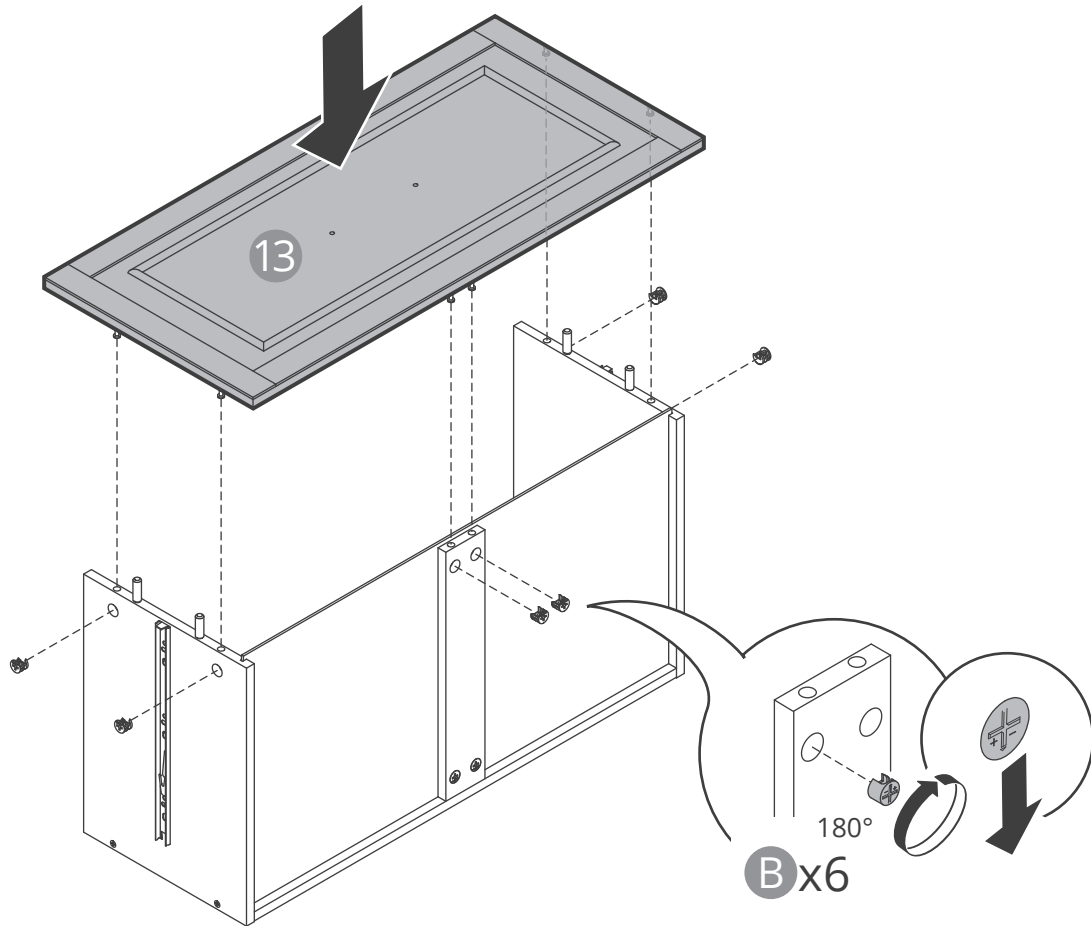

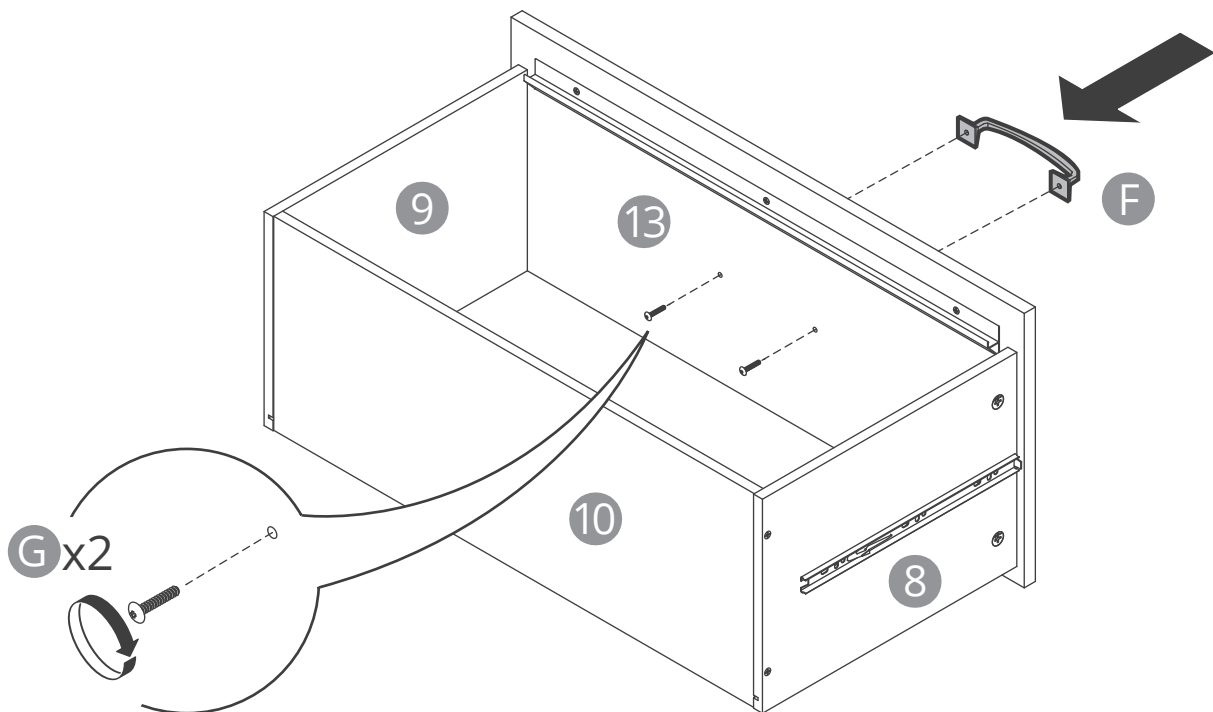


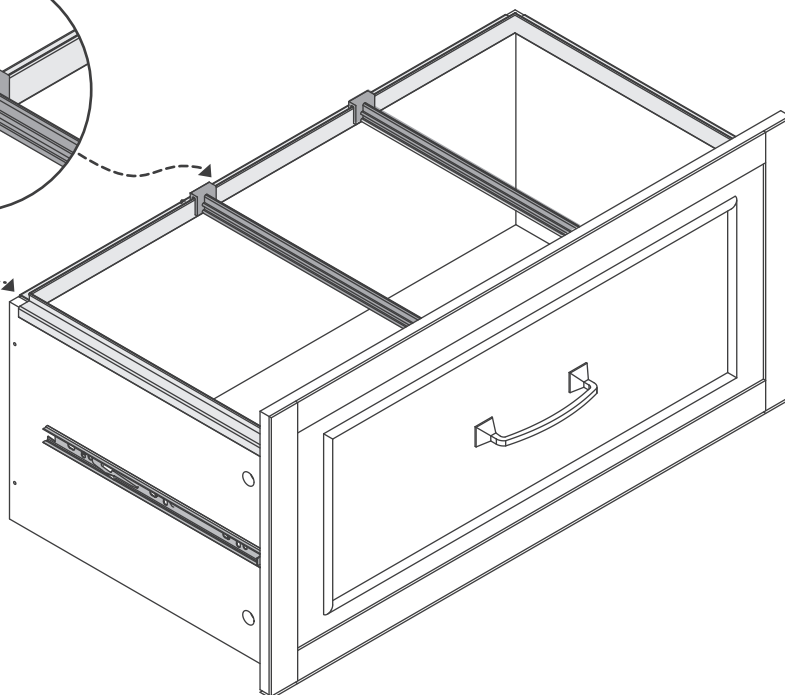
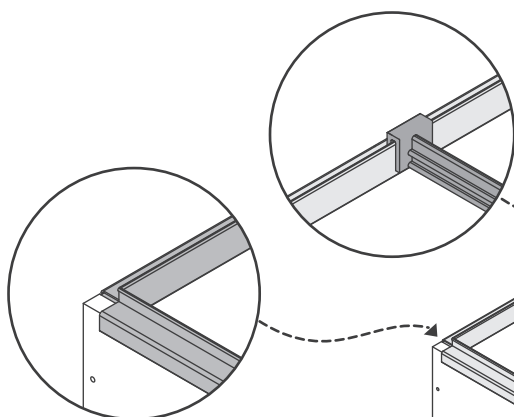
# 14

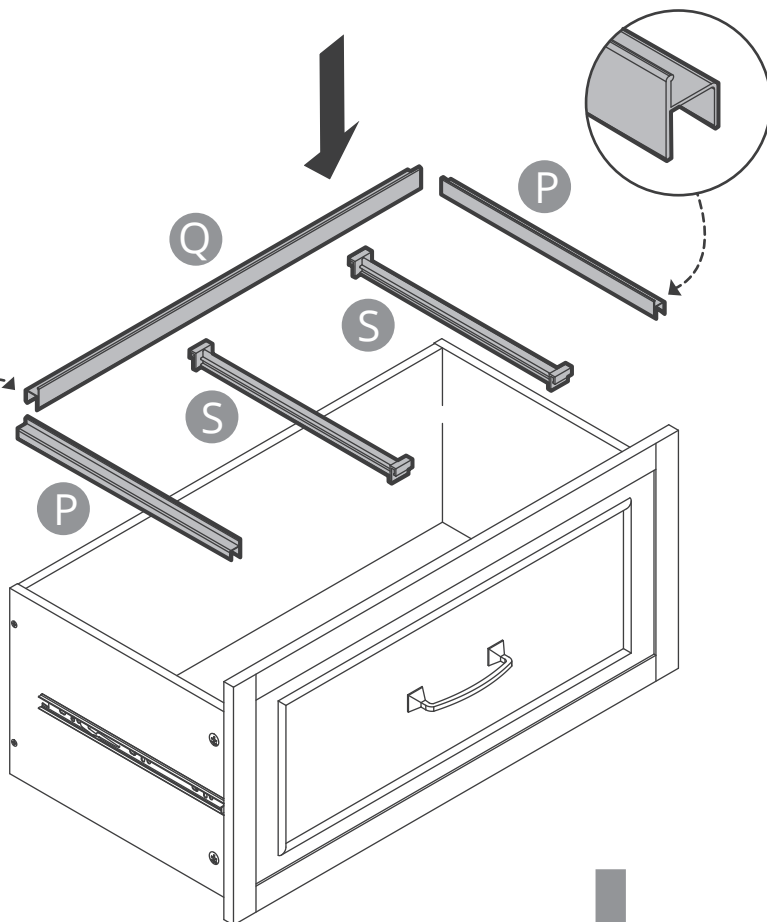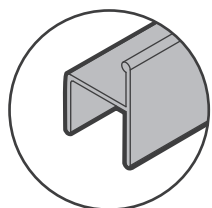


# 15



<b>P</b> x2

<b>Q</b> x1

<b>S</b> x2

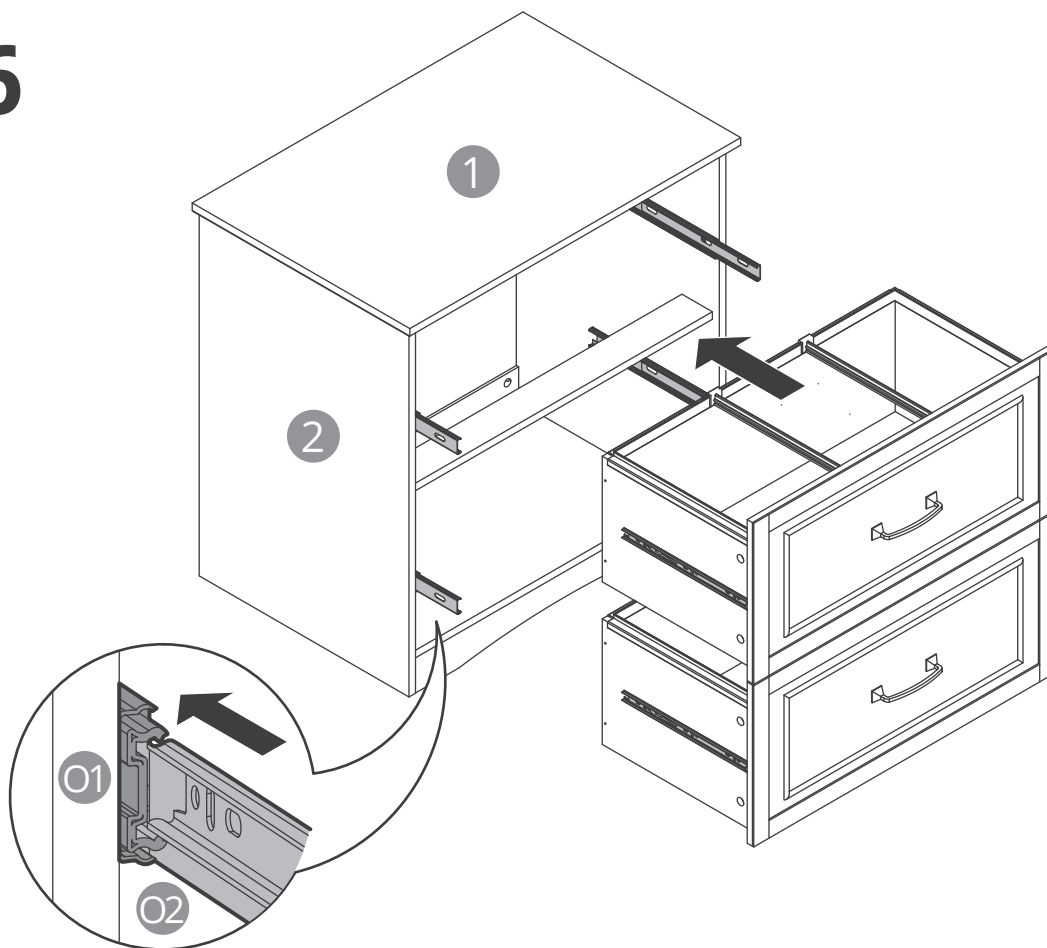


# 16



# 17

